



INSTALLATION INSTRUCTIONS

Product

7160-1085

GETAC K120 TABLET CRADLE

Revision

Rev. B

Form

INST-836

Printing Spec: PS-001

This instruction sheet is for the Getac K120 Tablet cradle only. For instructions on features, set-up, and operation of the computer, please refer to the manual provided by Getac with the computer.

This cradle is designed to be used with a variety of Gamber-Johnson mounting systems. Installation instructions for other Gamber-Johnson products are provided with each individual product.

This instruction sheet is for the following products:

Item No. 7160-1085-00 No RF (External Power Adapter sold separately)

Item No. 7160-1085-03 Tri RF (External Power Adapter sold separately)

Getac recommends using the following Power Adapters to power the computer. They can be ordered from Gamber-Johnson separately.

7300-0471 - Auto (12-32 Vdc input) - Available with the cradle as KIT 7170-0694

7300-0413 - Isolated (12-32 Vdc input)

7300-0412 - Isolated (20-60 Vdc input)

7300-0416 - Isolated (72-110 Vdc input)



**Product Mounting Disclaimer**

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2019 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868




FEATURE IDENTIFICATION

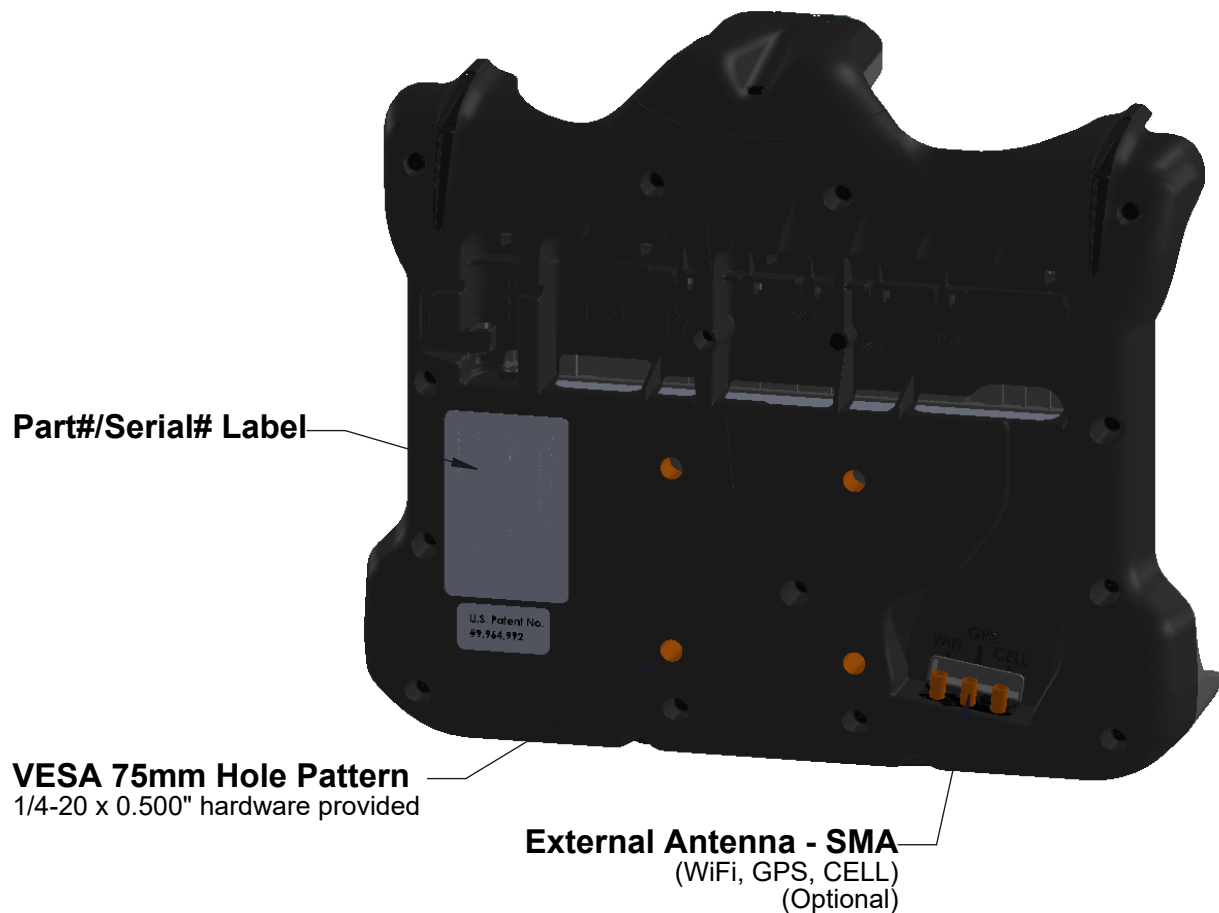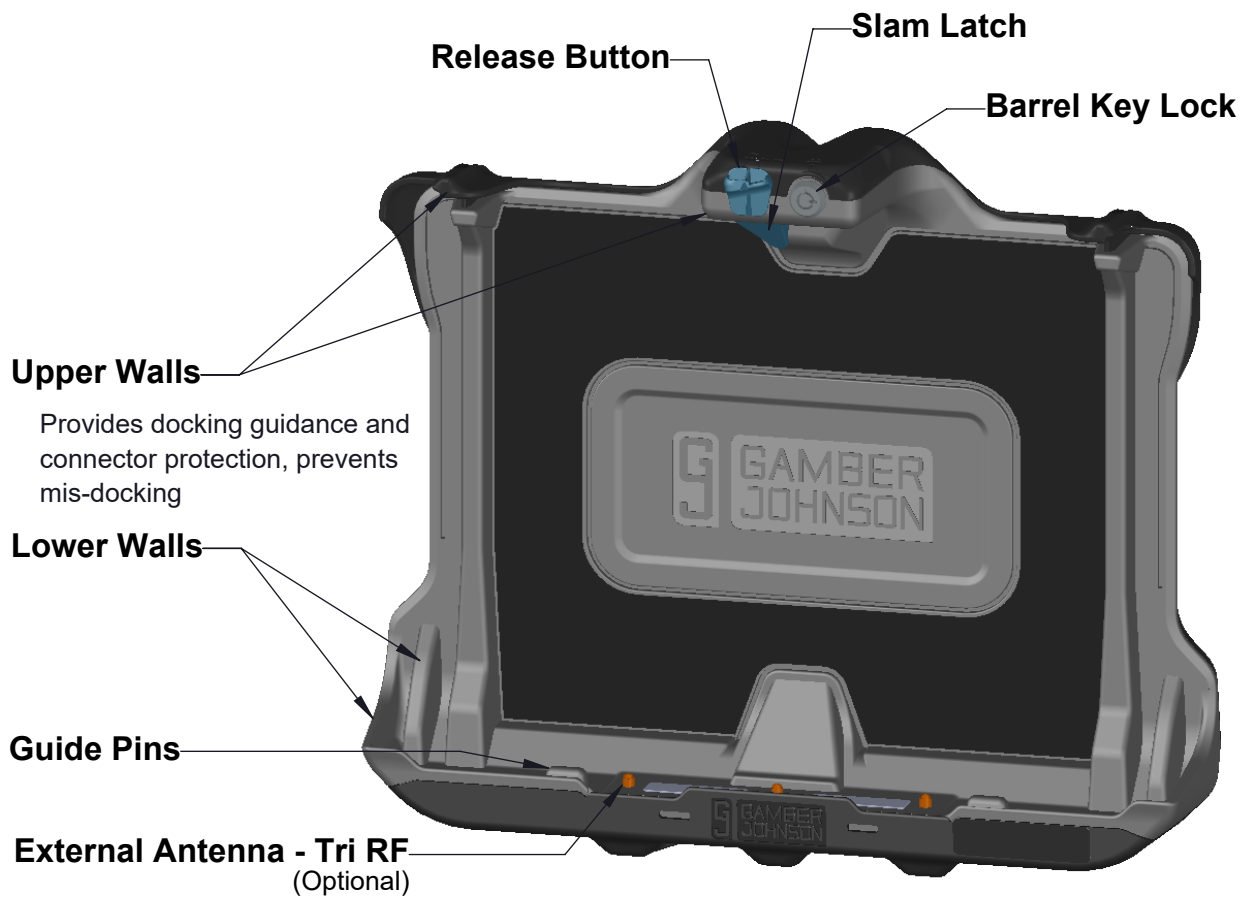

DOCKING AND UNDOCKING THE COMPUTER

OPERATION - DOCKING

1. Insert the bottom of the tablet into the bottom cavity of the dock. The walls on the dock will guide the tablet into place.
2. Rotate the top of the tablet into the dock, overcoming the resistance until the Release Button returns to the "Latched" position. The slam latch will come over the front of the tablet. There will also be an audible confirmation as the latch system springs downward.
3. Optional - With the dock in the "Latched" position, turn the lock to the "LOCKED" position (CW).

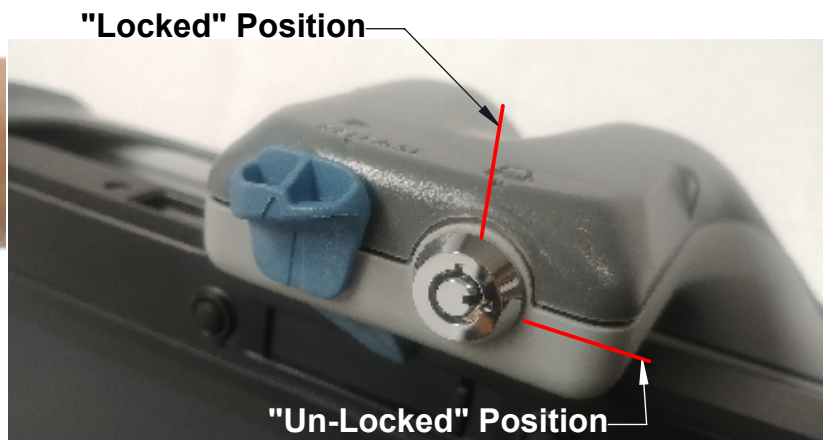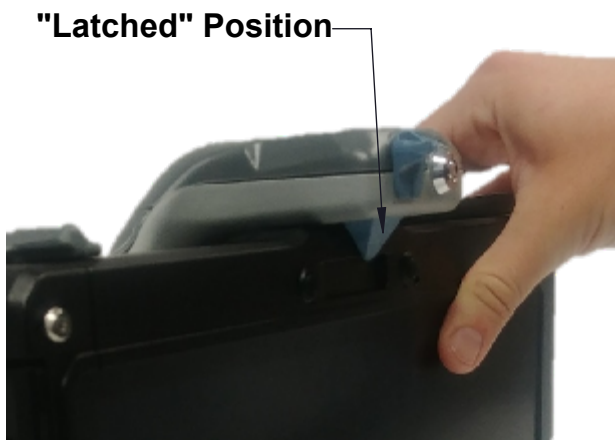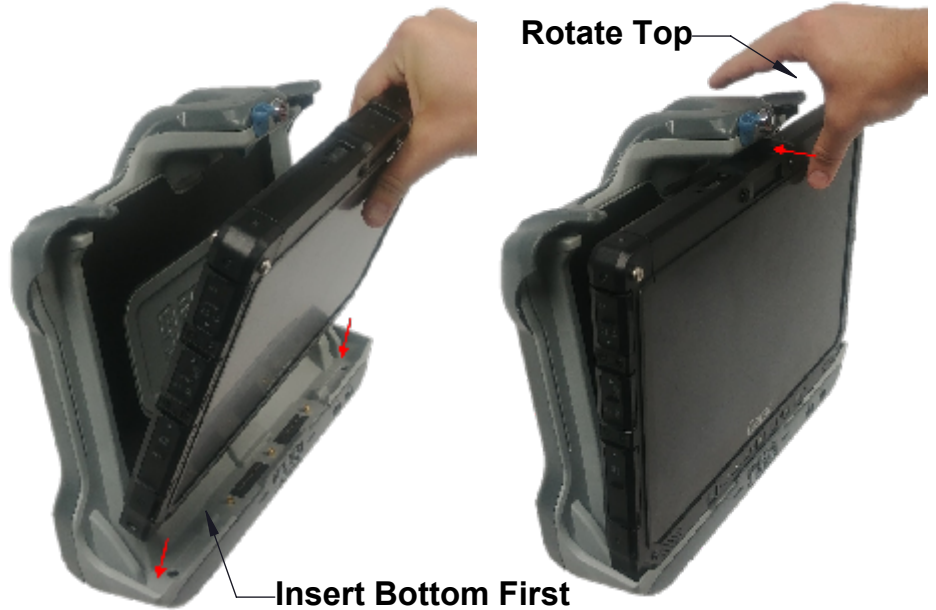

OPERATION - UNDOCKING

1. Turn the lock to the "UNLOCKED" position (CCW).
2. With your hand on the top of the tablet, push up on the blue Release Button until the computer is free to move forward. While the dock is "Un-Latched", pull the top of the tablet forward until it clears the dock. This can be done right or left handed.
3. Remove the computer by pulling it away from the dock.

