

INSTALLATION INSTRUCTIONS

Product 7160-0500, 7160-0502, 7160-0514, 7160-1160

Revision

Form

REV. G

INST-602

6" LOCKING SLIDE ARM

Printing Spec: PS-004



- •You must read and follow all of these installation instructions. Failure to follow all of these installation instructions may result in serious bodily injury or death.
- •Do not install or use this product in the area in which the airbag on the vehicle will be deployed if it is activated. The installer and user of this product is responsible for installing and using it outside the area in which an airbag will be deployed if activated. (See Product Mounting Disclaimer Below)
- •Keep these installation instructions with the product and readily available in the vehicle for future reference of other users of the product.
- Additional copies of the installation instructions can be obtained from Gamber-Johnson. If you need assistance or have any questions, call Gamber-Johnson at 1-800-456-6868.

Installation:


The 6" Locking Slide Arm mounts directly to a Center Upper Pole or other type of mounting equipment that contains a Gamber-Johnson swivel pattern cutout.

To mount on a Center Upper Pole or other type of mounting equipment that contains a Gamber-Johnson swivel pattern cutout, set the arm on the mount so the 1/4-20unc studs protrude through the curved cutouts. Two studs should protrude through one of the cutouts and one stud should protrude through the opposite cutout. Attach with the flat washers and lock nuts that are supplied. (See Figure 1.)

Product Mounting Disclaimer


Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2018 Gamber-Johnson, LLC

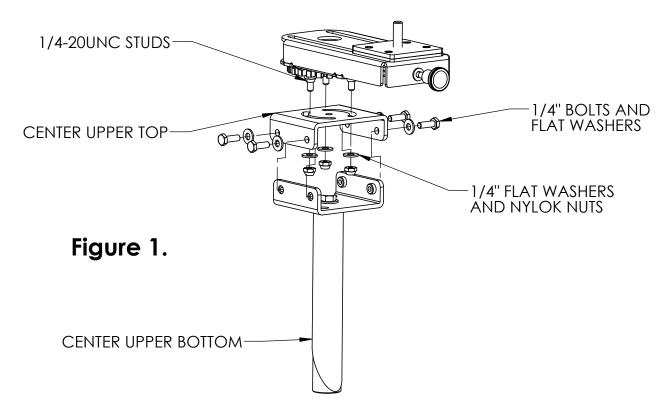

Attaching an Angled Low Swivel to the 6" Locking Arm


To attach an Angled Low Swivel, remove the Nylok Nut, Steel Bearing Backup Plate, the Top Nylon Bearing, and the supplied 0-90° Clevis from the assembly. Place the Angled Low Swivel onto the 3/8" stud so it rests on the Bottom Nylon Bearing. Attach the Angled Low Swivel in place with the Top Nylon Bearing, Steel Bearing Backup Plate, and the Nylock Nut that were removed when you first removed the bearings from the original clevis configuration. Tighten the Nylok Nut until the desired friction is obtained for the rotation of the Angled Low Swivel. (See Figure 2)

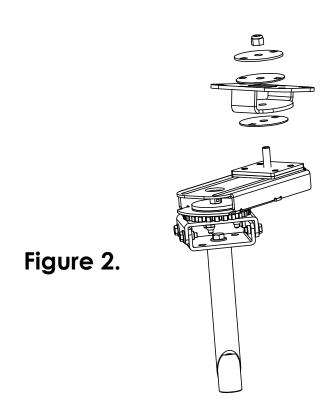

How to use the 6" Locking Slide Arm:

The 6" Locking Slide Arm is designed to accommodate four motions of adjustment. The first being a 360 degree swivel that is actuated by the front handle. Pulling out on the handle releases the gear latch located in the base and allows the mount to swivel. To latch the arm in place, position the arm in the desired location and release the spring loaded handle. Wiggle the arm back and forth to make sure the handle has engaged the teeth on the gear.

The second motion is the slide. To activate the slide, tighten the 1/4" flat washers and nylok nuts (accessable through the underside of the assembly) so they are snug but not locked down. The third motion is the clevis 360° swivel. The fourth motion is the Clevis tilt. 7160-0500 comes with a 0-90° tilt Clevis. The 7160-0502 comes with an Angled Low Swivel and does not tilt.

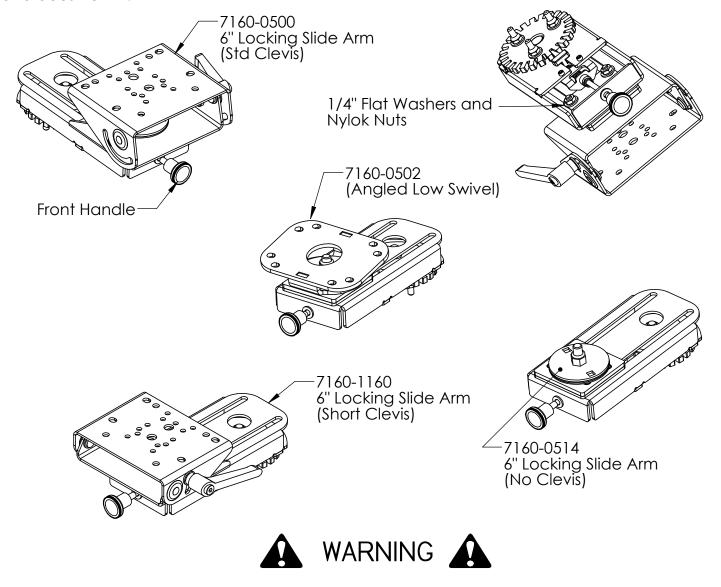

- •This product should not be positioned in the area where the airbag will be deployed if it is activated. DO NOT position the equipment in front of an airbag. Equipment positioned in front of an airbag can cause serious injury or death if an airbag was activated, such as in an accident.
- •If installation of the equipment requires that the equipment be placed in front of an airbag, deactivate the airbag in the vehicle so it cannot be activated in an accident. In order to secure permission for deactivating the airbag in these circumstances, contact the National Highway Traffic Safety Administration at 1-800-424-9393 to gain permission to do so. If you have any questions or need assistance, call Gamber-Johnson at 1-800-456-6868.

Hole Template
Please use this template below when drilling to mount. Ensure that when printing it is done to a 1:1 scale.

