



Very Well Connected™

INSTALLATION INSTRUCTIONS

Product**7160-0881****DELL 12" TABLET CRADLE****Revision**

Rev. A

Form

INST-749


Printing Spec: PS-001

This instruction sheet is for the Dell 12" Tablet cradle only. For instructions on features, set-up, and operation of the computer, please refer to the manual provided by Dell with the computer.

This cradle is designed to be used with a variety of Gamber-Johnson mounting systems. Installation instructions for other Gamber-Johnson products are provided with each individual product.

This instruction sheet is for the following products:

Item No. 7160-0881-00 No RF

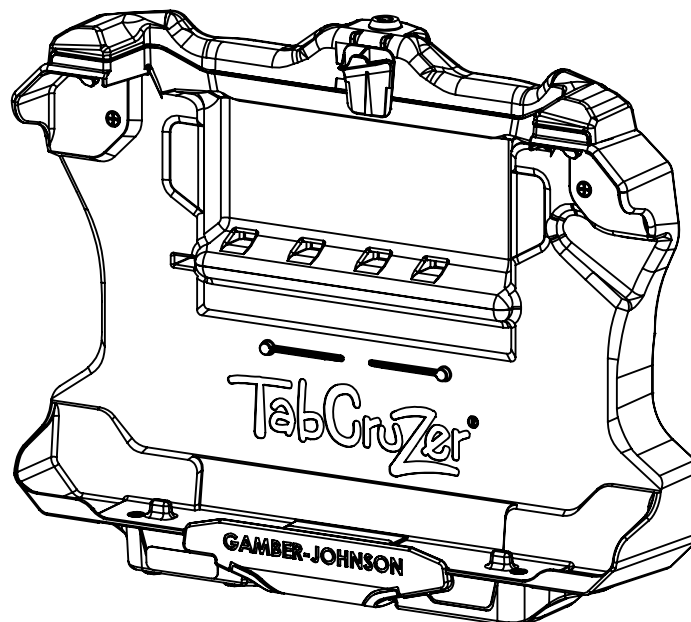




Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2017 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

DELL 12" TABLET DOCK FEATURE IDENTIFICATION

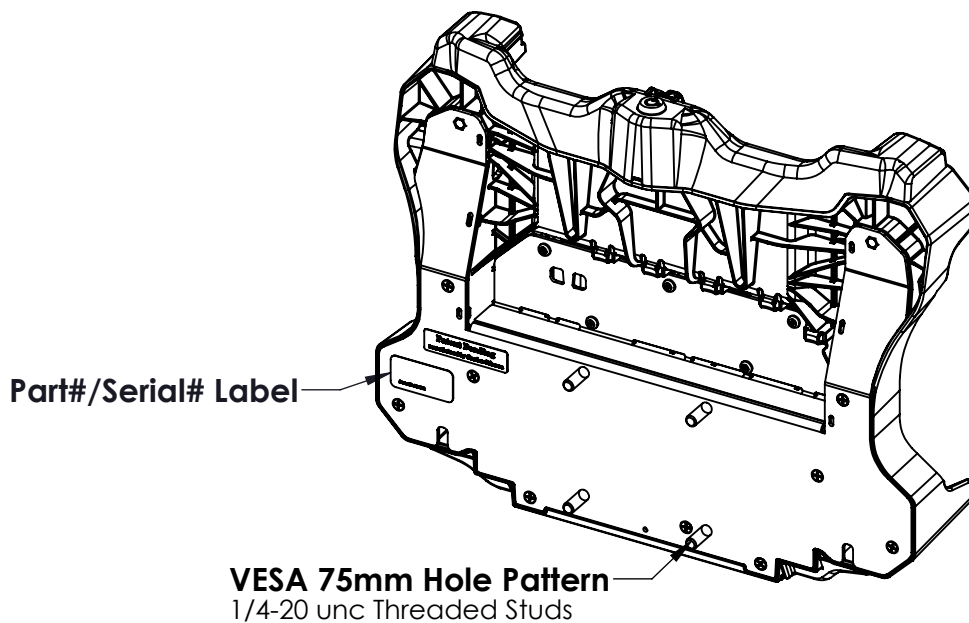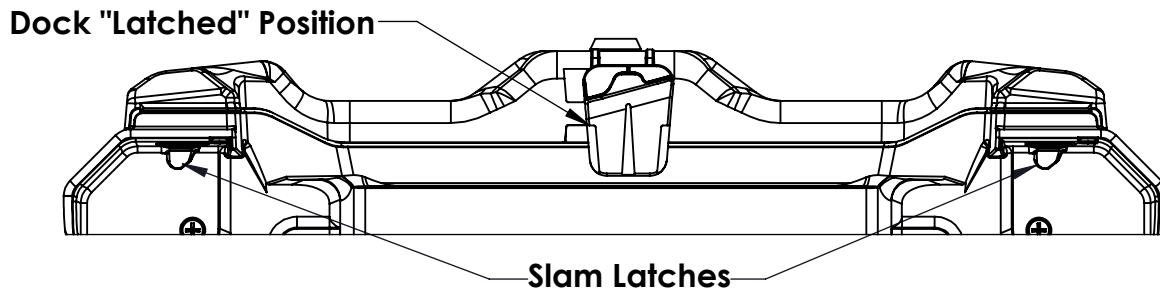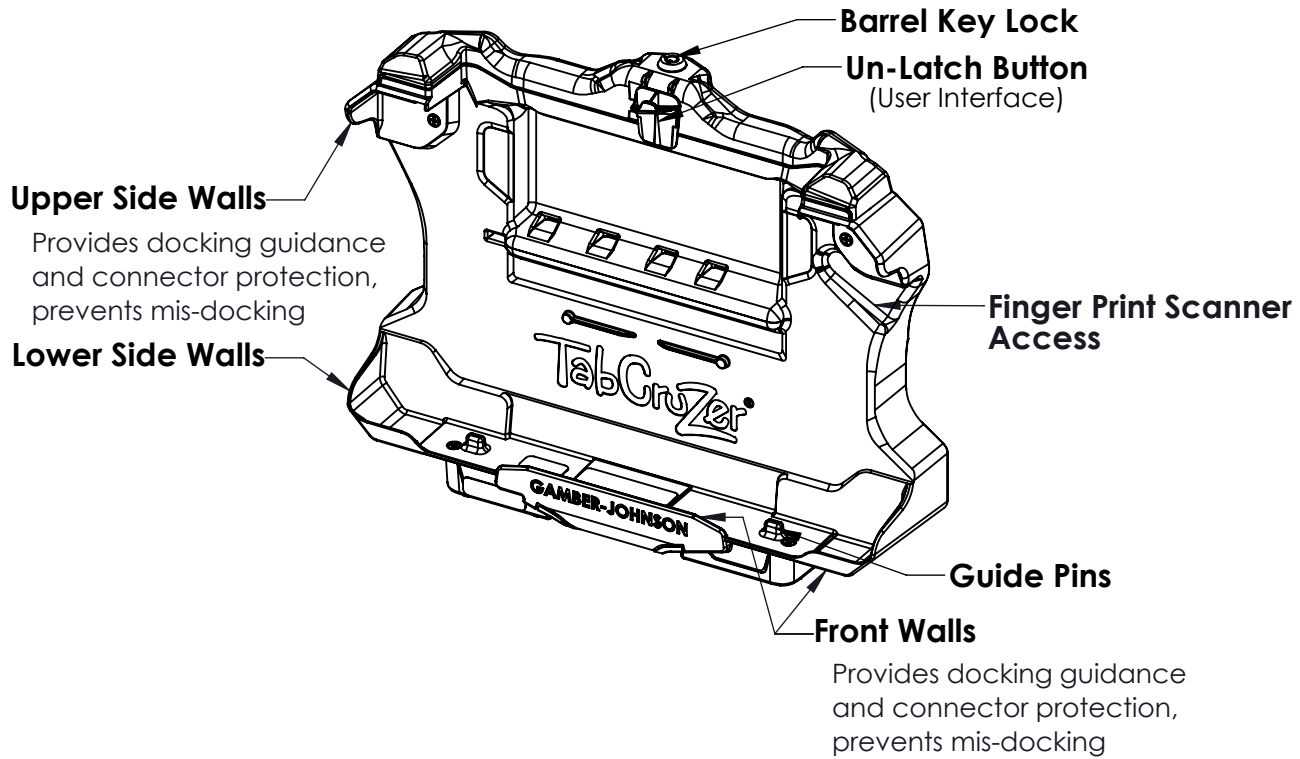

DOCKING AND UNDOCKING THE COMPUTER

TO DOCK THE COMPUTER

1. Insert the bottom of the tablet into the bottom cavity of the cradle. The walls on the cradle will guide the tablet into place as the top of the tablet is angled outside of the cradle.
2. Rotate the top of the tablet into the cradle, overcoming the resistance until the Latch Button returns to the "Latched" position. The grooves on the button line up with the lower groove on the cradle. There will also be an audible confirmation as the latch system springs downward.
3. With the cradle in the "Latched" position, turn the lock to the "LOCKED" position (Clockwise).



TO UNDOCK THE COMPUTER

1. Turn the lock to the "UNLOCKED" position (Counter Clockwise).
2. With your hand on the top of the tablet, use the thumb to push up on the blue button until the cradle is in the "Un-Latched" position and pull the top of the tablet forward. The grooves on the button now line up with the upper groove on the cradle (or higher).
3. After the tablet clears the latching system, remove the tablet by pulling it away from the cradle.

