

A. FEATURES

1. Top Latch Ridge
2. Cover
3. Pogo Pins
4. Hinge
5. Rubber Keys
6. Touchpad
7. Mouse Buttons
8. Built-in Kickstand
9. USB-C Power Port
10. USB 2.0 Input Port
11. Part Number Label



C. IMPORTANT INFORMATION

- Compatible with the Zebra ET4X Tablet only
- Temperature Range:
 - Operating -20°C to 50°C
 - Storage -40°C to 85°C
- IP54, FCC, CE, RoHS, REACH, C-Tick compliant
- This product is NOT designed to be vehicle mounted.
- Connect power cable to USB-C Power Port (Feature 9)
- Connect a flash drive or other digital data device to the USB 2.0 port on the side of the keyboard (Feature 10)
- Reference the Part Number Label for product information regarding any service needs (Feature 11)

C. HOW TO DOCK & UNDOCK THE TABLET

Lift the Cover



Insert Tablet into tray with Pogo Pins



Snap Top Latch Ridge over top of Tablet



On both sides, push up on Top Latch Ridge & pull forward on back corner of Tablet



Thank you for choosing Gamber-Johnson for your keyboard needs. To learn more, visit gamberjohnson.com and search part number 7160-1449.

C.a. HOW TO DOCK

Lift the Cover



Insert Tablet into tray with Pogo Pins



C.b. UNDOCKING THE TABLET

On both sides, push up on Top Latch Ridge & pull forward on back corner of Tablet



Thank you for choosing Gamber-Johnson for your keyboard needs. To learn more, visit gamberjohnson.com and search part number 7160-1449.



- Open the Cover. Locate the bottom of the tablet in the Bottom Tablet Tray, connecting the Pogo Pin Connector. Rotate the tablet back into the Cover, snapping it over the top of the tablet.
- Place thumbs on Release Latch, while placing fingers on the back corners of the tablet. Push up on the Release latch while pulling the tablet forward. Once the tablet top is free, remove the tablet completely.



