



INSTALLATION INSTRUCTIONS

Product

7160-1629

PRINTEK - FP541 PRINTER MOUNT

Revision

Rev A

Form



INST-1030

Printing Spec: PS-001

This instruction sheet is for the 7160-1629 printer mount only. For instructions on features, set-up, and operation of the Printek FP541 printer, please refer to the manual provided by Printek for the printer.

Attaching printer to the mount:

1. Attach the top plate to the printer with the (4) #8-32 pan head machine screws found in hardware bag 7120-0987.
2. Attach the top plate (with printer attached) to the base inserting the rear tabs through the top plate openings then rotating the top plate downward onto the base.
3. Latch the top plate to the base with the draw latch.

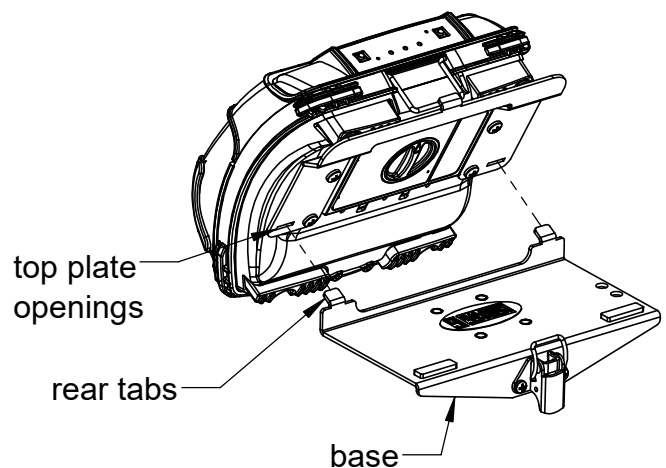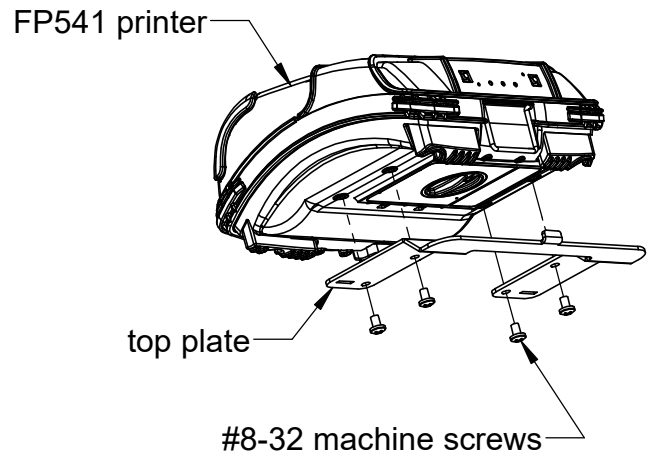

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2021 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

Attaching the printer mount to a vehicle:


1. The printer mount is designed to attach to a Gamber-Johnson motion attachment with (4) #10-32 studs pressed into the base plate. The studs are positioned in the AMP's (30mm x 38mm) hole pattern.

2. Attach the motion attachment to the base with the (4) #10-32 washers and lock nuts provided in hardware bag 7120-0987.

Gamber Motion Attachments:

1. 7160-1466 or 7160-1410 are examples of mounts that will hold the printer mount.

2. 7160-1410 is shown in the exploded view at the right and 7160-1466 are shown below in the pictures of the printer mounted on a forklift.

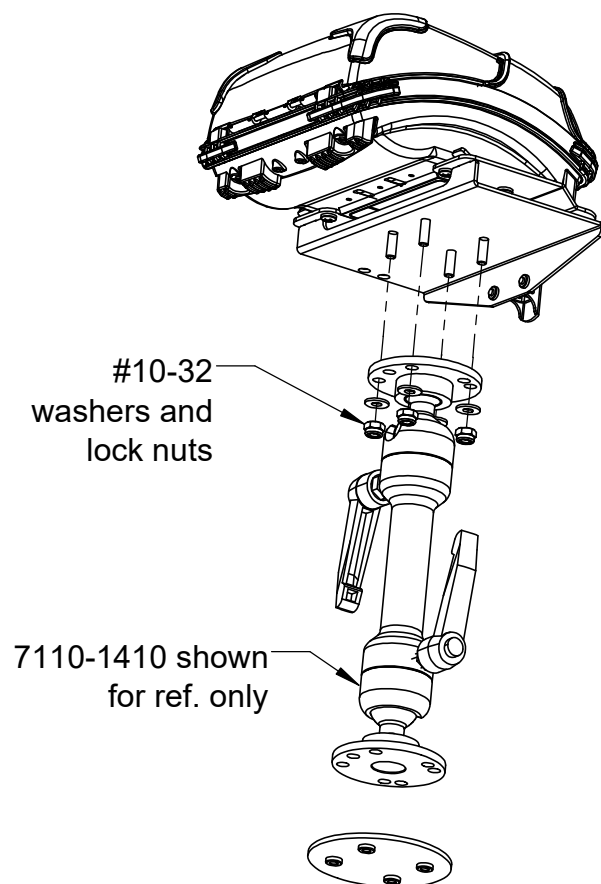

7110-1466 shown
for ref. only

