



INSTALLATION INSTRUCTIONS

Product

7160-1856

ZEBRA TC22 / TC27 CRADLE

Revision


Rev A

Form

INST-1133

Printing Spec: PS-001

This instruction sheet is for the Zebra TC22/TC27 cradle only. The cradle is designed to hold a Zebra TC22 or TC27 handheld computer only. The 7160-1856 will not work with older TC2x devices. For instructions on features, set-up, and operation of the Zebra TC22/TC27 handheld computer, please refer to the manual provided by Zebra with the computer.

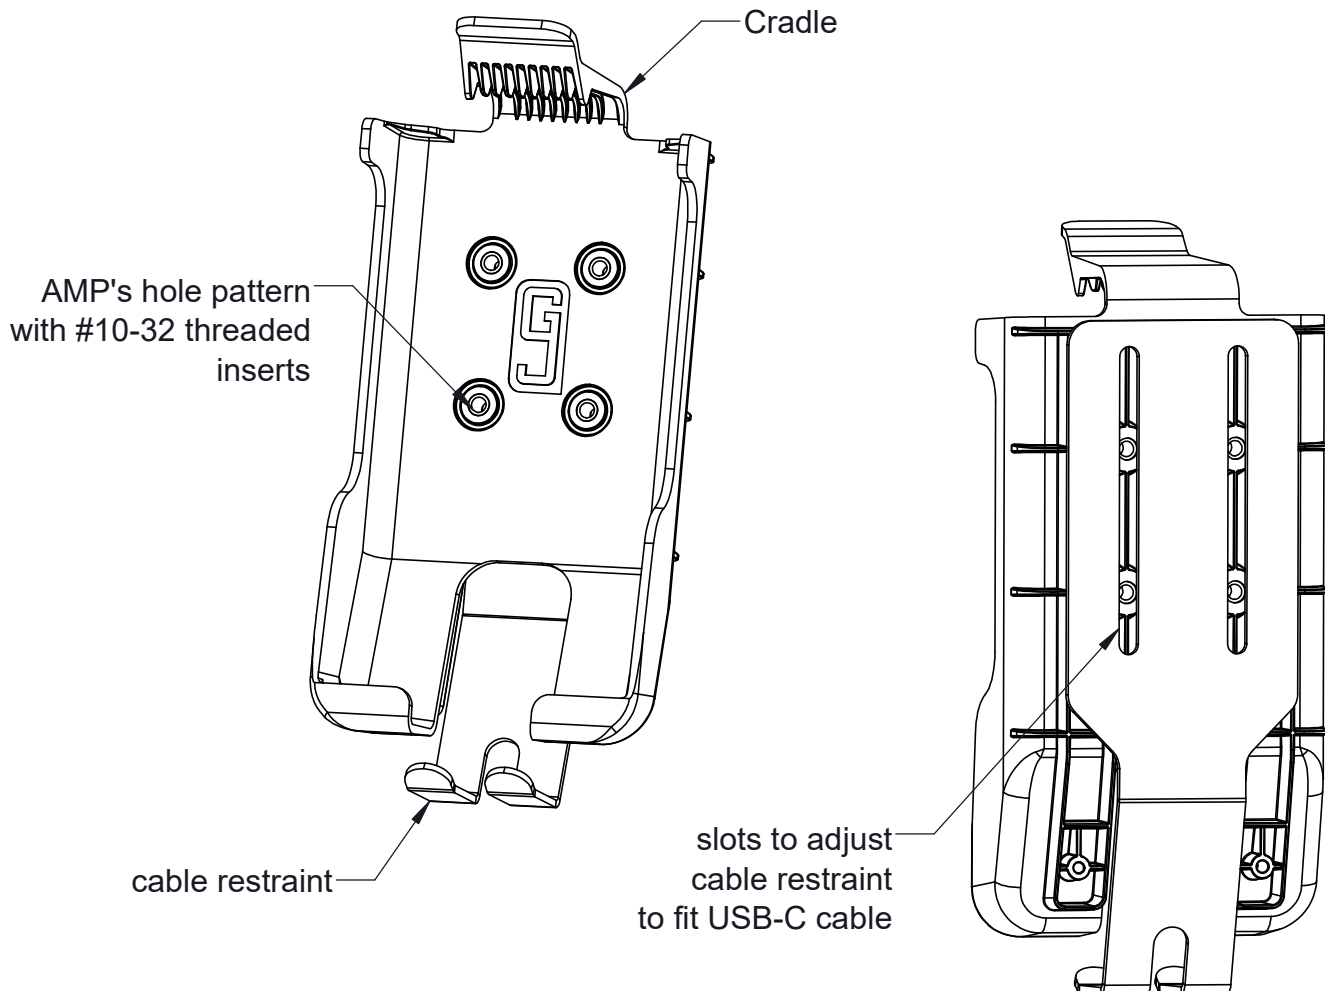

Product Mounting Disclaimer


Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2023 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

Attaching the cradle to a mount:

1. Attach a mount like the Gamber-Johnson 7160-1410 (shown below) to the cradle with the 3/4" long #10 machine screws, split lock and flat washers from the hardware bag supplied with the cradle. Leave the screws loose so the cable restraint can be adjusted up and down.
2. Adjust the cable restraint so it is lightly touching the USB-C power cable (supplied by others) when inserted into the bottom of the TC22/TC27 handheld computer. The cable should not bind with the cable restraint when inserting or removing the computer from the cradle.
3. Tighten the screws inserted in step 1 to hold the cradle with the cable restraint in place on the end of the mount.

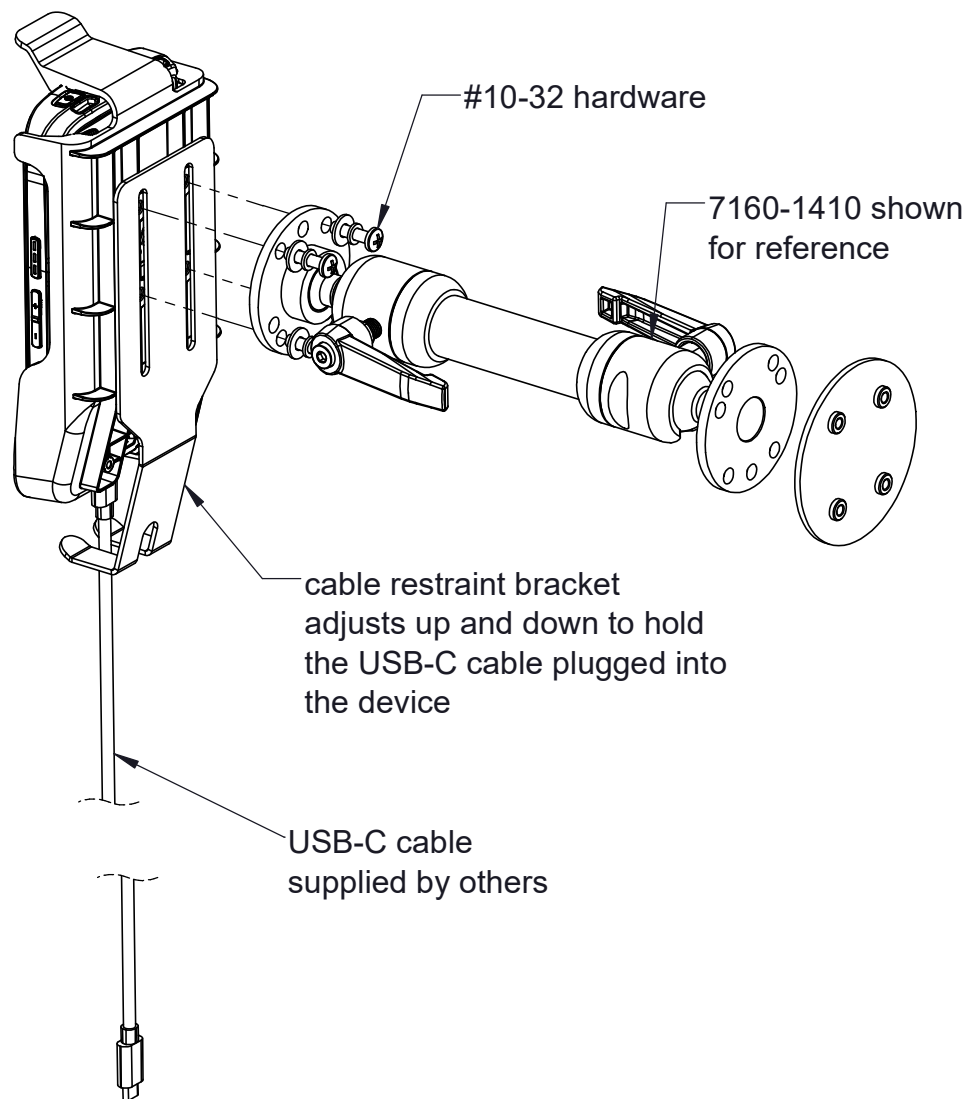

Inserting the device into the cradle:

1. If you are using a USB-C cable to charge the device, the USB-C cable needs to be inserted into the bottom of the device before inserting the device into the cradle.
2. Insert the bottom of the device into the bottom of the cradle. If you have a USB-C cable inserted, the cable needs to go between the cable restraint fingers on the bottom of the cradle. (Ref. images 1 & 2)
3. Rotate the top of the device into the cradle. The top latch will flex upward when the device is pushed into the cradle. (Ref. images 3 & 4)
4. To remove the device, push upward on the top latch and pull outward on the device. (Ref. images 5 & 6)
5. Note: the USB-C cable will come out with the device. Remove the cable from the bottom of the device by hand. Pulling the device outward to reach the cables limit, could damage the cable or the device.


1




2



3

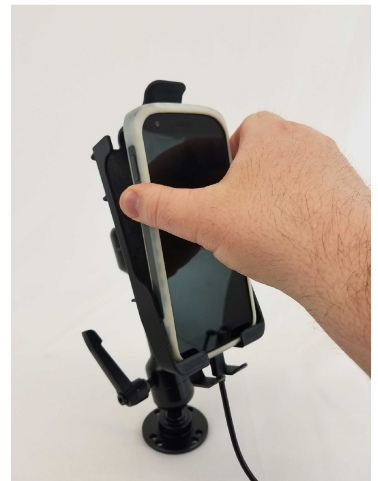

4

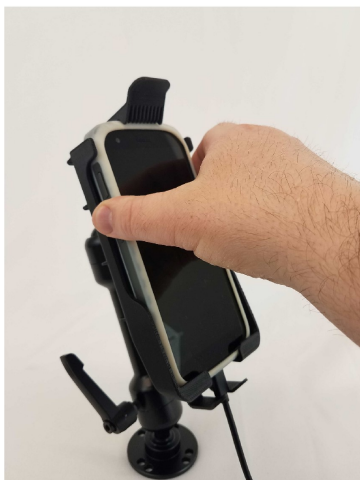

5



6

