



INSTALLATION INSTRUCTIONS

Product
7160-1165

Revision
Rev.A


Form
INST-845

ZEBRA NUMERIC KEYPAD BRACKET

Printing Spec:PS-001

Attaching the Zebra numeric keypad bracket to the 8" or 10" Zebra docking station

1. Attach the numeric keypad to the keypad bracket with the (4) #8-32 x 1/4" long machine screws found in hardware bag 7120-0829.
2. Remove the (2) #6 x 5/8" long hi-low thread forming screws from the bottom of the docking station. Route the numeric keypad USB cable down through the opening on the keypad bracket, then attach the keypad bracket to the bottom of the dock using the (2) #6 x 5/8" long screws that were previously removed.
3. Plug the USB cable into the USB port on the dock and cable tie in place using the cable ties supplied with the docking station.

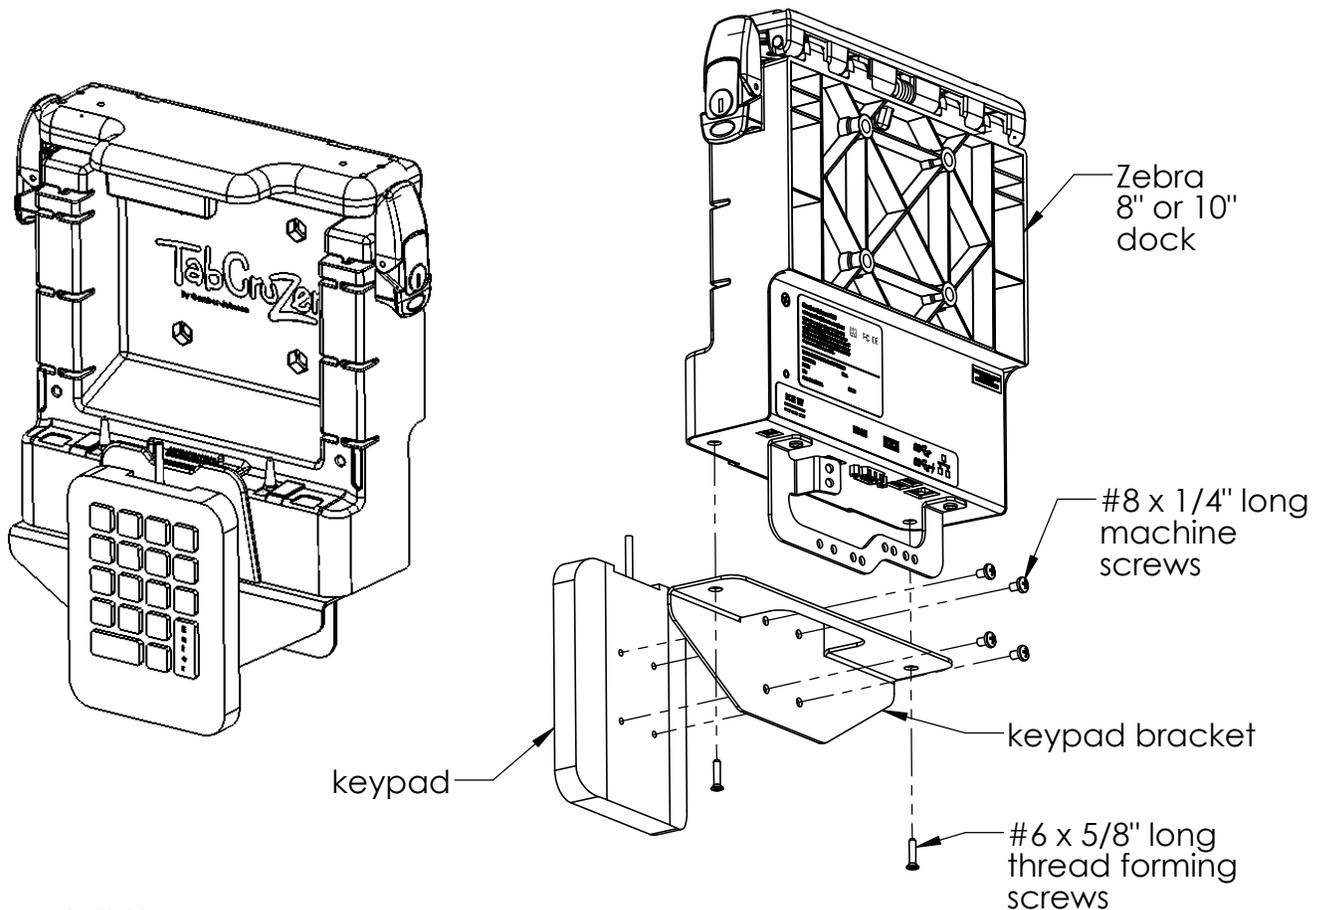

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2018 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868