



INSTALLATION INSTRUCTIONS

Product
7160-1168

Revision
Rev.A

Form
INST-854

INTERNATIONAL PROSTAR POCKET MOUNT

Printing Spec:PS-001

This instruction sheet is for mounting the 7160-1168 International ProStar pocket mount.

Attaching the mount:

1. Remove the dash pocket from the dash. First remove the dash cover panel by pulling outward. It is held on by spring clips.

2. Remove the top gauge cluster and the lower plastic molding by removing the mounting screws which hold them in place.

3. Remove the pocket from the dash. It has 2 molded spring clips on each side.

4. Place the pocket on it's left side on a table. Lay the AMP's back plate on the right side of the pocket approx. 1-3/4" from the front edge to the first hole. Make sure the hole patten matches the picture, with the 38mm dimension running from front to back of the pocket. This is required so it matches the mating component when assembled. Center the AMP's back plate up and down on the side of the pocket. The hole patten should be parallel to the bottom edge of the pocket. It does not have to be exact since the mount has angular adjustment built in.

dash cover panel



top gauge cluster



lower plastic molding



AMP's back plate

Product Mounting Disclaimer


Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2018 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

Attaching the mount:

5. Mark the hole centers on the outside of the pocket.
6. Drill 1/4" dia. holes in the marked locations.
7. Attach the pocket mount to the inside of the pocket with the #10-32 mounting hardware (4 sets of screws, flat washers, and lock washers) provided in hardware bag 7120-0861.
8. Reassemble the dash with the mount attached to the pocket by reversing steps 1 through 3.

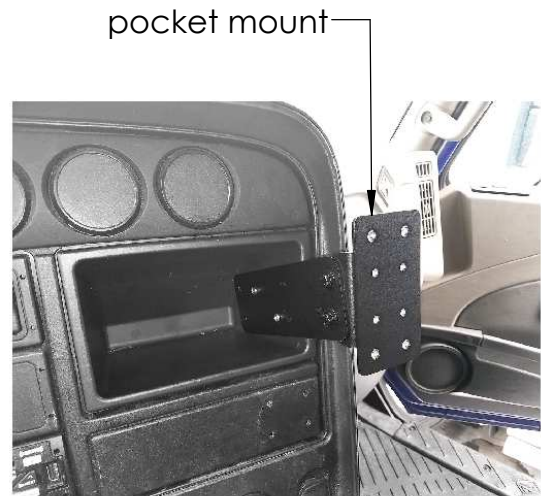

Attaching a Zirkona Semi Truck Mount or a Logistics Pivot Arm Mount and cradle:

The International ProStar Pocket Mount is designed to work in conjunction with a Zirkona Semi Truck Mount or a Logistics Pivot Arm Mount. Once the adjoining mount has been attached a docking station or cradle can be added to complete the setup.



Zirkona Semi Truck Mount

Attach with the #10-32 mounting hardware supplied with the semi truck mount



Logistics Pivot Arm Mount

Attach with the 1/4" mounting hardware supplied with the pivot arm mount