



Very Well Connected™

# INSTALLATION INSTRUCTIONS

## Product

**7160-0512**

**G1 Riveted Keyboard Mount**

## Revision

Rev.A

## Form

INST-612

Printing Spec: PS-001

This instruction sheet is for the FZ-G1 keyboard mount only. This mount is designed to be used with Gamber-Johnson G1 docking stations, a Panasonic keyboard, or I-Key keyboard. Installation instructions for other Gamber-Johnson products are provided with each individual product.


### Attaching the keyboard to the keyboard bracket

1. Insert the 1/4-20 x 2" long hex bolt through the mounting hole on the keyboard bracket. The mounting hole has a hex shaped counterbore for the head of the bolt to sit into.

2. Attach the bracket to the Keyboard with the pan head screws provided in the hardware bag. The I-Key keyboard will use the (4) #8-32 x 1/4" long screws. The Panasonic keyboard will use the (8) M3 x 6mm long screws.

3. Next attach the washers and hand knob in the order shown to the right.

4. Last Attach the Acorn nut to the end of the bolt to keep the washers and handle from falling off the bolt when the handle is loosened to remove the keyboard.

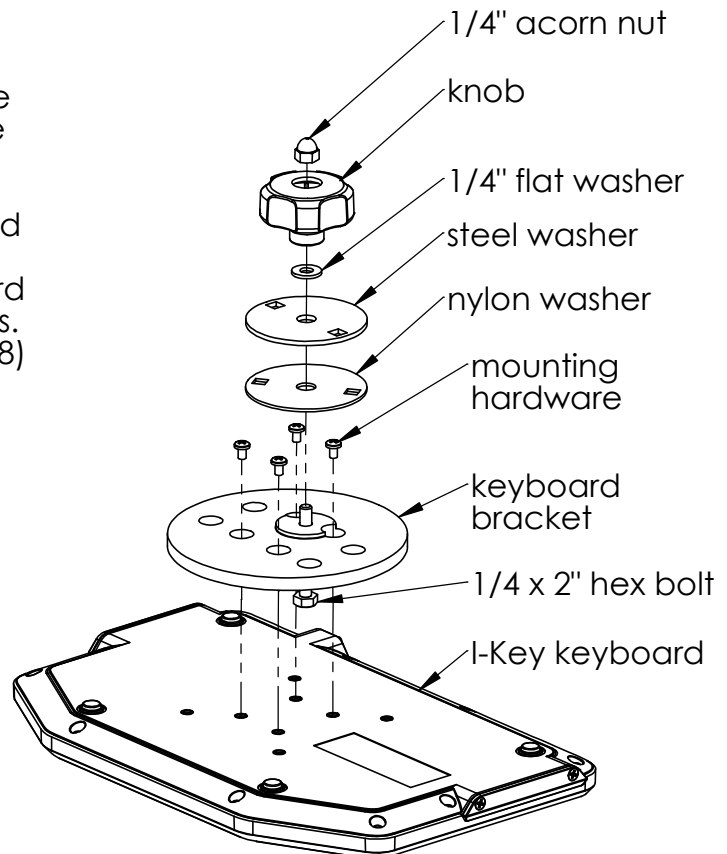

#### Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2013 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868


## **Attaching the G1 dock to the Keyboard Mount**

1. Attach the G1 dock to the Keyboard mount as shown below with the hardware supplied with the docking station. A Gamber-Johnson clevis could also be attached to the back side of the keyboard mount at this same location.

## **Mounting the Keyboard Mount in a vehicle**

The keyboard mount has 1/4-20 threaded inserts on the bottom side for mounting to Gamber-Johnson motion attachments. Attach with the 1/4-20 x 1/2" long socket button head screws found in the hardware bag.

The mount also has a clearance hole for a 3/8" bolt and (3) .281 square holes that will align with the smiley face pattern on Gamber-Johnson upper poles. Hardware has not been included for these optional mounting locations.

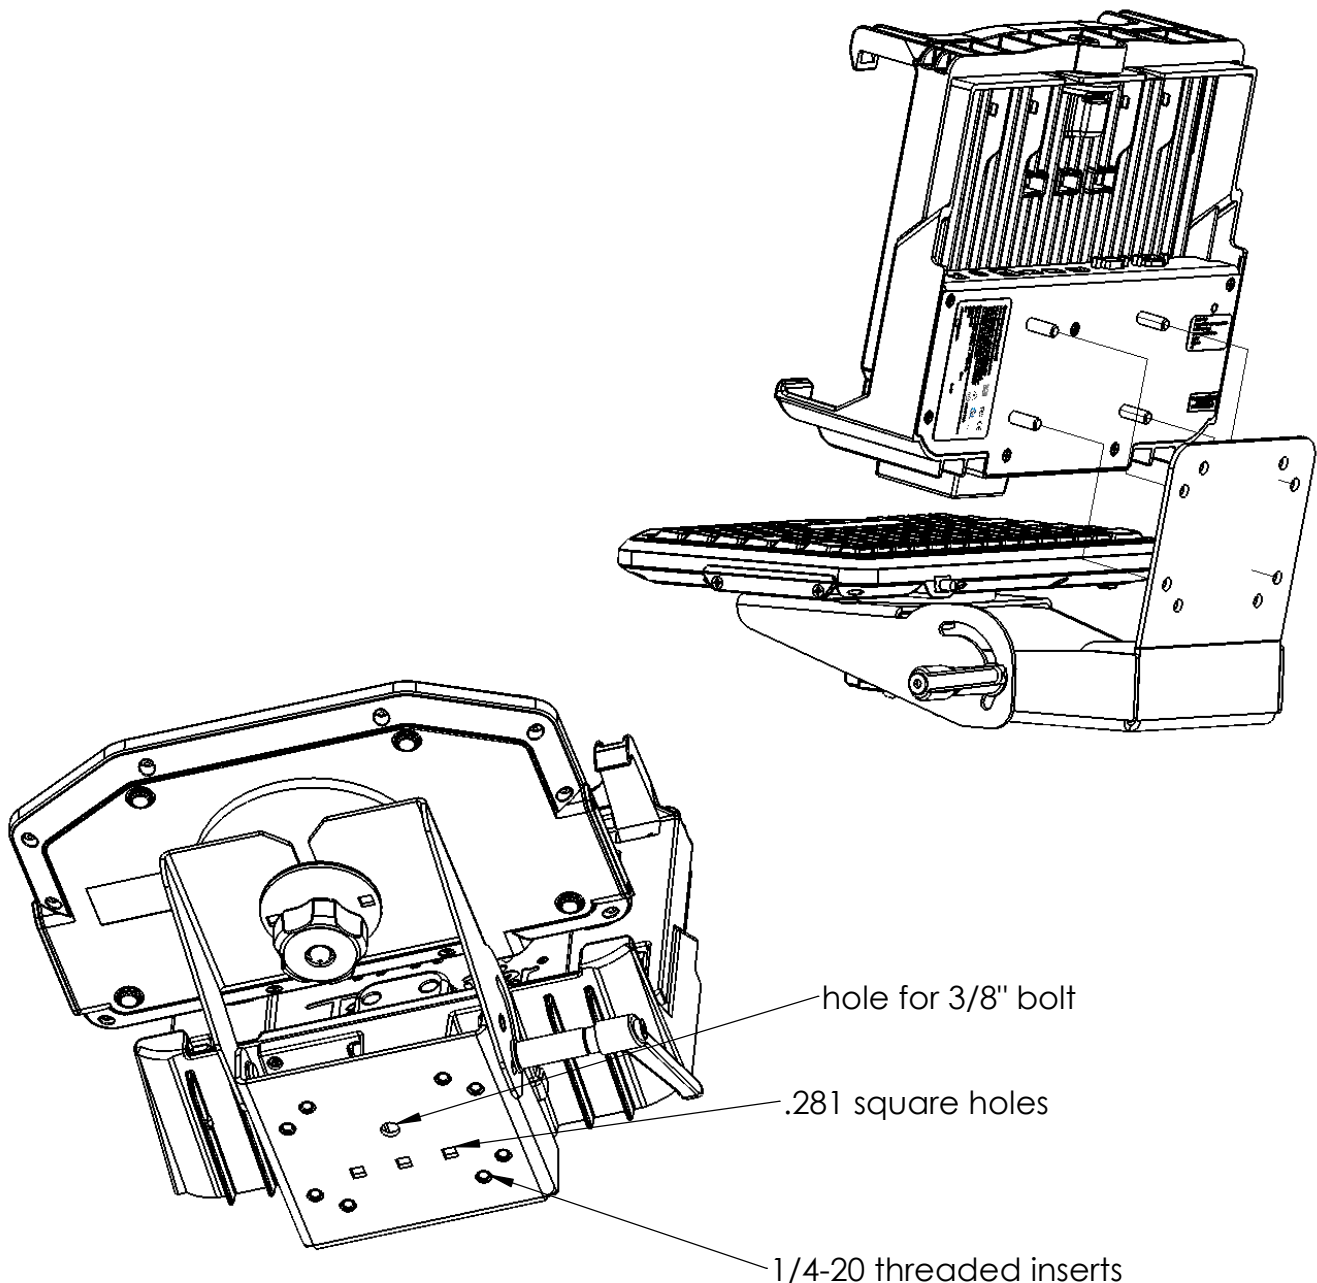

## **Features of the G1 Keyboard Mount**

1. Riveted pivot joint - allows reliable pivot without needed adjustment of hardware.
2. Adjustable handle - spring loaded adjustable handle to position the tilt of the keyboard.
3. Hand Knob - to position the swivel of the keyboard left and right. Can also be loosened to remove the keyboard from the keyboard mount.
4. Mounts on top of standard Gamber-Johnson motion attachments to position the mount as close the vehicle dash as possible.

