

Very Well Connected™

## **INSTALLATION INSTRUCTIONS**

**Product** 7160-0867 **Revision** Rev A

Form INST-737

## **INTERMEC PB42 PRINTER MOUNT**


Printing Spec:PS-001

This instruction sheet is for the INTERMEC PB42 Printer Mount which holds the INTERMEC PB42 printer.

The Printer is attached with (4) .25-20 x .50" phillips pan head screws included in the hardware bag.

The Printer mount can be configured to attach to a pole or a clevis.

Tools needed: Phillips Head Screw Driver 7/16 Wrench or socket

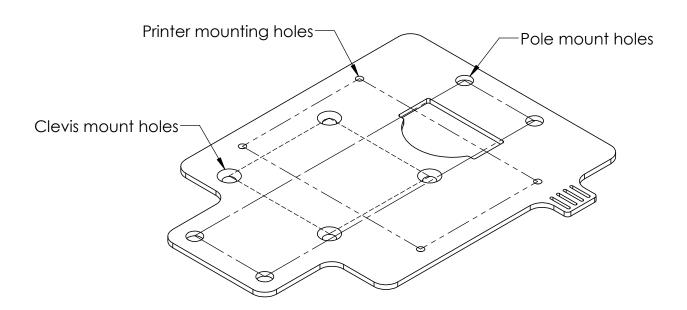

Product Mounting Disclaimer


Product Mounting Disclaimer Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmaship standards as endorsed through the Gamber-Johnson Certified Installer Program.

## **Clevis Mount**

Without the printer attached, place the mount on the clevis. Align the countersunk holes with the corresponding bolt hole pattern on the clevis.

Using the (4) .25-20 phillips flat head screws and nuts provided in the hardware bag, fasten the mount to the clevis.

Attach the INTERMEC PB42 printer to the mount using the (4) .25-20 phillips pan head screws provided in the hardware bag.

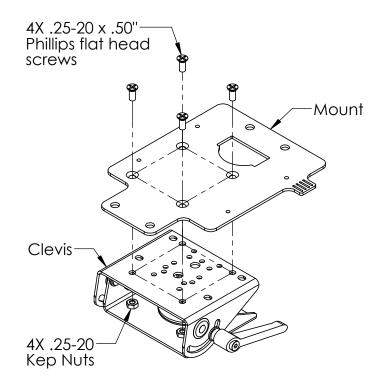

## **Pole Mount**

Place the U-bolts provided in the hardware bag around the pole and attach the U-bolt clamp onto the Ubolts. Place the ends of the U-bolts through the printer mount and secure using the nuts.

