



INSTALLATION INSTRUCTIONS

Product
7160-1109

Revision
Rev.A

Form
INST-827


YALE/HYSTER ELECTRIC VEHICLE CAB MOUNT

Printing Spec:PS-001

The 7160-1109 Yale/Hyster electric vehicle cab mount is designed to mount to the right front overhead guard leg on Yale ERP045-70VL or Hyster J45-70XN series lift trucks with an enclosed cab. The mount attaches to the same locations as the windshield mounting brackets.

Attaching the mount:

1. The mount has four height level mounting options. The mount ships pre-assembled in the lowest mounting location. If you want the mount raised to a higher location in the vehicle you will need to adjust the mount before installing it in the vehicle. See Figure 1.
2. To adjust the height, remove the 5/16" mounting bolts and adjust the adapter bracket to a secondary height location. Reattach in the new location with the 5/16" hardware.

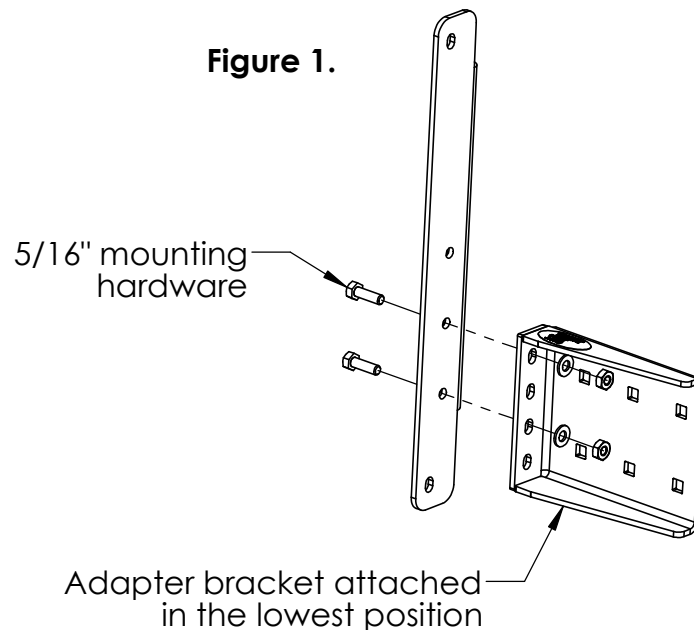

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2017 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

3. Remove the (2) socket washer head bolts that attach the windshield mounting brackets to the right front overhead guard leg.
4. Place the 7160-1109 over the windshield mounting brackets and re-install the socket washer head bolts to hold both the mount and the windshield brackets.
5. An optional material handling motion attachment (ie. 7160-0420 or 7160-0366) can now be added to the mount to hold the device being mounted. See Figure 3.

Figure 2.

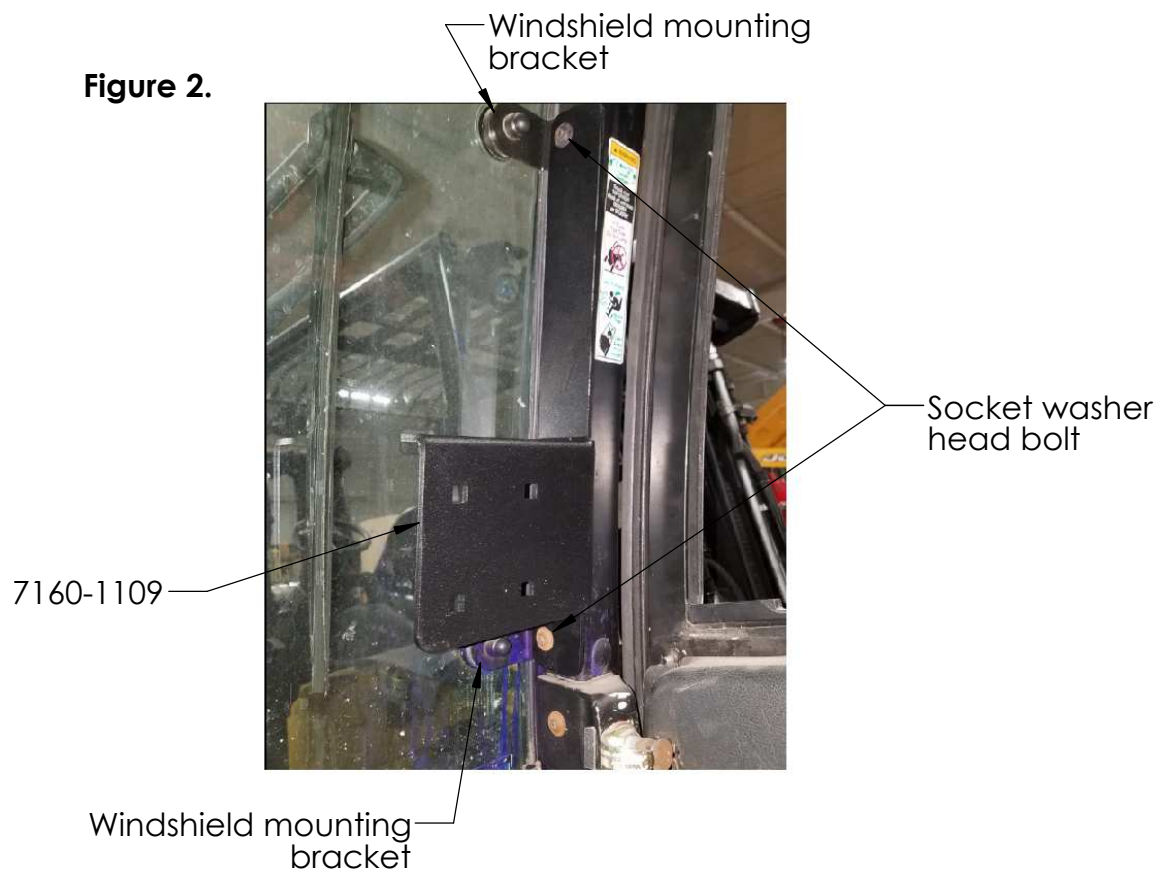


Figure 3.

