


## **INSTALLATION INSTRUCTIONS**

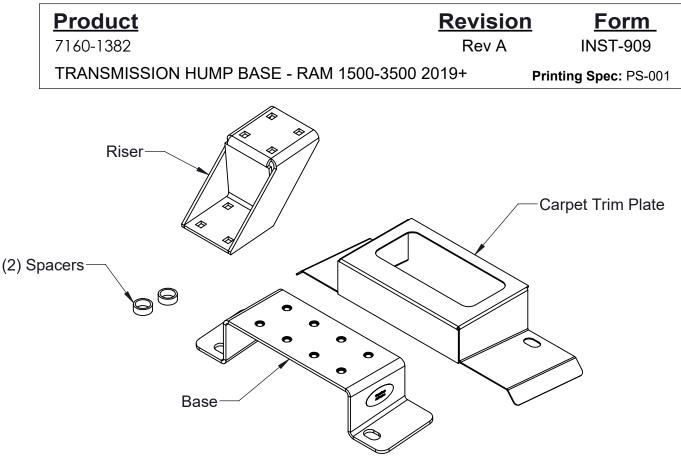

These instructions detail the installation of the Gamber-Johnson base, 7160-1382, into 2019 and newer Ram 1500-3500 trucks equipped with a center seat.

## To Install:

- 1. Remove the tray in front of the center seat by removing the rubber liner and removing the two plastic pins. Push down on the tray while pulling forward to remove the clips from the center seat.
- 2. Remove the (2) front center seat bolts exposed after removing the tray. These will be used to install the base later.
- 3. Place a spacer over the front seat bracket at each bolt hole. Set the carpet trim plate on top followed by the vehicle base. Install the OEM center seat bolts through the base, trim plate and spacers into the OEM holes.
- 4. To clear the center seat headrest while the seat is folded down, install the riser onto the base at the desired location using the 3/8-16 hardware provided.

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.