GAMBER JOHNSON

INSTALLATION INSTRUCTIONS

Product	**Revision**	**Form**
7160-1488	C	**INST-988**
SAMSUNG XCOVER PRO CHARGING CRADLE		**Printing Spec:**PS-001

This instruction sheet is for the following products:

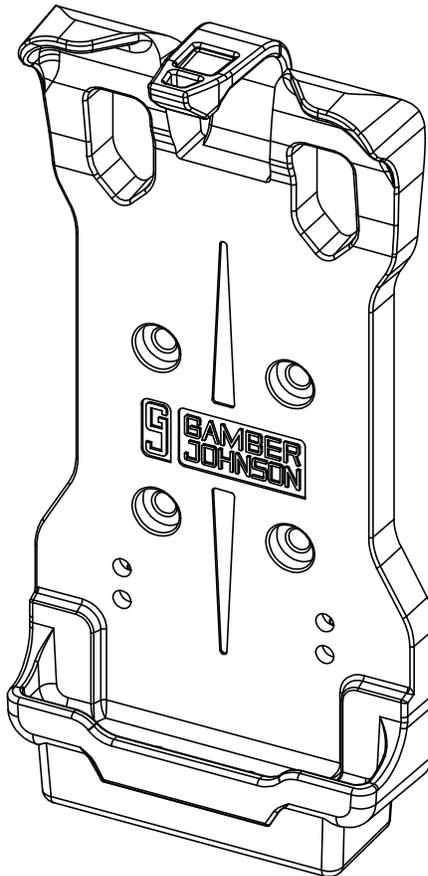**Item No.**
7160-1488-00   USB-C to Bare Wire Power Adapter Included
7160-1488-10, (-S)   USB-C to Cigarette Plug Power Adapter Included

This instruction sheet is for the Samsung XCover Pro Charging Cradle only. For instructions on features, set-up, and operation of the phone, please refer to the manual provided by Samsung with the phone.

This cradle is designed to be used with a variety of Gamber-Johnson mounting systems. Installation instructions for other Gamber-Johnson products are provided with each individual product.

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

PRE-INSTALLATION RECOMMENDATOINS

Conduct a "Bench Test"

Gamber-Johnson strongly advises a "bench test" be conducted to verify all electronic and software issues are resolved prior to installation:

1. Make sure the phone is operational by itself.
2. Insert phone into the docking station and verify that the phone is operating in the dock and the battery is charging.

Gamber-Johnson recommends positioning of all mounts and equipment in the vehicle prior to the actual install to verify that mounting locations are safe and practical.

IMPORTANT SAFETY INFORMATION FOR INSTALLERS

Safety is dependent on the proper installation and servicing of this docking station. It is important to read and follow all instructions before installing this product.

To properly install a Gamber-Johnson docking station you must have a good understanding of automotive electrical procedures and systems, along with proficiency in the installation and service of aftermarket vehicle equipment.

There are no adjustments required at any time of the electrical components within the docking station. **Opening the docking station will void the product warranty.**

During Installation:

DO NOT connect this docking station to the vehicle battery until:
1. All other electrical connections are made
2. Mounting of all components is complete
3. Verification that no shorts exist in the entire system

DO NOT install equipment or route wiring or cords in the deployment path of any air bag.

When drilling into the vehicle, DO make sure that both sides of the surface are clear of anything that could be damaged.

CAUTION: *If wiring is shorted to the frame, high current conductors can cause hazardous sparks resulting in electrical fires or flying molten metal.*
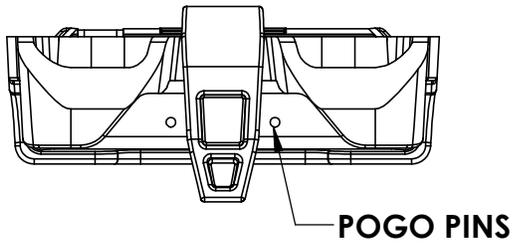
After installation:

Test the docking station to ensure that it is working properly.

File these instructions in a safe place and refer to them when performing maintenance or re-installing.
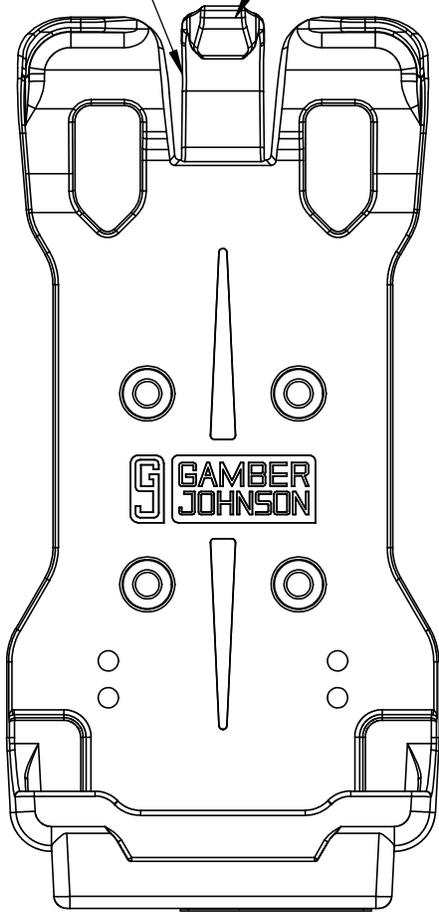
WARNING*: Failure to follow all safety precautions and instructions may result in property damage, serious injury, or death.*
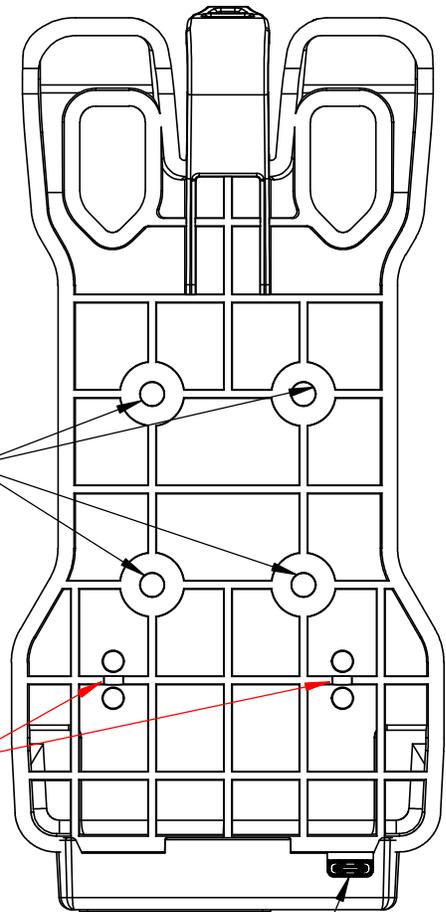
FEATURE IDENTIFICATION
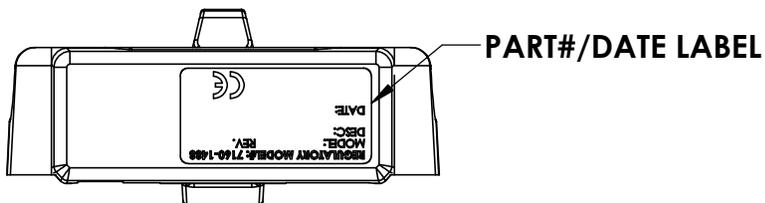
POGO PINS

LIVING HINGE LATCH

RELEASE BUTTON

GAMBER JOHNSON

MOUNTING PATTERN
AMPS PATTERN
(USE PROVIDED HARDWARE)

STRAIN RELIEF
FOR CABLE TIES

USB-C PORT
FOR POWER

PART#/DATE LABEL

DATE:
DESC:
MODEL:
REGULATORY MODEL#: 7160-1688   REV.:

CABLE MANAGEMENT

1.) After connecting 19161 or 19249 to the port on the cradle, press the cable into the strain relief slot on the back of the cradle.

2.) Use a zip tie (provided) to secure the cable.

INSERTING AND REMOVING PHONE

1.) Insert the bottom of the phone into the cavity of the cradle.

2.) Rotate the top of the phone and press until the latch snaps over the front of the phone.

1.) Press up on the release button until the latch clears the top of the phone.

2.) Rotate the phone forward and pull the phone up and away from the cradle.