



# INSTALLATION INSTRUCTIONS

## Product

7160-1346  
7160-1346-01

2020+ FORD PI Utility On-Dash Mount

## Revision

C

## Form

INST-967

Printing Spec: PS-001

## **⚠ IMPORTANT SAFETY INFORMATION**

- You must read and follow all installation instructions. Failure to follow installation instructions may result in death or serious bodily injury.
- Keep these installation instructions with the product and readily available in the vehicle for future reference of other users of the product.
- Additional copies of the installation instructions can be obtained from Gamber Johnson or by scanning the QR code located on the product if available.
- DO NOT position the equipment in front of an airbag. Equipment positioned in front of an airbag can cause serious injury or death when airbag is deployed.
- Disconnect vehicle battery before installation.

### On-Dash Mount Install Instructions:

1. Use a 7mm socket to remove the 2 OEM bolts holding down the top tray (do not remove the tray).



#### Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2020 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868


2. Place the GJ top tray inside the OEM tray and reinstall with the OEM bolts.



3. With the GJ Top Plate installed, install the middle vertical section of the On-Dash mount with provided 3/8" hardware.



4. Remove the existing two bolts from the top plate of the GJ Low-Profile Console, then use the provided 1/4-20 allen head hardware to attach the leg of the On-Dash to the console as shown. Then, attach the upper part of the leg to the vertical section of the On-Dash mount.

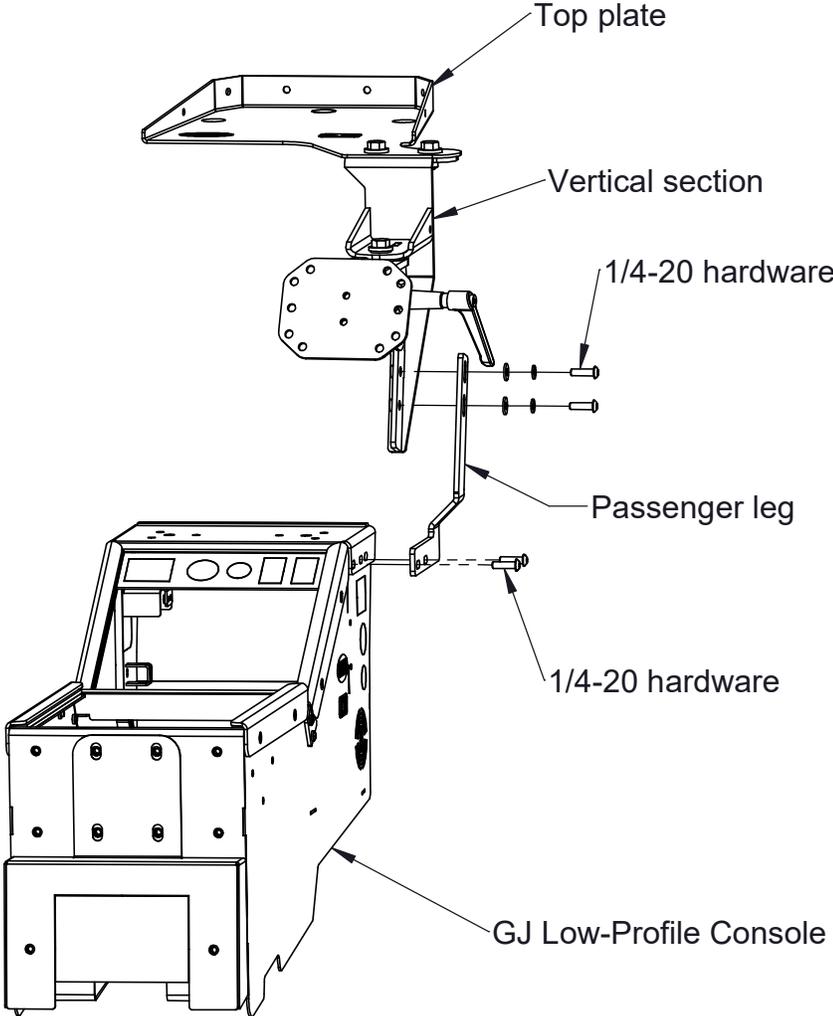

Optional features:

