


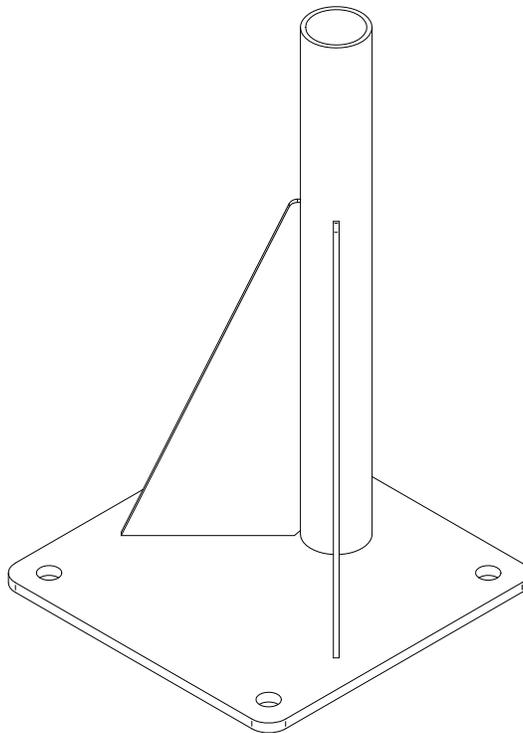

INSTALLATION INSTRUCTIONS

<u>Product</u>	<u>Date</u>	<u>Form #</u>
Flat Floor Base DS-52	8/28/2008	INST-11

1. Place the base on the vehicle floor so the post is in the desired location. It may be necessary to mount the equipment being used in order to determine the best location. Mark the mounting hole locations, and note whether it will be necessary to shim any corner with washers to compensate for floor irregularities.
2. Drill 17/32" holes through the floor at each mounting hole location, using care not to damage any equipment that may be under the floor. 1/2" diameter bolts are recommended for attaching the base to the vehicle floor.
3. Place the bolts in the holes, add nuts and washers, and tighten. If the floor is less than 1/4" thick, using fender washers on the bottom side is recommended. Do not use lag screws or sheet metal screws as these can pull out of the floor.



Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868