



INSTALLATION INSTRUCTIONS

Product

7160-1336

BASE -2020 FORD UTILITY

Revision

C


Form

INST-912

Printing Spec: PS-001

▲ IMPORTANT SAFETY INFORMATION

- You must read and follow all installation instructions. Failure to follow installation instructions may result in death or serious bodily injury.
- Keep these installation instructions with the product and readily available in the vehicle for future reference of other users of the product.
- Additional copies of the installation instructions can be obtained from Gamber Johnson or by scanning the QR code located on the product if available.
- DO NOT position the equipment in front of an airbag. Equipment positioned in front of an airbag can cause serious injury or death when airbag is deployed.
- Disconnect vehicle battery before installation.

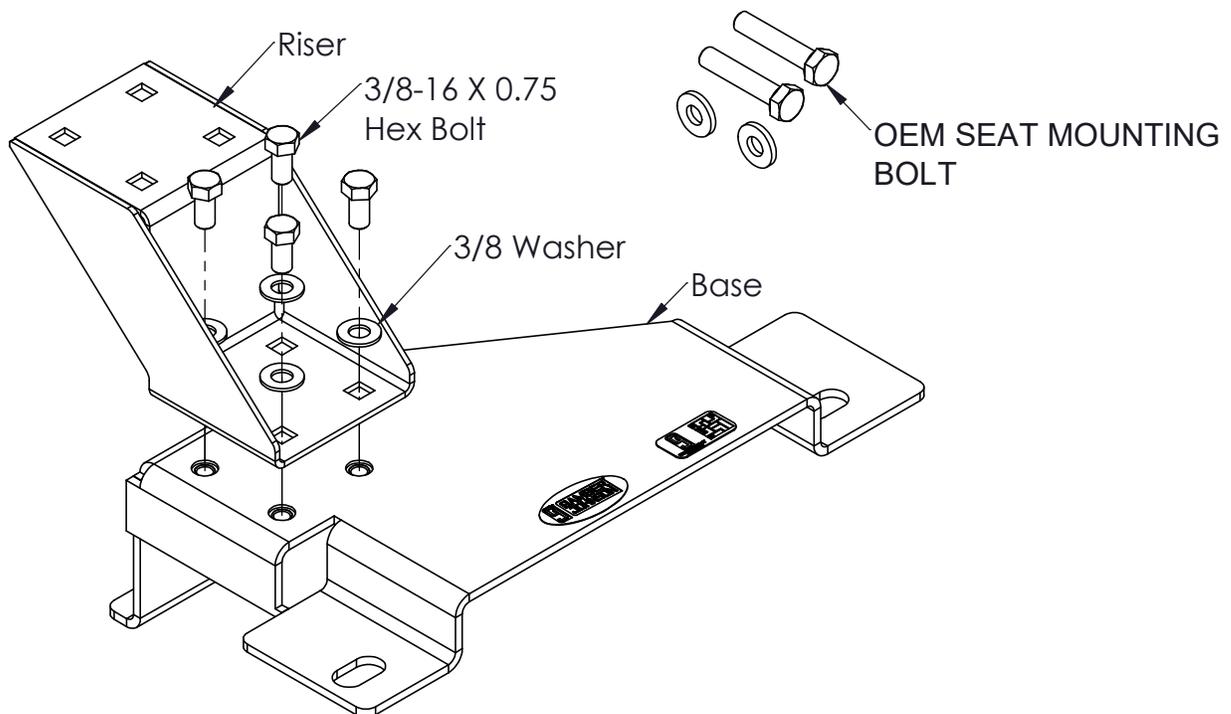

These instructions cover the installation of Gamber-Johnson vehicle base for 2020 Ford Utility.

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2019 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

To Install:

1. Remove the snap on covers, two front and two rear, on the passenger seat rail trim to expose the seat bolts and T20 screws holding the trim on.
2. Remove the two front seat bolts with a 13MM Socket and T20 screws completely located as shown in FIG 1 & 2 below.
3. Loosen the rear seat bolts. Remove the T20 screw securing the rear trim on the outside seat rail. Remove the rear trim by sliding it backwards and loosening the plastic clip holding it. See FIG.3.
4. With the rear trim piece removed another T20 screw holds the outside rail front trim piece in place. Remove this screw and remove both front passenger seat trim.
5. Slide the base between the floor and seat rails. Install the front passenger seat with the GJ supplied seat bolt and washer, then tighten all seat bolts to OEM Spec.
6. Attach the riser to the base using the 3/8-16 bolts and washers included in the hardware bag.



Front Passenger
Seat Bolt

FIG.1



FIG.2

4X T20 Screw
Front passenger
seat



Plastic Clip

FIG.3

4X T20 Screw
Front
passenger, Side
View seat, rear
bolts