




# INSTALLATION INSTRUCTIONS

<u>Product</u>	<u>Revision</u>	<u>Form</u>
7160-0326/7170-0137-XX 7160-0353/7170-0564-XX	M	INST-516
<b>Description - Charger Console 2011-2020</b>		Printing Spec: PS-005
7160-1623/7170-0886-XX 7160-1628/7170-0887-XX		
<b>Description - Charger Console 2021+</b>		

NOTE: ARMREST AND CUP HOLDER SHOWN FOR REF. ONLY

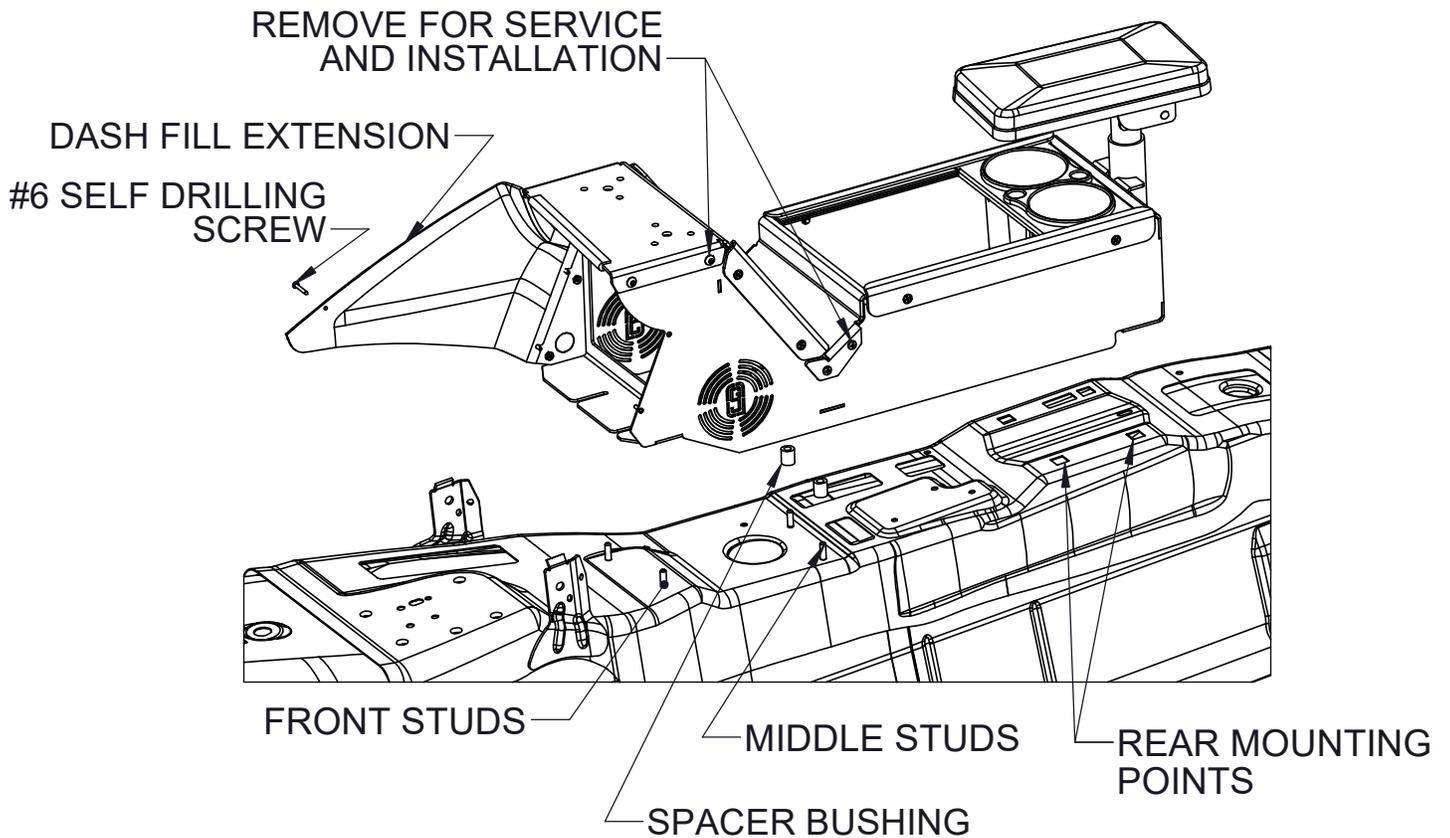


\*NOTE - FOR 2021+ MODLES ONLY USE CENTER STUD and SPACER

**Product Mounting Disclaimer**


Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

ITEM	QTY	PartNo	DESCRIPTION
1	1	19909	CONSOLE - 2021+ DODGE CHARGER (10.5" SHORT)
2	1	19914	CONSOLE - 2021+ DODGE CHARGER (13" LONG)
3	1	16774	CONSOLE - 2011-2020 DODGE CHARGER (10.5" SHORT)
4	1	16129	CONSOLE - 2011-2020 DODGE CHARGER (13" LONG)
5	1	16130	TOP PLATE, CHARGER CONSOLE 7.5"
6	1	7110-1009	ASSEMBLY, CHARGER WINGS
7	1	9000-0043	DUAL LOCK - .50 WIDE FASTENER, HIGH DEN SIDE
8	1	9000-0046	DUAL LOCK - .50 WIDE BLACK, LOW DEN SIDE
9	2	10927	HOLDDOWN - 11.25"
10	2	11482	HOLDDOWN - 7.38"
11	1	16131	BRACE, CHARGER CONSOLE 7.5"
12	1	14500	RUBBER EDGE TRIM - 3/16 GAP - CUT 7" LONG
13	1	15378	LABEL - PATENT NUMBER
14	2	8700-0010	LABEL, COMPANY
15	1	INST-516	INSTRUCTION SHEET - CHARGER CONSOLE BOX
16	1	7120-0538	HARDWARE BAG - CHARGER CONSOLE
17	1	19717	PLATE - 2021+ CHARGER RELOCATION
18	4	12305-0001	1/4-20 x .500 SBHS-NP FS-014
19	8	10016-0002	#10-32 X .375 82° PFHMS -FS-014
20	4	1122-1006	#10-32 X .375 PPHMS -FS-014

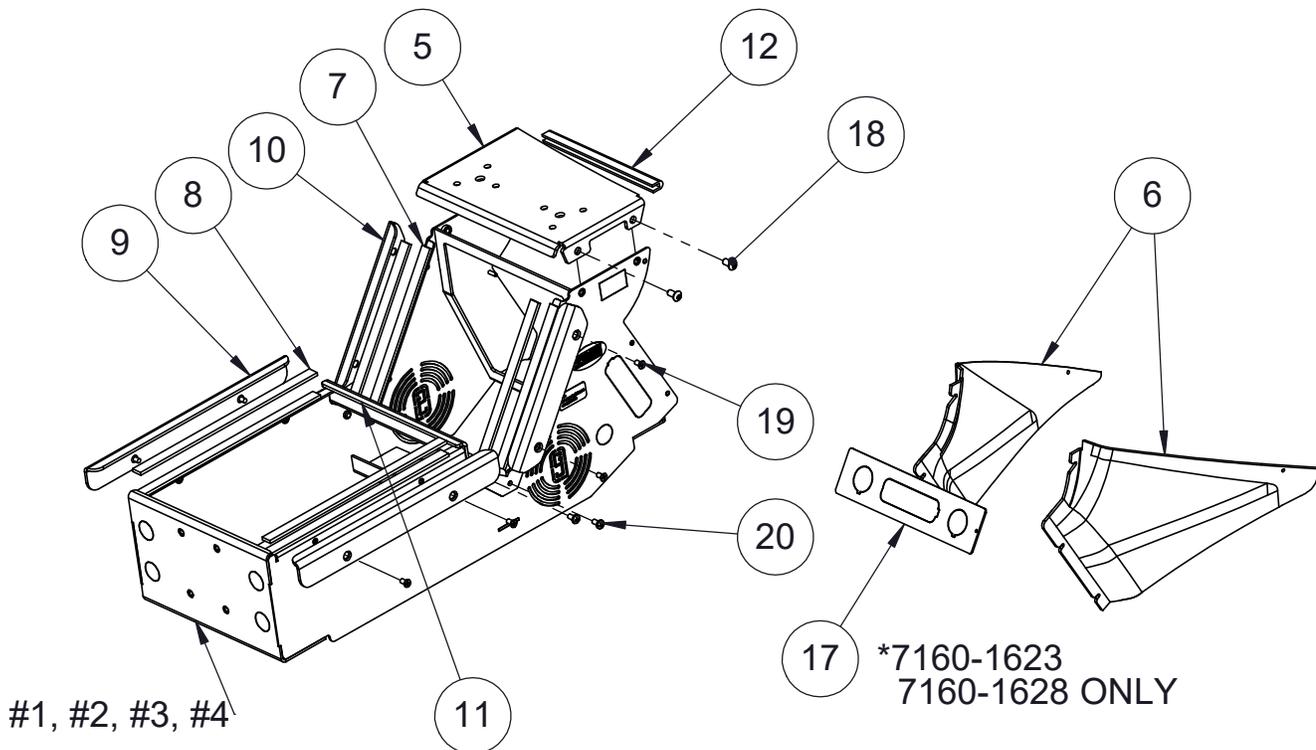


### Installing USB/MP3 Jack (optional)

1. Remove USB/MP3 box from factory console by depressing tabs on either side.
2. Remove the knockout from the right side of the console box.
3. Snap the USB/MP3 box into the opening in the console box.

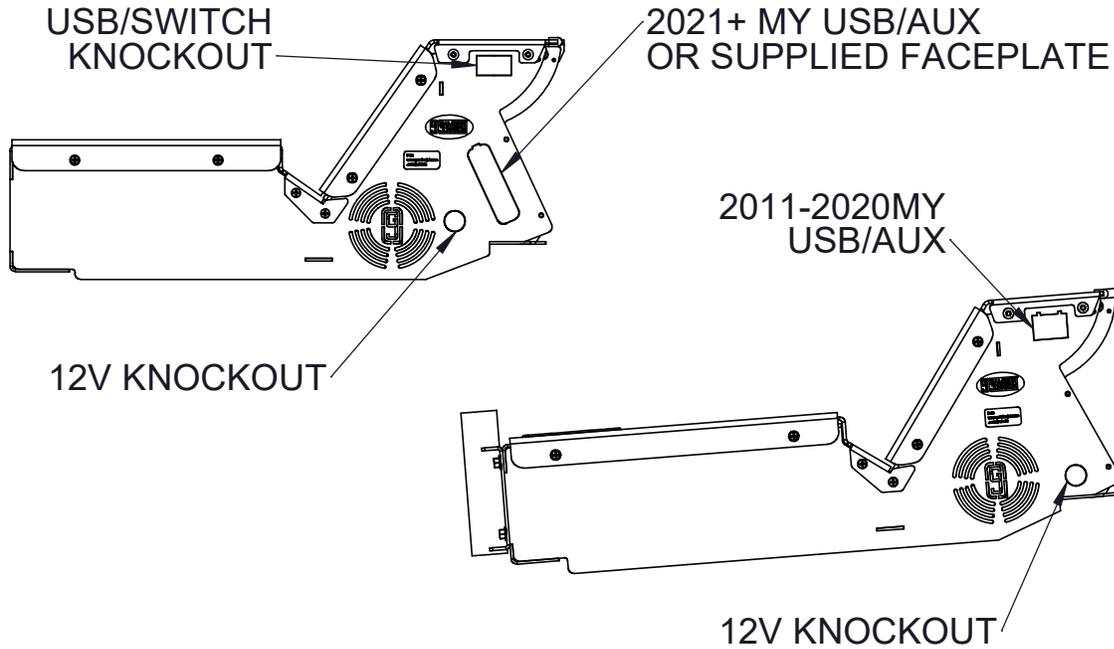

1. Before installing console into vehicle, unpack and install the Dash Fill Extensions (one per side) to the console box using the provided #6-32 nylock nuts (3 per side).
2. Remove factory console and/or top plate from vehicle.
3. Disconnect the factory harness and remove the low frequency antenna (LFA) from the stock plastic center console if applicable.
4. 2013 to current models, low frequency antenna is mounted on a bracket which is mounted to the front two studs. When installing the console, remove the bracket, install the console and then install bracket and antenna.
5. Connect the harness between the LFA, USB/MP3 box and 12v jack if used.
6. Place Spacer Bushings over rear studs on the transmission tunnel.
7. OPTIONAL Remove knockout on lower right hand side of the box and install provided 12V jack. Install ground and power as required.

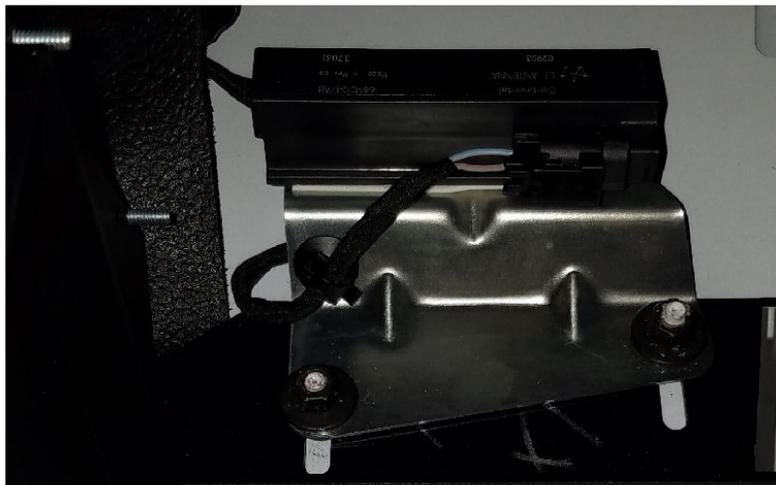

8. Front of the console is installed, align middle of the console with center stud, install the provided spacer under center leg and tighten with OEM nut (fig. 2)  
\* for 2021+ MY, only need to install 1 spacer



Fig. 2

9. Rear of the console will align with factory provided clip nut and attach with provided #14-10 machine screw



Fig. 3

12. Once the console box is secure, drive a self tapping screw (provided in hardware bag) through the hole in the dash filler panels to secure them to the instrument panel. Note Be careful not to over tighten the self tapping screw. Tighten down all hardware to secure the console.

13. If required, the Top Plate and the Center Brace can be removed to allow easier access for mounting and/or cable routing. If either item is removed Gamber-Johnson recommends reinstalling the flat head screws with a drop of Blue 242 Loctite to prevent loosening. Torque top plate bolts to 65-80 in-lbs when reinstalling.



### Optional

If relocating the OEM USB/AUX to the console will cause interference with equipment in the console, an extension can be purchased from GJ to relocate to a switch location.

GJ PN -7300-0426