



INSTALLATION INSTRUCTIONS

Product

7160-2021

LEG KIT - M2 FREIGHTLINER 2012+

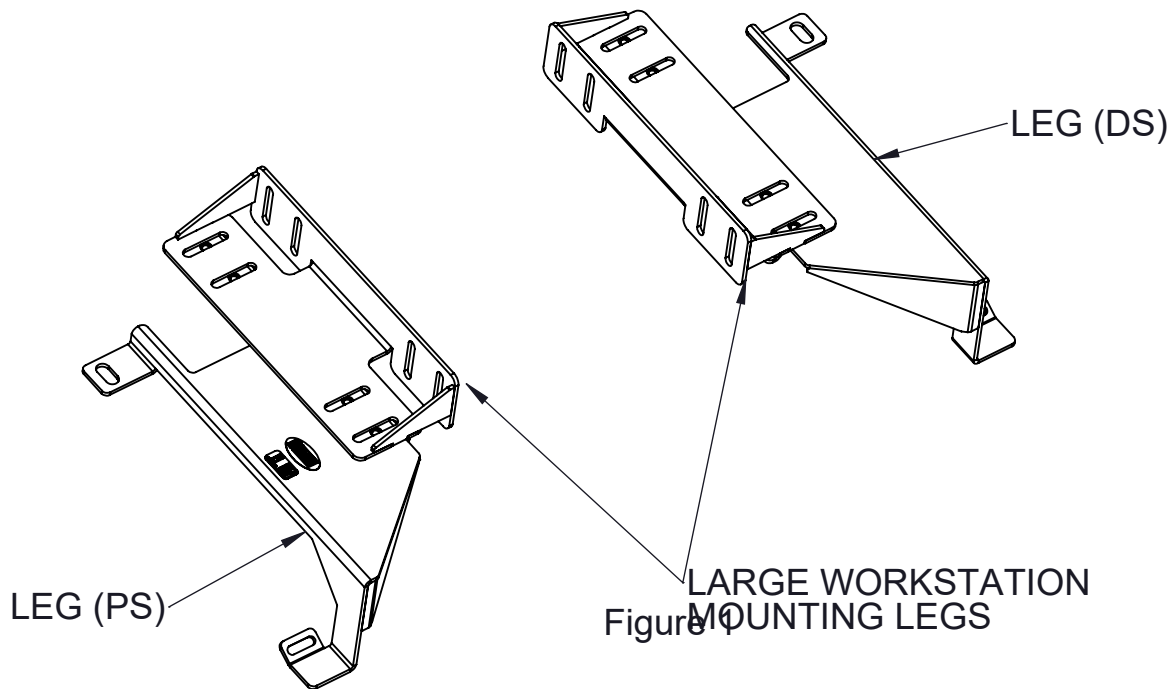
Revision

REV A

Form

INST-1199

Printing Spec: PS-001

**PARTS LIST**

<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>QUANTITY</u>
15207	LEG (Passenger Side)	1
15208	LEG (Driver Side)	1
21723	LARGE WORKSTATION MOUNTING LEG	2
7120-0921	HARDWARE BAG	1
• 3130-0052	• 3/8 FLAT WASHER	• 8
• 1173-3812	• 3/8-16 X .75 HEX HEAD SCREW	• 8
• 18406-0002	• M8 x 1.25 x 40mm SHCS FS-014 -	• 4

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2024 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

INSTALLATION INSTRUCTIONS:

1. Remove in-board seat bolts and loosen the out-board seat bolts of both driver and passenger seats.
2. Lift the seat up and slide the M2 vehicle Legs between the seats and the floor. Install M8 socket head cap screws provided in hardware bag 7120-0921 in place of the seat bolts removed and tighten in place.
3. Loosely attach the workstation mounting legs to the sides of the large workstation with the 3/8" hex bolts and flat washers found in hardware bag 7120-0921.
4. Set the large workstation with the mounting legs attached onto the M2 vehicle legs.
5. Attach the large workstation legs to the M2 vehicle legs with the 3/8 hex bolts and flat washers provided in hardware bag 7120-0921. Note there are multiple mounting locations for the workstation legs and the M2 vehicle legs. Tighten all the bolts to hold the large workstation secure.

NOTE:

This Leg Kit would not work with a bench seat (60-40 seat)

