

INSTALLATION INSTRUCTIONS

ProductRevisionForm7160-2073Rev AINST-1233

STREAMAX AD PLUS 2.0 CAMERA MOUNT

Windshield is this side of the mount


Printing Spec: PS-001

Attaching the Streamax AD Plus 2.0 camera mount to the various headliner mounting brackets:

- 1. Attach the camera mount to the various headliner mounting brackets by inserting the top clamp bracket through the slots on the headliner bracket and through the slots on the camera bracket. Attach with the (2) #10 flat washers and nylock nuts that were provided with the camera mount.
- 2. Position the camera mount as far forward in the headliner bracket slots as possible and tighten in place.

Attaching the Streamax AD Plus 2.0 camera to the camera bracket:

- 1. Remove the camera clamp bracket from the camera mount.
- 2. Insert the camera windshield mounting plate into the camera bracket and reattach the camera clamp bracket to hold the camera in place. Note: the camera in place. You do not need to use the adhesive on the camera windshield mounting bracket.

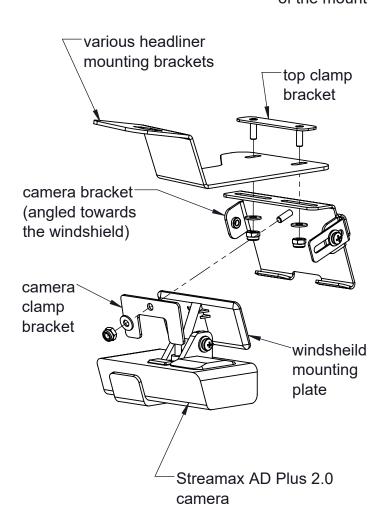

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.