



# INSTALLATION INSTRUCTIONS

<b>Product</b> 7160-0949: 8" TABLET PROTECTIVE COVER 7160-0950: 10" TABLET PROTECTIVE COVER	<b>Revision</b> REV. A	<b>Form</b> INST-774
<b>Printing Spec:</b> PS-001		

USING THE GIVEN ADHESIVE STRIP, REMOVE THE ADHESIVE COVERING.

CAREFULLY ALIGN THE HOLE PATTERNS FROM THE BACK PLATE AND THE PROTECTIVE COVER AND PRESS THEM FIRMLY TOGETHER.


APPLY PRESSURE FOR 30 SECONDS TO ALLOW PROPER ADHESION.

USING THE PROVIDED DIAGRAMS CORRECTLY LOCATE THE HOLE PATTERN FOR YOUR DOCK.

THE COVER IS THEN MOUNTED IN BETWEEN THE DOCK AND ANY MOTION ATTACHMENT.

8" TABLET COVER BACK PLATE


- KEY:
- - ZEBRA 8"
  - ▲ - GETACT800
  - ◆ - PANASONIC M1

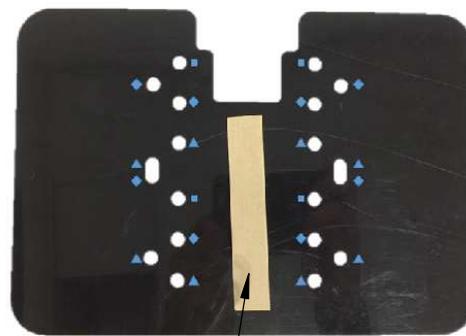

ADHESIVE STRIP

10" TABLET COVER BACK PLATE

- KEY:
- - ZEBRA 10"
  - ▲ - GETAC F110
  - ◆ - PANASONIC G1

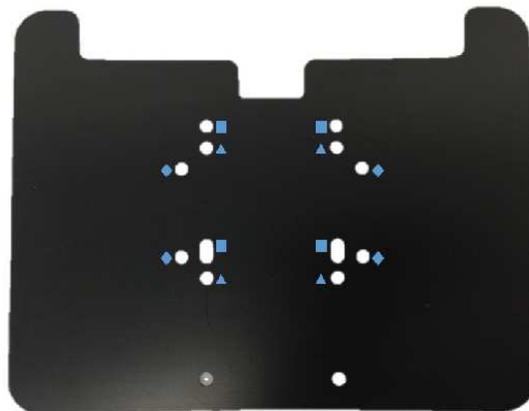

**Product Mounting Disclaimer**

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© copyright 2011 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868