



# INSTALLATION INSTRUCTIONS

## Product

7160-1097-01: GUN MOUNT, SINGLE LOCK  
7160-1097-02: GUN MOUNT, DOUBLE LOCK  
7160-1097-03: GUN MOUNT, DOUBLE SC6 LOCK

## Revision

F


## Form


INST-819

Printing Spec: PS-001


THE GAMBER-JOHNSON SINGLE AND DOUBLE GUN MOUNTS ARE DESIGNED TO BE INTERNALLY MOUNTED TO A VEHICLE PARTITION OR ANY FLAT SURFACE.

- CHOOSE DESIRED MOUNTING CONFIGURATION HARDWARE (FLAT OR OFFSET).
- REMOVE THE UPPER VINYL CAP.
- LOOSELY ASSEMBLE DESIRED BRACKETS WITH PROVIDED 1/4" SCREWS AND T-SLOT FASTENERS.
- SLIDE ASSEMBLED BRACKETS INTO MATING SLOTS IN THE EXTRUSION AS SHOWN BELOW.
- REPLACE UPPER VINYL CAP TO THE TOP OF THE EXTRUSION.
- ALIGN GUN MOUNT AND ADJUST MOUNTING BRACKETS TO DESIRED LOCATION(S).
- SECURE GUN MOUNT TO DESIRED LOCATION USING 1/4" HARDWARE (NOT INCLUDED).
- USE A 5/32" HEX KEY TO TIGHTEN MOUNTING BRACKETS TO THE EXTRUSION.
- ADJUST ANY NECESSARY BRACKETS TO PROPERLY FIT DESIRED FIREARM(S).

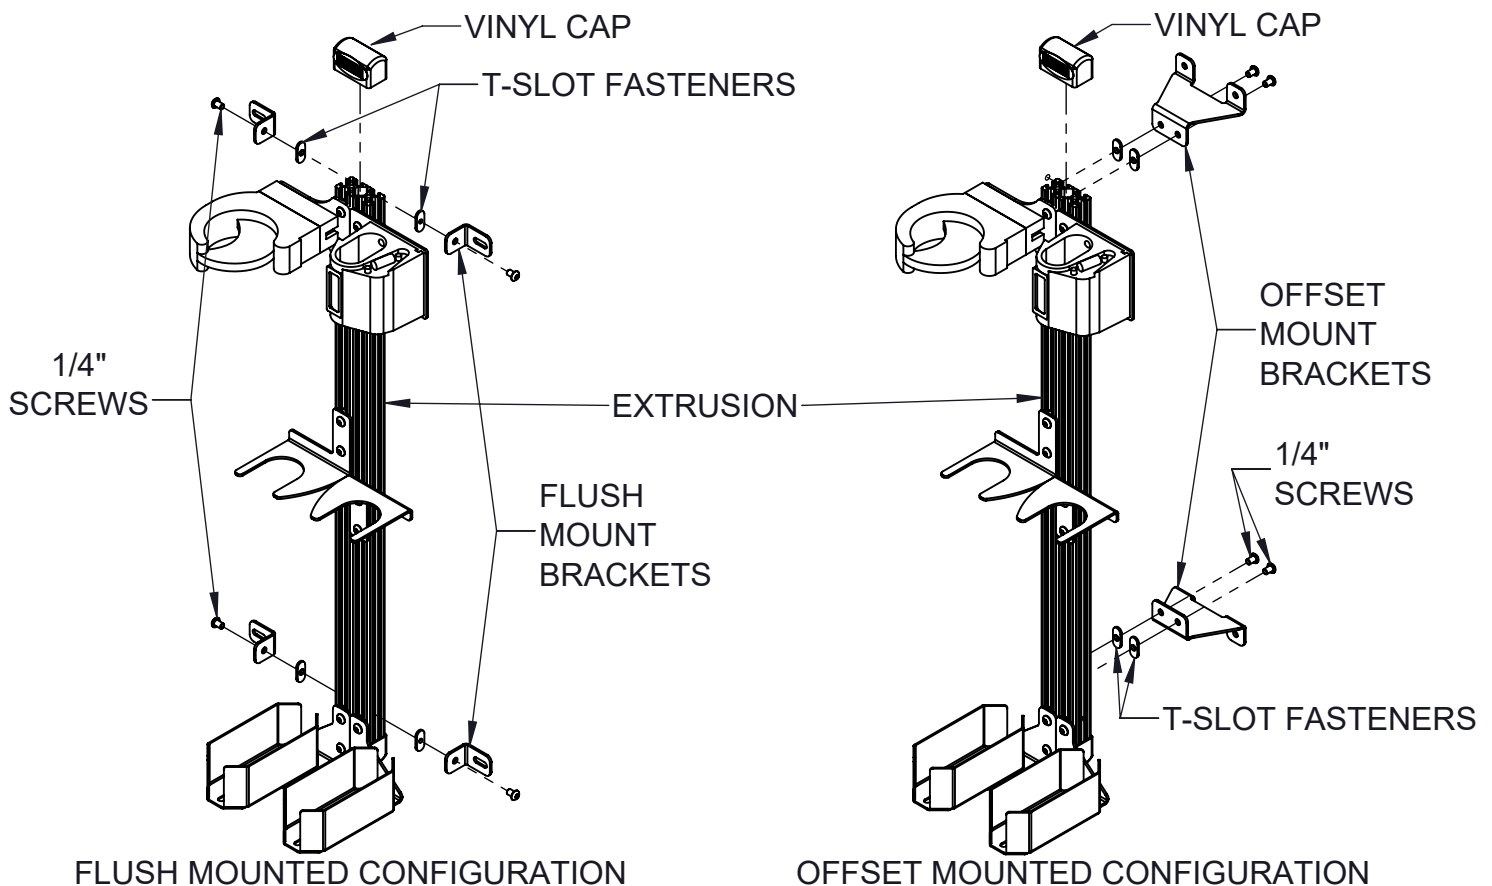


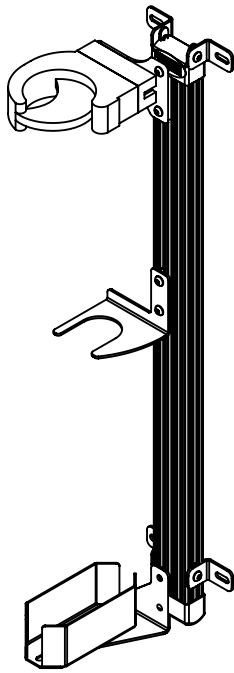

7160-1097-01 FLUSH  
MOUNTED CONFIGURATION

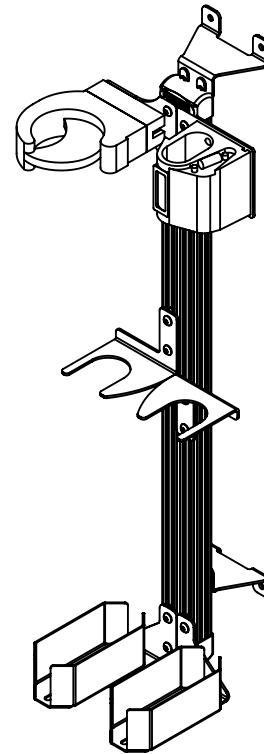

7160-1097-02 OFFSET  
MOUNTED CONFIGURATION

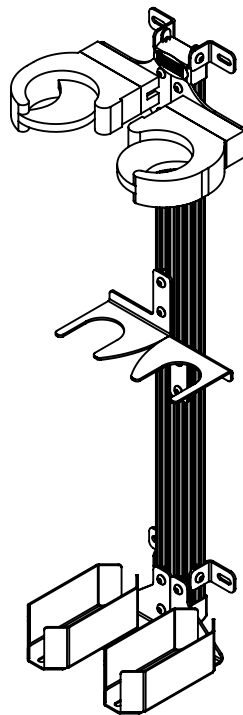

7160-1097-03 FLUSH  
MOUNTED CONFIGURATION