



INSTALLATION INSTRUCTIONS

Product

7160-1719

FORKLIFT LIGHT MOUNT

Revision

Rev B


Form

INST-1119


Printing Spec: PS-001

Attaching the mount

1. Attach the light to the "Z" bracket with the hardware supplied with the light. The "Z" bracket can be mounted straight (as shown) or sideways so light can hang underneath.
2. Clamp the mount in the desired location on the forklift with the 3/8" carriage bolts and flange nuts supplied in the hardware bag. Position the carriage bolts so they are tight on each side of the tube being clamped, to prevent any rotation of the mount. There are various sizes of carriage bolts in the bag. Select the size that best fits your application. The larger bolts can be cut off after assembly if needed.
3. The mount can be clamped to the top overhead guard or to the overhead guard legs. It can clamp on tubes up to 5.25" square.

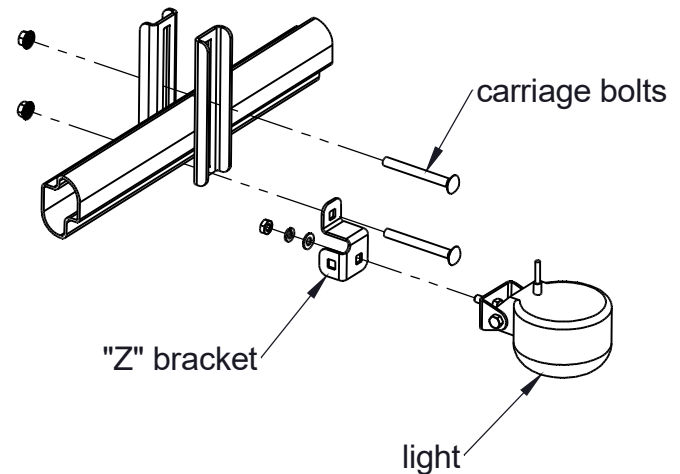

"Z" bracket
mounted
sideways

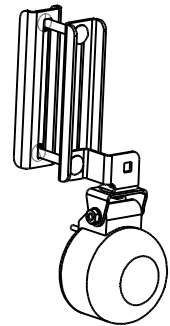

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2023 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868