



INSTALLATION INSTRUCTIONS

Product
7160-1156


Revision
Rev.A

Form
INST-841

FORKLIFT - OVERHEAD BAR MOUNT

Printing Spec:PS-001

This instruction sheet is for the Gamber-Johnson overhead bar mount. It is designed to attach to any vertically orientated bar on an overhead guard. Attach with (2) of the 3/8" carriage bolts above the vertical bar and (2) of the 3/8" carriage bolts below the vertical bar. Place the carriage bolts as close to the vertical bar as possible, so not to bend the mounting plates.

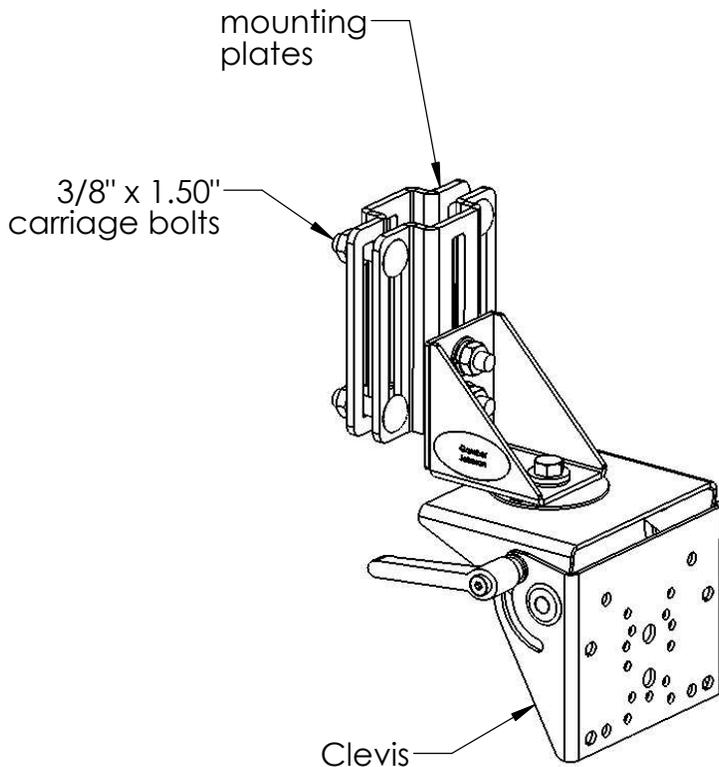

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2018 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868