



INSTALLATION INSTRUCTIONS

Product

7160-1933
7160-2108

Revision

REV B


Form

INST-1153

VEHICLE BASE, RIVIAN R1T & R1S
SUPPORT BRACE BRACKET - RIVIAN R1T & R1S


Printing Spec: PS-001

NOTE: INSTALLATION MAY VARY SLIGHTLY BETWEEN GEN1 AND GEN2 VEHICLES

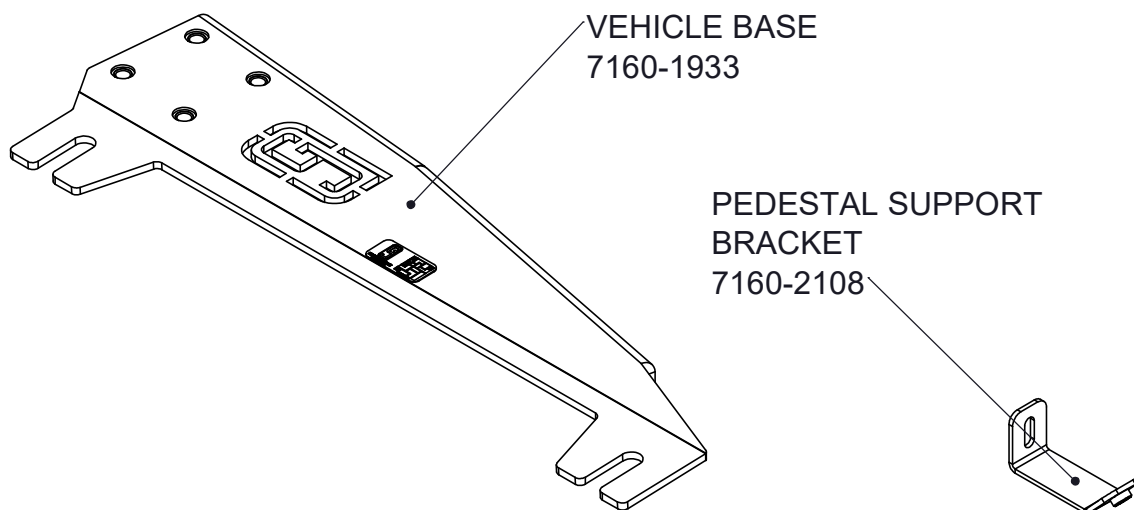

To Install:

1. Remove OEM passenger seat per Rivian FSM
2. Remove plastic trim located under passenger seat

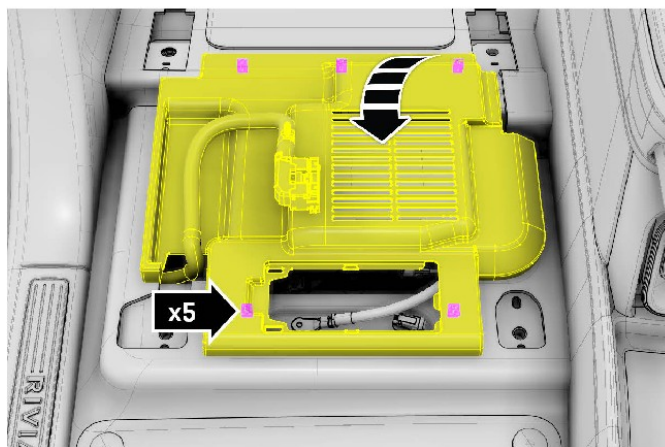

Product Mounting Disclaimer


Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2025 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868




3. Trim carpet following the lines shown, then re-install plastic trim

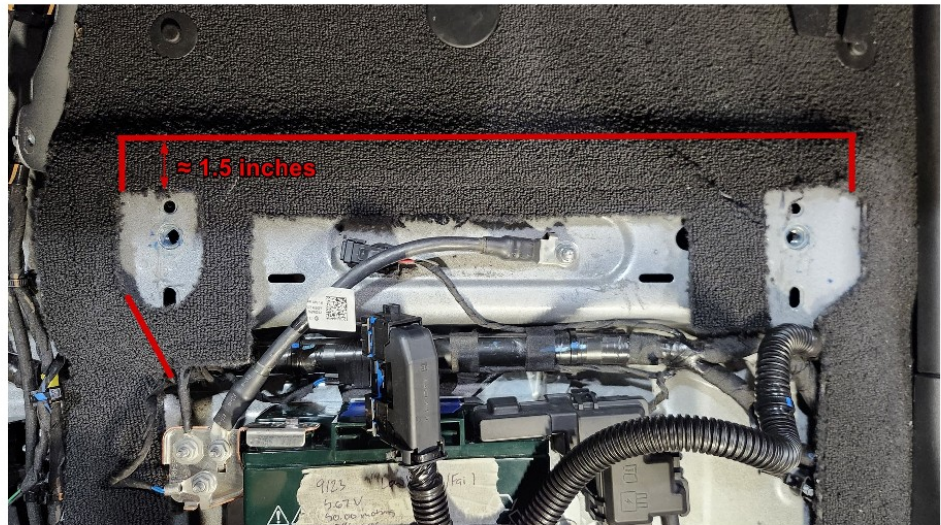

4. If installing Pedestal Support Bracket (7160-2108) follow instructions outlined below, otherwise skip to STEP 5


4.1 Remove console passenger side trim panel

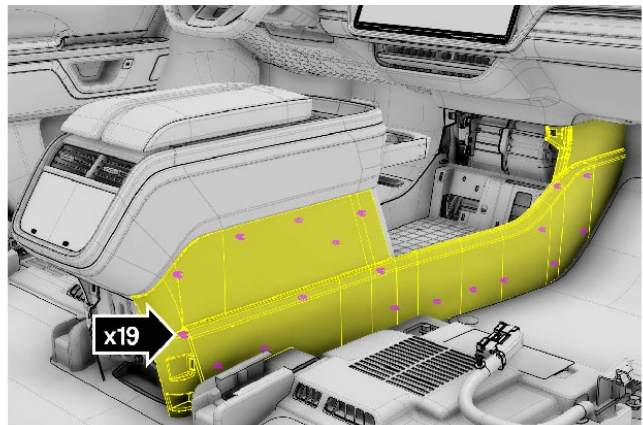

4.2 Using OEM fastener, install support bracket at indicated location. Replace trim panel



5. Set vehicle base in place, aligning slots on base with front set of seat bolt holes

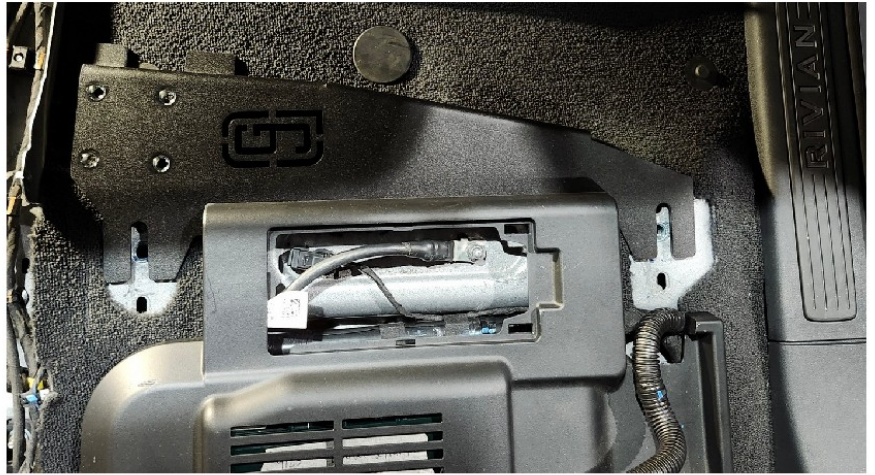

6. Re-install seat per FSM making sure vehicle base is sandwiched between seat rails and floor pan.



7" (17.8 cm) Center-Mounted
Complete Upper Pole
P/N: 7160-0178

EXAMPLE SETUP

Support Brace – Long
P/N: 7160-0231

1/4 Hex Head Bolt

1/4 Washer

Support Brace Bracket
Rivian R1T & R1S
P/N: 7160-2108

13" Lower Tube Assembly
P/N: DS-LOWER-13

3/8 Hex Head Bolt

3/8 Washer

Rivian R1T & R1S
Vehicle Base
P/N: 7160-1933