



INSTALLATION INSTRUCTIONS

Product

7170-1072, 7160-1898

Revision

A

Form


INST-1161

PASSENGER PARTITION, CHEVY TAHOE, 2021+

Printing Spec: PS-005

WARNING: Locate all wiring, fuel, brake, coolant & refrigerant lines before drilling any holes or installing any self-drilling fasteners.

Please read through entire instruction packet prior to starting installation.

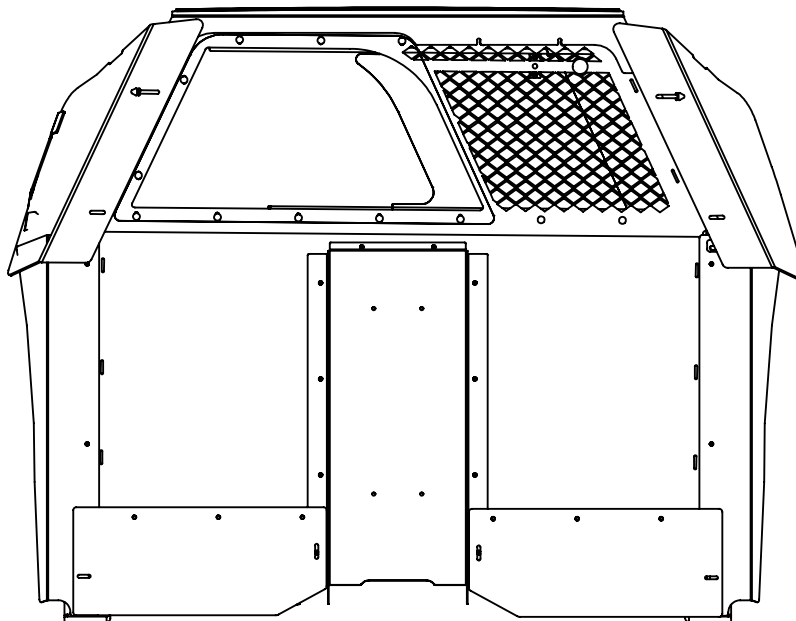

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2023 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

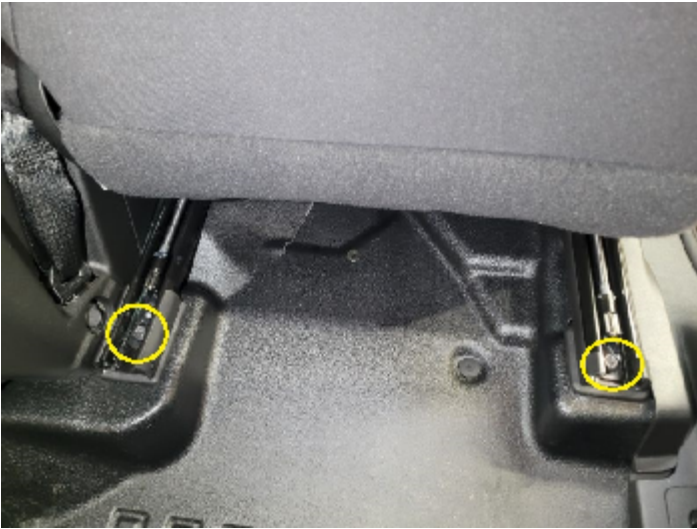


Fig. 1



Fig. 2

1. Loosen front seat bolts then slide & lean both front seats fully forward.
2. Remove rear seat bolts (Fig. 1) from both seats. Then, while pivoting the seat forward, slide Passenger & Driver Side Inner and Outer Brackets under the seat tracks (Fig. 2).
3. Loosely reinstall seat bolts.
4. Loosely mount Lower Tube to each of the Passenger & Driver Side Brackets using provided 3/8 hardware (Fig. 3).
5. Remove airbag cover on b-pillar and remove screw. Remove upper and lower b-pillar trim. Remove the two bolts retaining the grab handle (Fig. 4).
6. Install Driver and Passenger side B-Pillar Brackets with bolts removed in step 5 (Fig. 4).



Fig. 3



Fig. 4



Fig. 5



Fig. 6

7. Reinstall b-pillar trim.

8. Place the Partition into the vehicle and slide onto Lower Tubes (Fig 5).

9. Rotate Partition up to B-pillar brackets and loosely secure using 5/16 bolts, washers and nuts (Fig 6).

10. Loosely install Lower Wings to Partition using ¼ acorn nuts and washers (Fig. 7).


11. Install Center Extension to Partition using ¼ acorn nuts and washers (Fig. 8).



Fig. 7



Fig. 8

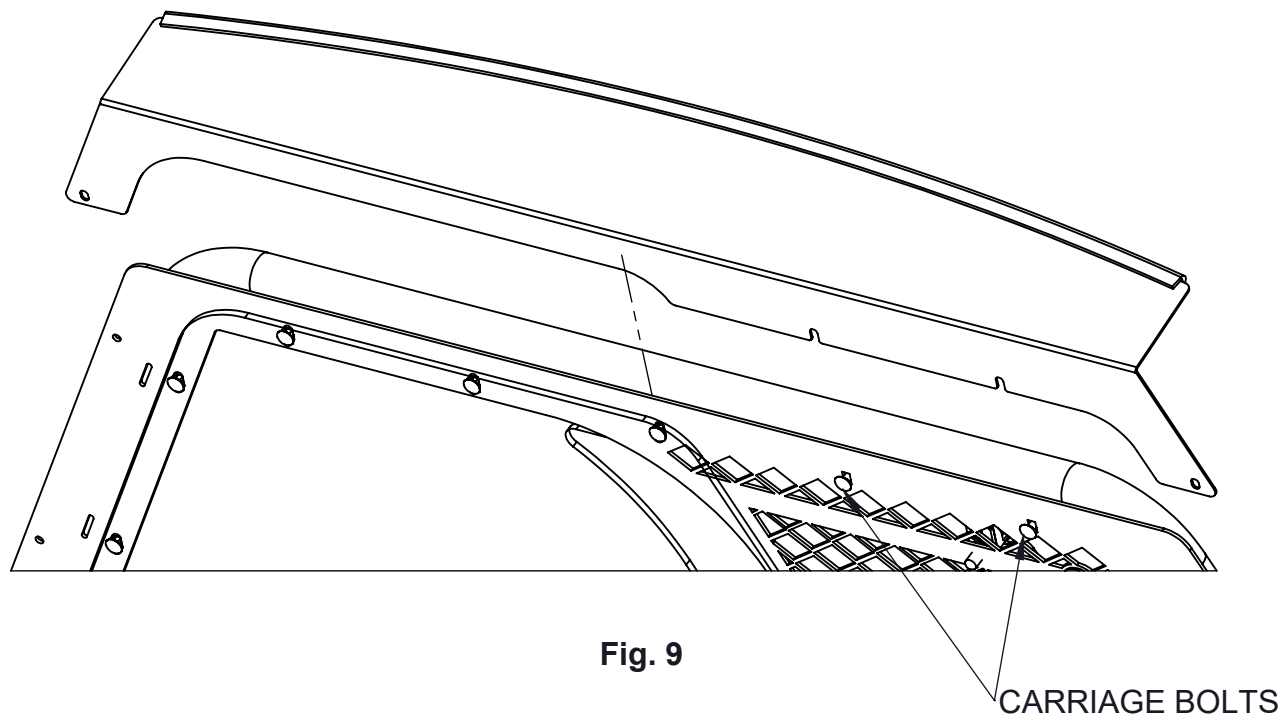

12. Install top air deflector panel by first loosening the acorn nuts on the back side of the indicated carriage bolts in Figure 9. Then, slide the open slots on the deflector between the bolt heads and the partition, and partially tighten the acorn nuts. Adjust for fit prior to fully tightening.

Note: The deflector can be attached to the main partition before or after the partition is installed in the vehicle.

13. Loosely install Foot Wells to Partition using $\frac{1}{4}$ acorn nuts and washers (Fig. 10).

14. Loosely install $\frac{1}{4}$ button head screws to secure Foot Wells to Inner Brackets and install $\frac{1}{4}$ button head screws and nuts to secure Foot Wells to the Lower Wings (Fig. 11)



Fig. 10



Fig. 11



Fig. 12

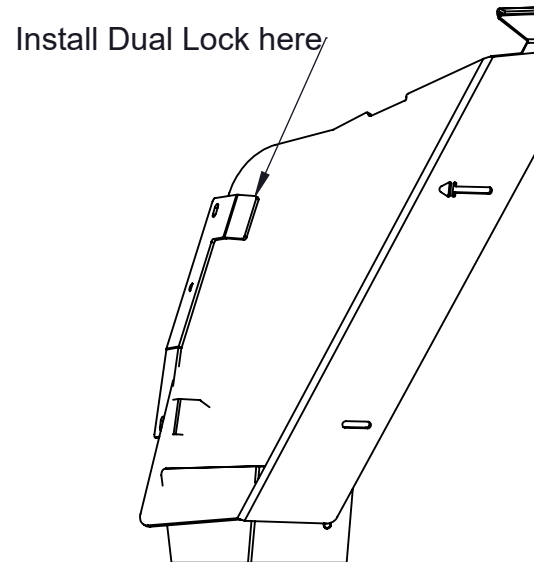


Fig. 13

15. Install Poly Wings to partition using provided $\frac{1}{4}$ button head screws, nylon washers, flat washers, acorn nuts, and strips of Dual Lock. Plastic washer should be installed between screw head and Poly Wing.

Note: Poly wing should be installed such that the face sits inboard of the B pillar brackets (Driver's side depicted in Figure 13). Dual lock should be installed on each side in the indicated location between the bracket and wing to reduce vibration.

Note: Only tighten hardware enough to keep Poly Wing from easily moving. Do not over tighten or Poly Wings could be damaged.

16. Adjust all componets to minimize gap and optimize fit. Tighten all hardware including OEM seat bolts.