




# INSTALLATION INSTRUCTIONS

Product	Revision	Form
7160-2067	Rev C	INST-1186
FREIGHTLINER CASCADIA HEADLINER CAMERA MOUNT		Printing Spec: PS-001

This instruction sheet is for mounting the Freightliner Cascadia headliner camera mount in the vehicle. The mount will also work in a Western Star semi-truck.

**Attach the camera mount to the headliner bracket:**

1. Attach the camera mount and camera (various options available) to the headliner bracket before installing the bracket into the vehicle. See the instruction sheet for the specific camera mount being installed. *It is easier to attach the camera mounts on a bench vs attaching them from the hanging bracket. This also prevents any hardware from falling down the dash vents if the hardware is dropped.*

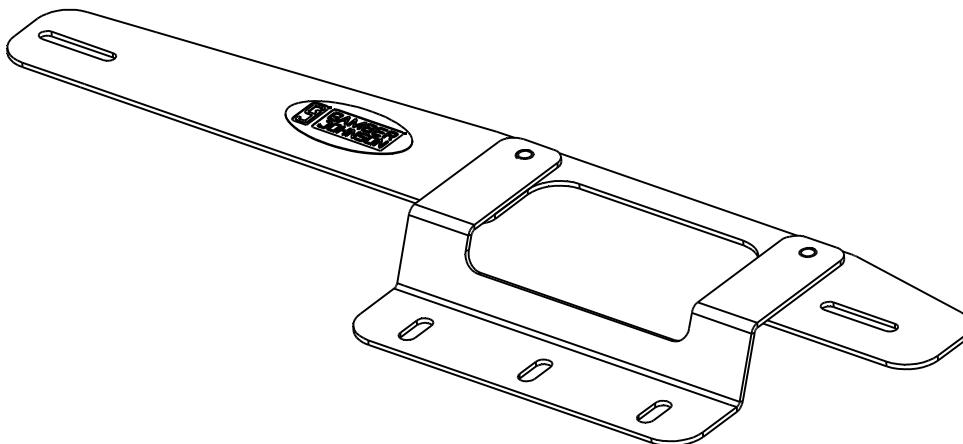

**Product Mounting Disclaimer**

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufacturer's specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2025 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868



**Attach the headliner mount (with camera attached) to the headliner:**

2. Unclip the drivers side sun visor and position it towards the drivers door out of the way.
3. Remove the two screws (see picture below) that attach the headliner to the roof.
4. Using the same hole locations, attach the headliner camera mount to the headliner with the (2) #10 x 1.50" long sheet metal screws found in the hardware bag.
5. If the camera bracket is hitting the windshield, the bracket can be adjusted by loosening the (2) #10 lock nuts that hold the camera bracket to the roof bracket. The side to side angle of the camera can also be adjusted at this same location. Adjust as needed, then re-tighten the lock nuts in place.
6. Adjust the pressure bracket against the windshield, by loosening the #10 machine screw that holds the bracket in place, adjust the bracket outward until it is pressing on the windshield and re-tighten the screw to hold it in place. This will help eliminate vibration and bounce in the camera.
- Note, the pressure bracket can be moved to the opposite side of the camera bracket if that location better suits your specific vehicle.**
7. Last, adjust the up and down camera angle to the desired position and tighten the mounting hardware that holds the camera in place.
8. Once powered, check the camera view position and make adjustments that best fit your specific camera angle requirements.



Remove these 2 screws

**Images of various of cameras installed**

headliner mount with  
Samsara camera attached




headliner mount with  
Lytx camera attached



**Reconfiguring the Mount to attach to the passenger side of the vehicle:**

1. Remove the (2) #10 lock nuts that holds the drop shelf bracket to the main bracket.
2. Flip the main bracket over and reattach the drop shelf bracket to the opposite side of the main bracket with the #10 lock nuts. (see below)
3. Follow the steps on page 2 for attaching the mount to the headliner. Attaching to the passenger side is just a mirror image of attaching to the drivers side.

**Drivers side mount assembly**  
(product is shipped this way)

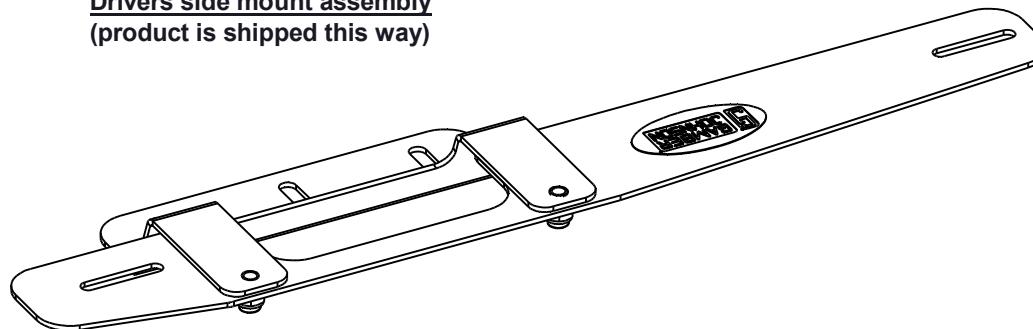

**Passenger side mount assembly**

