




# INSTALLATION INSTRUCTIONS

<b>Product</b> 7170-1147-XX Cargo Partition, Dodge Durango, 2021+	<b>Revision</b> Rev B	<b>Form</b> INST-1222 Printing Spec: PS-005
---	--------------------------	---

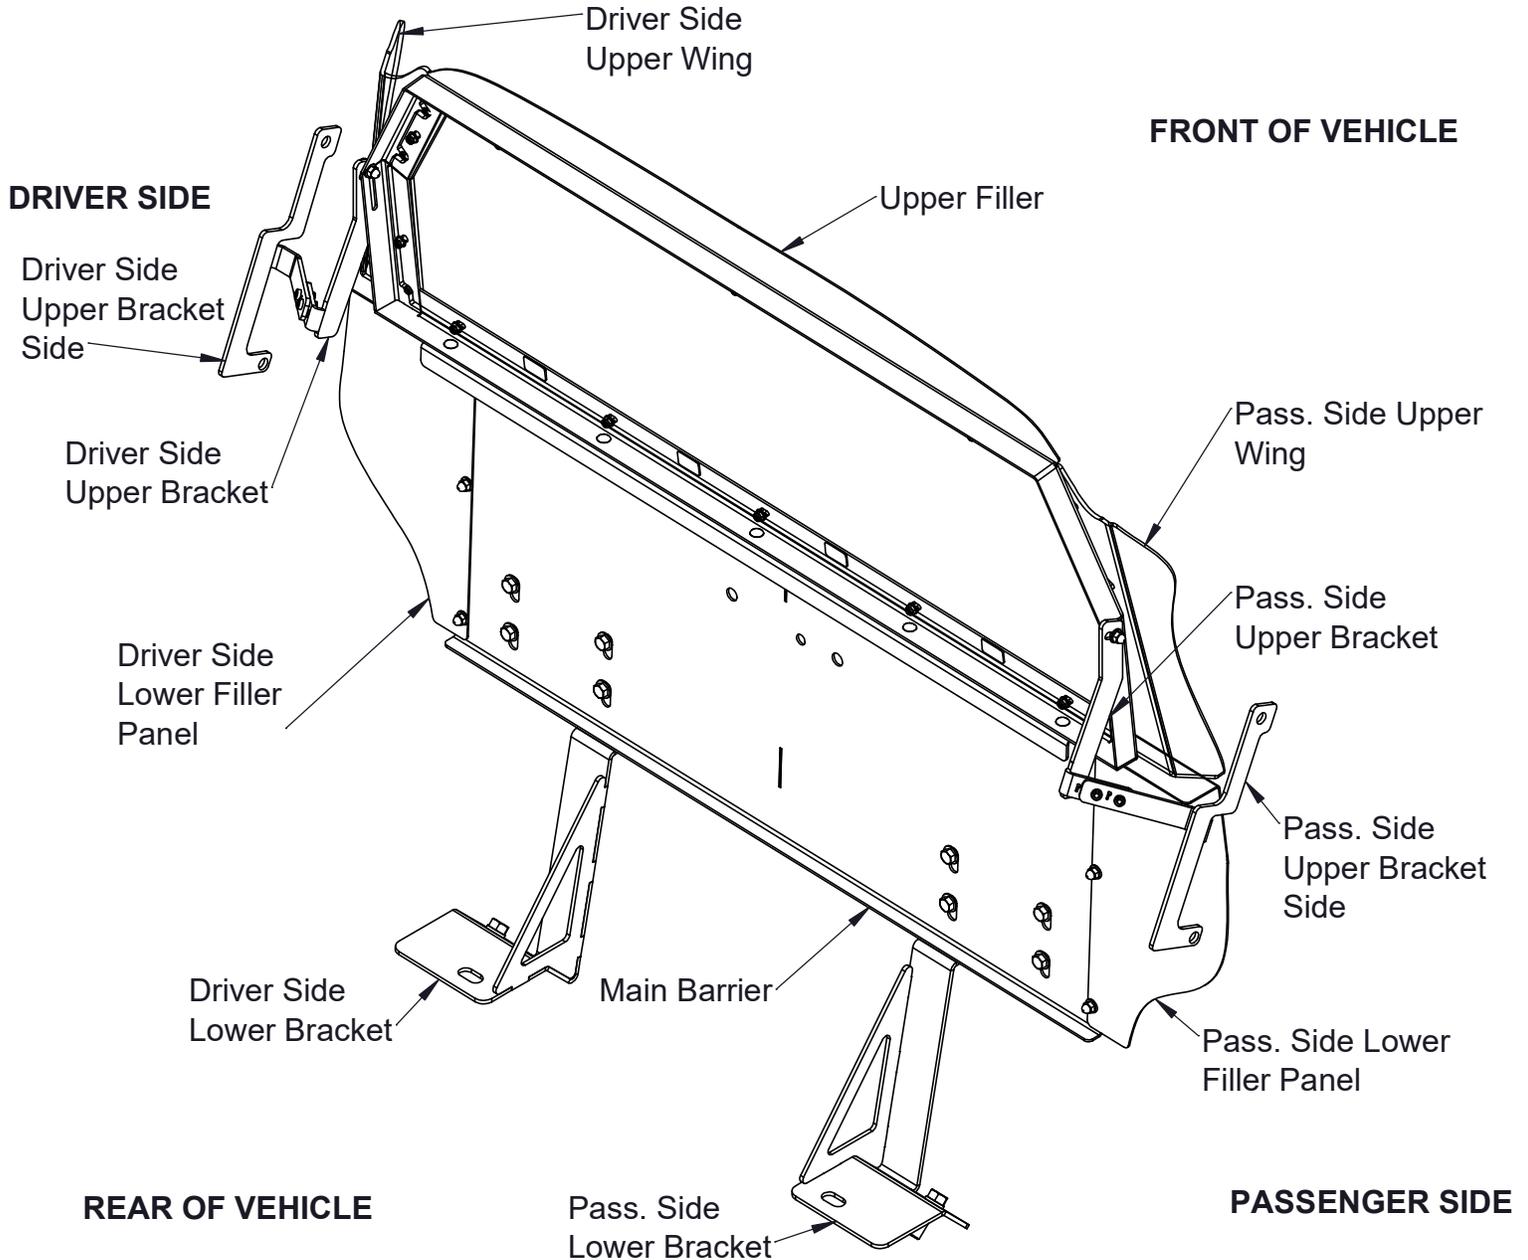

**Product Mounting Disclaimer**


Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2026 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868



ITEM	QTY	PartNo	DESCRIPTION
1	1	7160-1989	WINDOW ASSEMBLY
2	1	21871	MAIN BARRIER
3	1	21873	TOP FILLER PLATE
4	1	21874	D.S POLY WING
5	1	21875	P.S. POLY WING
6	1	21879	D.S. LOWER WING
7	1	21881	P.S. LOWER WING
8	1	21904	P.S. LOWER MOUNTING BRACKET
9	1	21913	P.S. UPPER BRACKET VEHICLE SIDE
10	1	21917	D.S. LOWER MOUNTING BRACKET
11	1	21918	DS UPPER BRACKET VEHICLE SIDE
12	1	21919	P.S. UPPER BARCKET
13	1	21920	D.S. UPPER BRACKET
14	1	7120-1187	HARDWARE BAG - WINDOW ASSEMBLY
15	1	7120-1247	HARDWARE BAG - DODGE DURANGO CARGO PARTITION

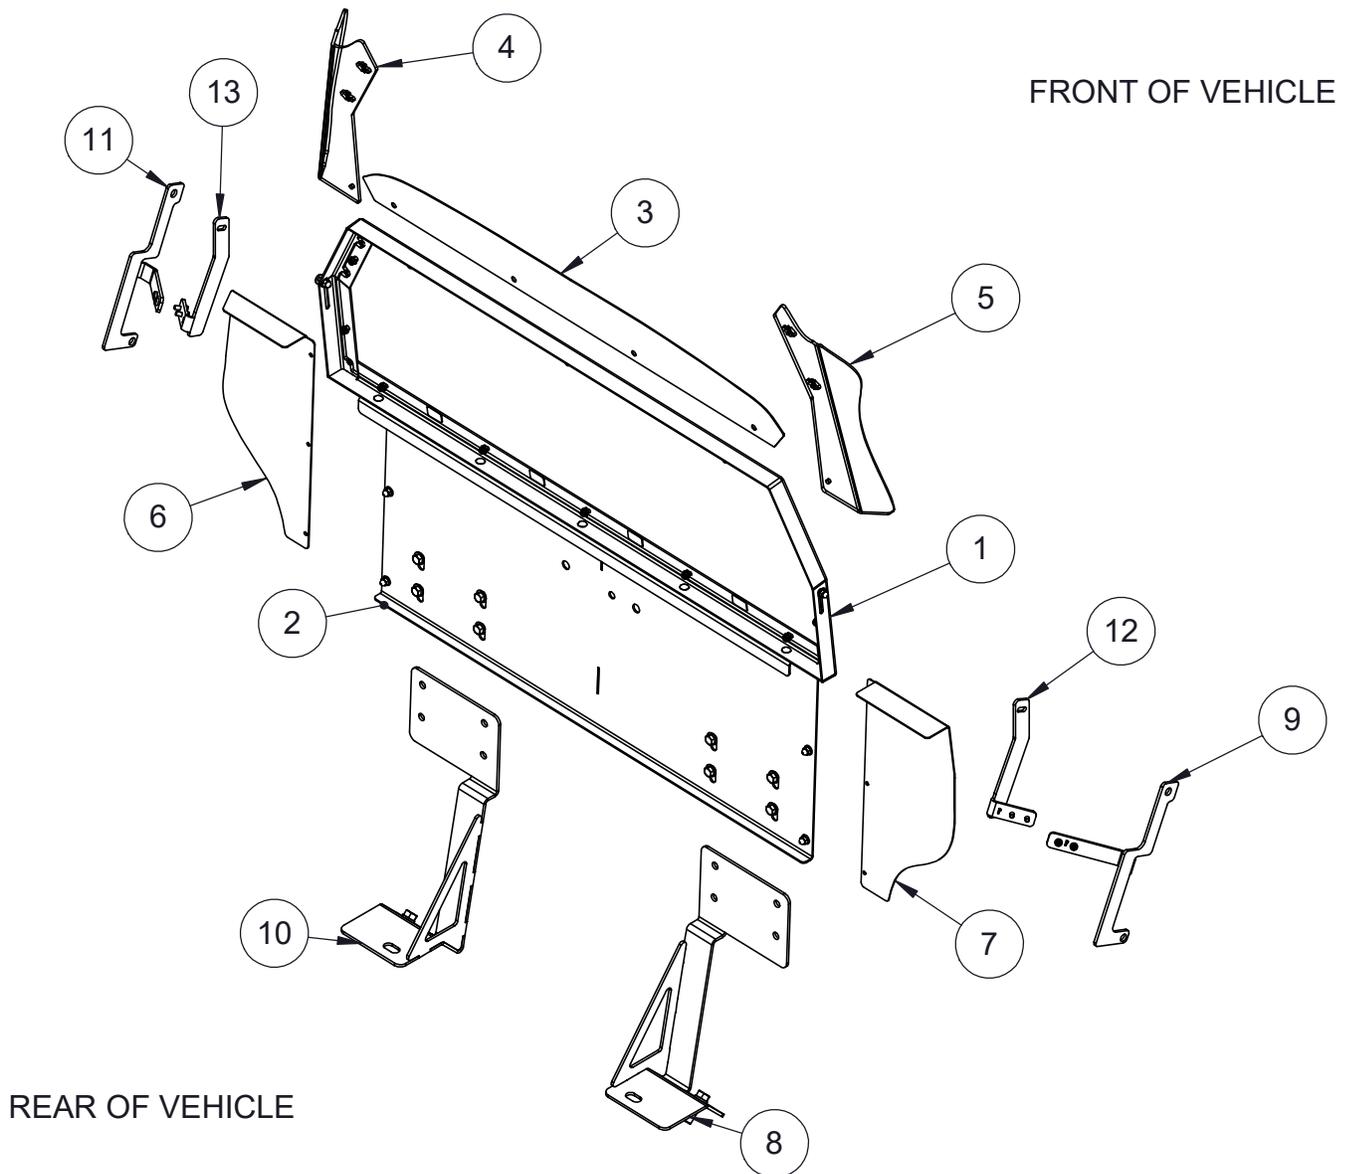

1. Remove all interior trim from the C-pillar to the rear of the vehicle. Remove both cargo storage tubs. Do not remove the OEM vinyl floor.

2. Cut the vinyl floor as shown in Fig 1 (6" wide and 1.5" over from OEM cutout). Repeat process for opposite side of the vehicle.

3. Install both LOWER MOUNTING BRACKETS (Item 8 & 10 ) using (1) 1/2" bolt each. See Fig 2.



Fig 1.

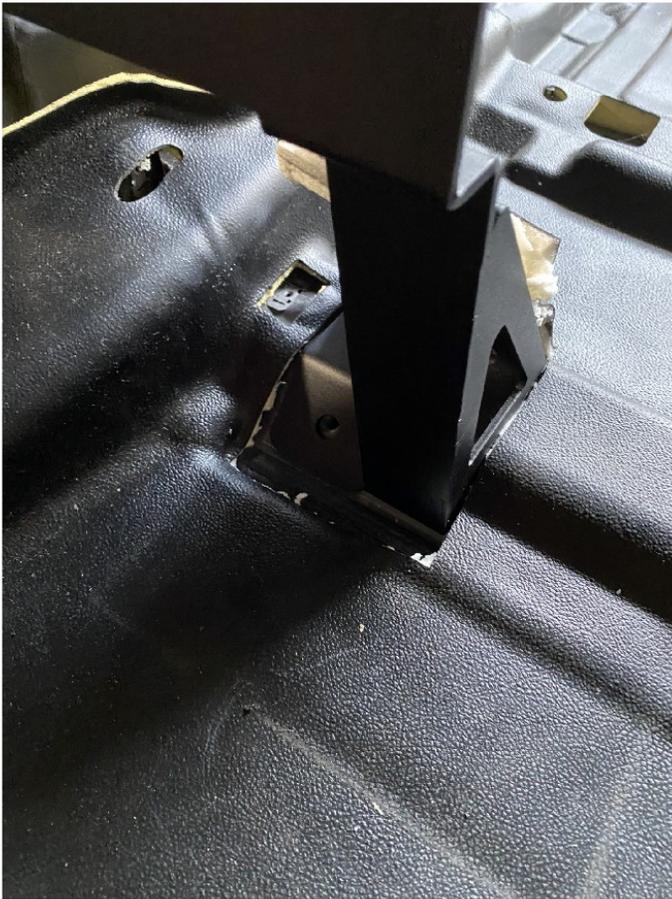


Fig 2.

4. Remove the seat belt fastener outlined on the right, then place UPPER BRACKET VEHICLE SIDES (Items 9 & 11 ) against the frame and reinstall the bolts. Repeat this process on the opposite side of the vehicle. (Driver and passenger parts labeled with a "D" and "P", respectively)



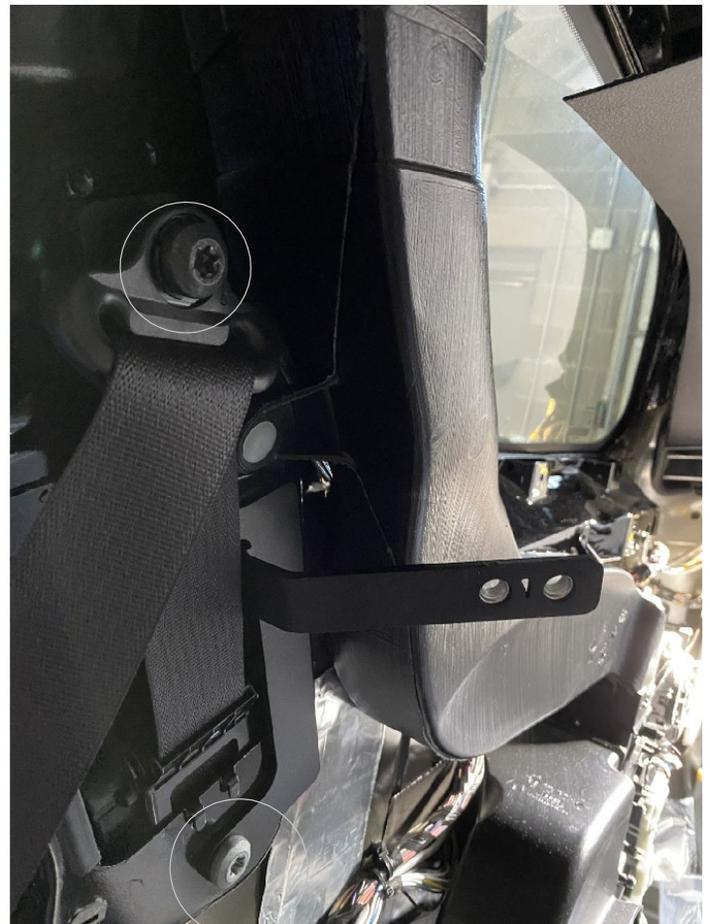


Fig 3.

DRIVER SIDE

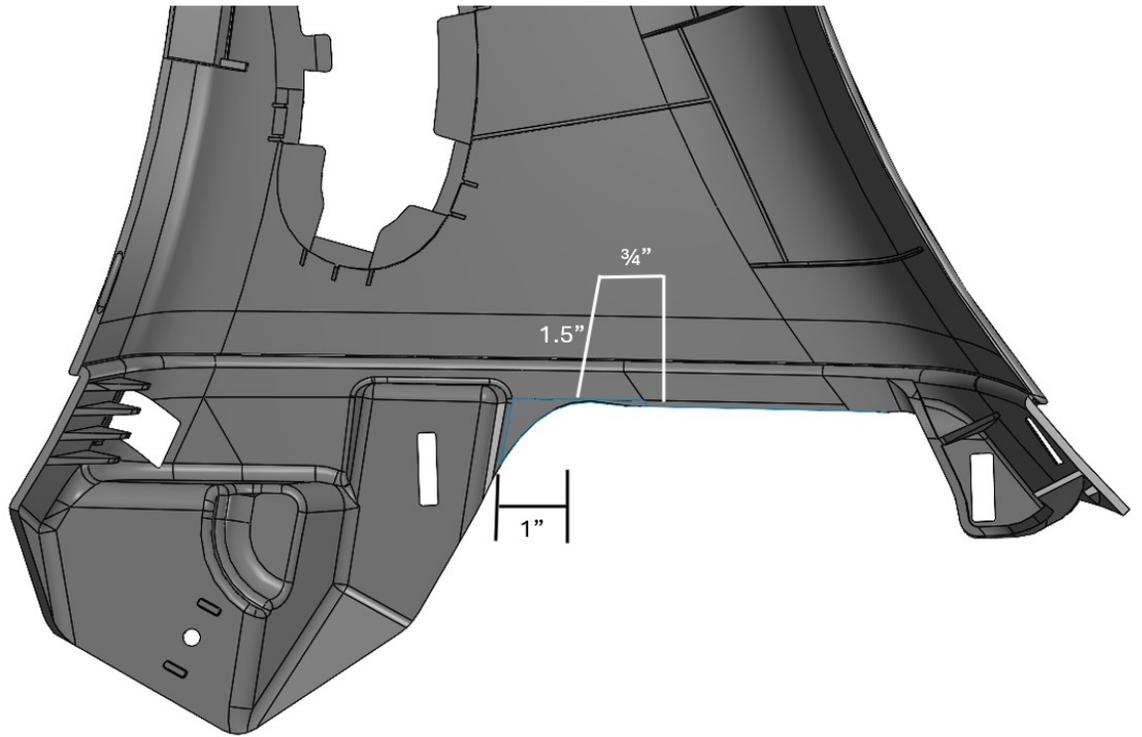

PASSENGER SIDE

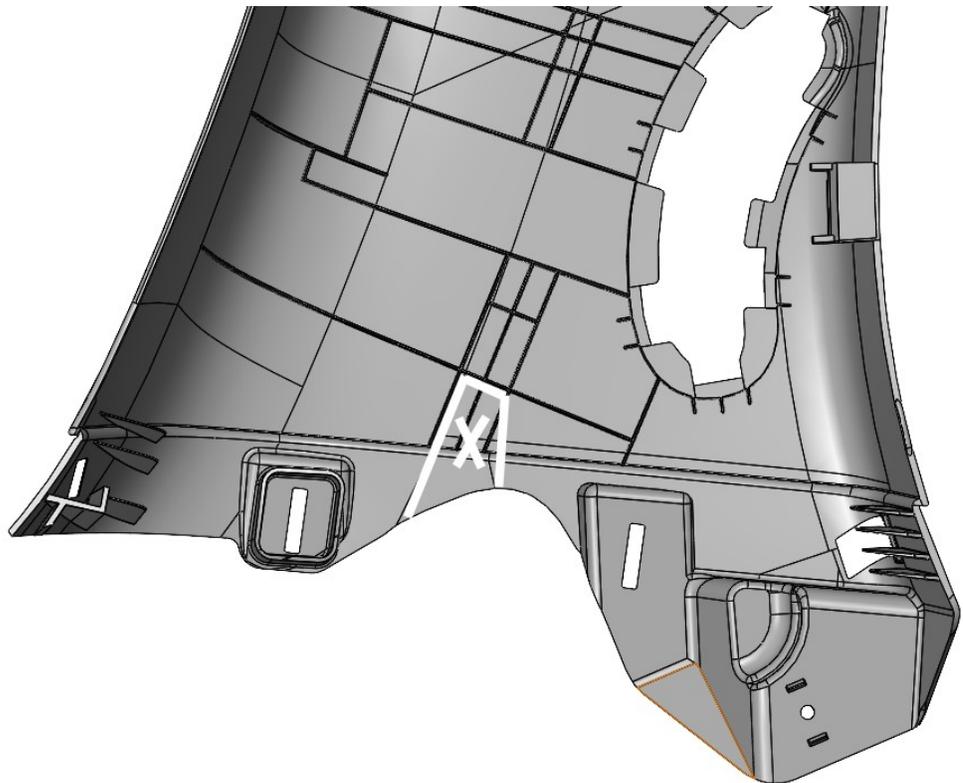

5. Cut the upper C-pillar trim for both the driver and passenger side as shown above.

6. Reinstall upper C-pillar trim panels.

Passenger Side



Driver Side



7. Reinstall the remaining interior trim panels and storage bins.



8. Trim the forward most floor panel as shown below. Using the third formed pocket to the left and right of the center line of the part as a guide. This provides clearance for the Lower Brackets




9. Reinstall the floor panels. The LOWER BRACKETS might need to be loosened to install the floor panel piece shown above.

10. Install MAIN BARRIER (item **2**) using (8) of the 3/8" bolts and washers, as outlined below.



11. Attach the WINDOW ASSEMBLY (item 1) to the MAIN BARRIER using the supplied 1/4-20 hardware from the hardware bag.

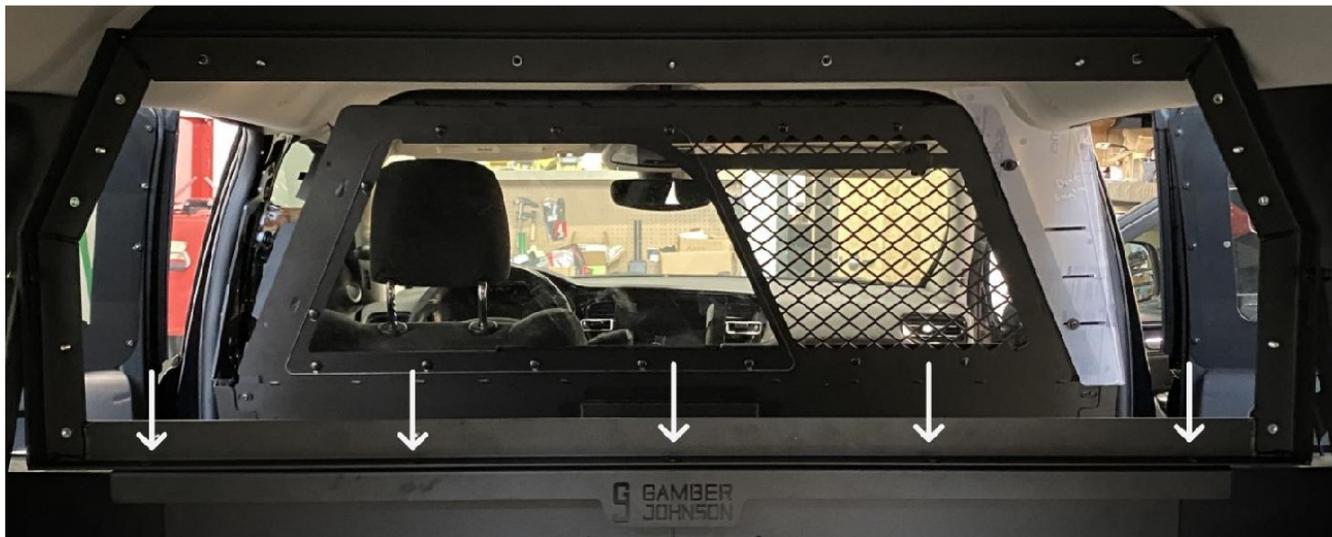

12. Then attach the UPPER BRACKETS (items 12 and 13) to the already installed brackets using four 1/4-20 bolts and washers, as shown to the right.

13. Attach the UPPER VEHICLE BRACKETS to the WINDOW ASSEMBLY using the same 1/4-20 bolts, nylok nuts and four washers (placing washers between the bolt and window assembly and nut and upper bracket).



Passenger Side

14. Install LOWER FILLER PANELS (Items 6 and 7) using (6) #10 washers and #10 nylok nuts.



15. Then attach the UPPER FILLER PANEL (Item 3) using (4) #10 washers and #10 screws, as shown below.



16. Remove the protective film from both sides of the UPPER POLY WINGS (Items 4 and 5). For each, use the same (3) #10 screws and #10 washers.

Passenger  
side



Driver  
side



INSTALLATION IS COMPLETE