



# INSTALLATION INSTRUCTIONS

**Product**

7160-2096, 7160-2198  
VEHICLE BASE & SUPPORT BRACKET - CHEVY EV BLAZER 25+


**Revision**

Rev A

**Form**

INST-1243

**Printing Spec:** PS-001

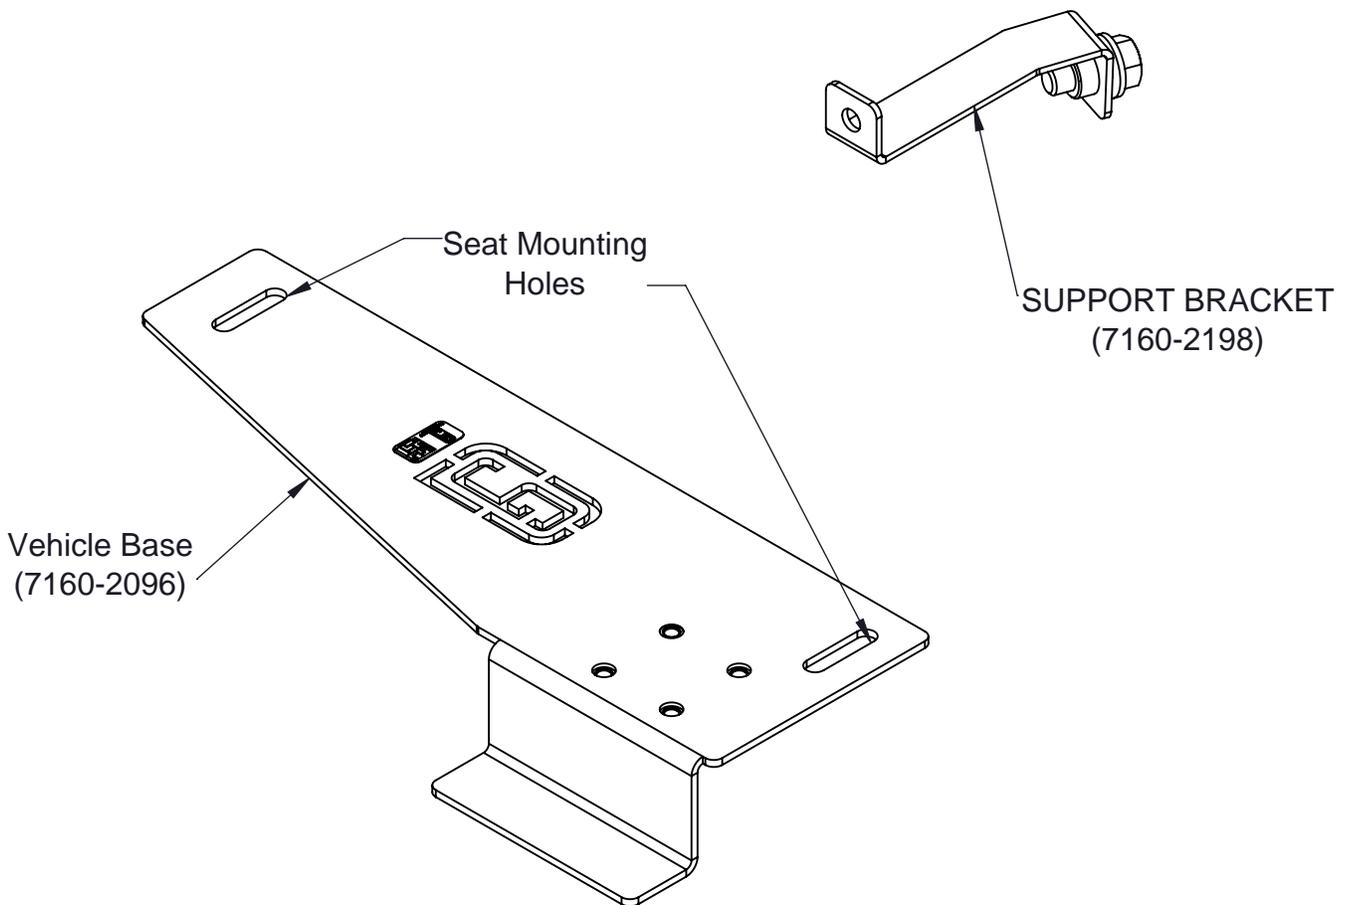

**Product Mounting Disclaimer**

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.


© Copyright 2025 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868



# INSTALLATION STEPS

1. Remove the two front passenger seat bolts and loosen the back two.

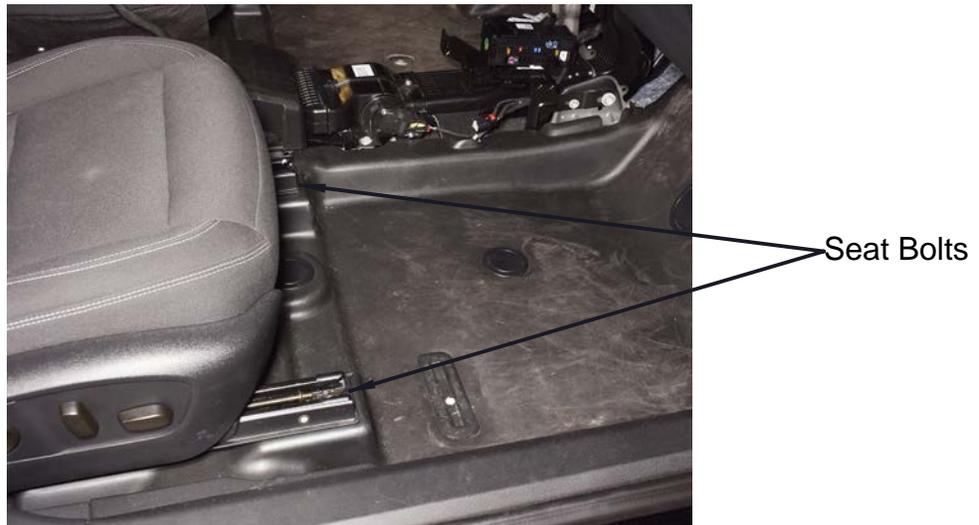


2. Place the Vehicle Base between the floor and passenger seat rails, lining up front seat bolts with slots in base.

3. Reinstall the passenger seat bolts and tighten all bolts to OEM torque specs.



4A. 7160-2198 Support Brace - In vehicles with an OEM console: Remove the cover and bolt indicated below.

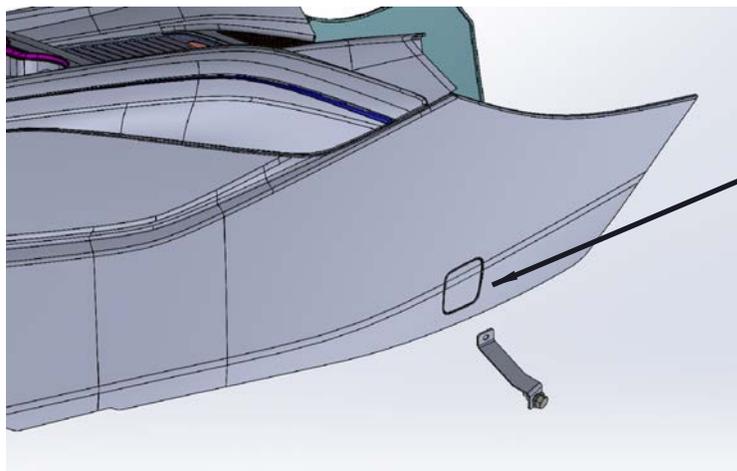


Remove Plastic Cover and Bolt

4B. 7160-2198 Support Brace - In vehicles with a GJ console already installed: Remove the OEM bolt used to attach the passenger side console wing to the vehicle.



Remove Bolt

5A/B. Using the same OEM bolt, attach the Support Bracket and tighten to OEM specifications.

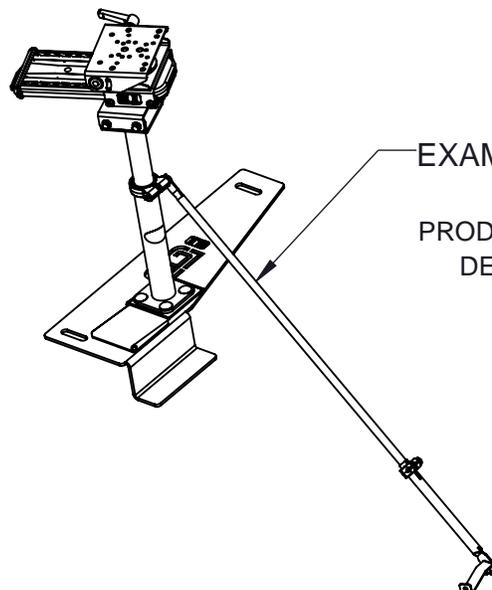

EXAMPLE ASSEMBLY:

PRODUCTS COULD VARY  
DEPENDING ON KIT