




# INSTALLATION INSTRUCTIONS

<b><u>Product</u></b> 7160-2175, 7160-1602 VEHICLE BASE - CHEVY TAHOE AND SILVERADO 2025+	<b><u>Revision</u></b> Rev B	<b><u>Form</u></b> INST-1299 <b>Printing Spec: PS-001</b>
---	---------------------------------	---

ITEM	QTY	PartNo	DESCRIPTION
1	1	7160-2175	VEHICLE BASE - CHEVY TAHOE AND SILVERADO 2025+
2	1	7160-1602	BRACKET KIT - 2021+ TAHOE KIT VEHICLE BASE SUPPORT

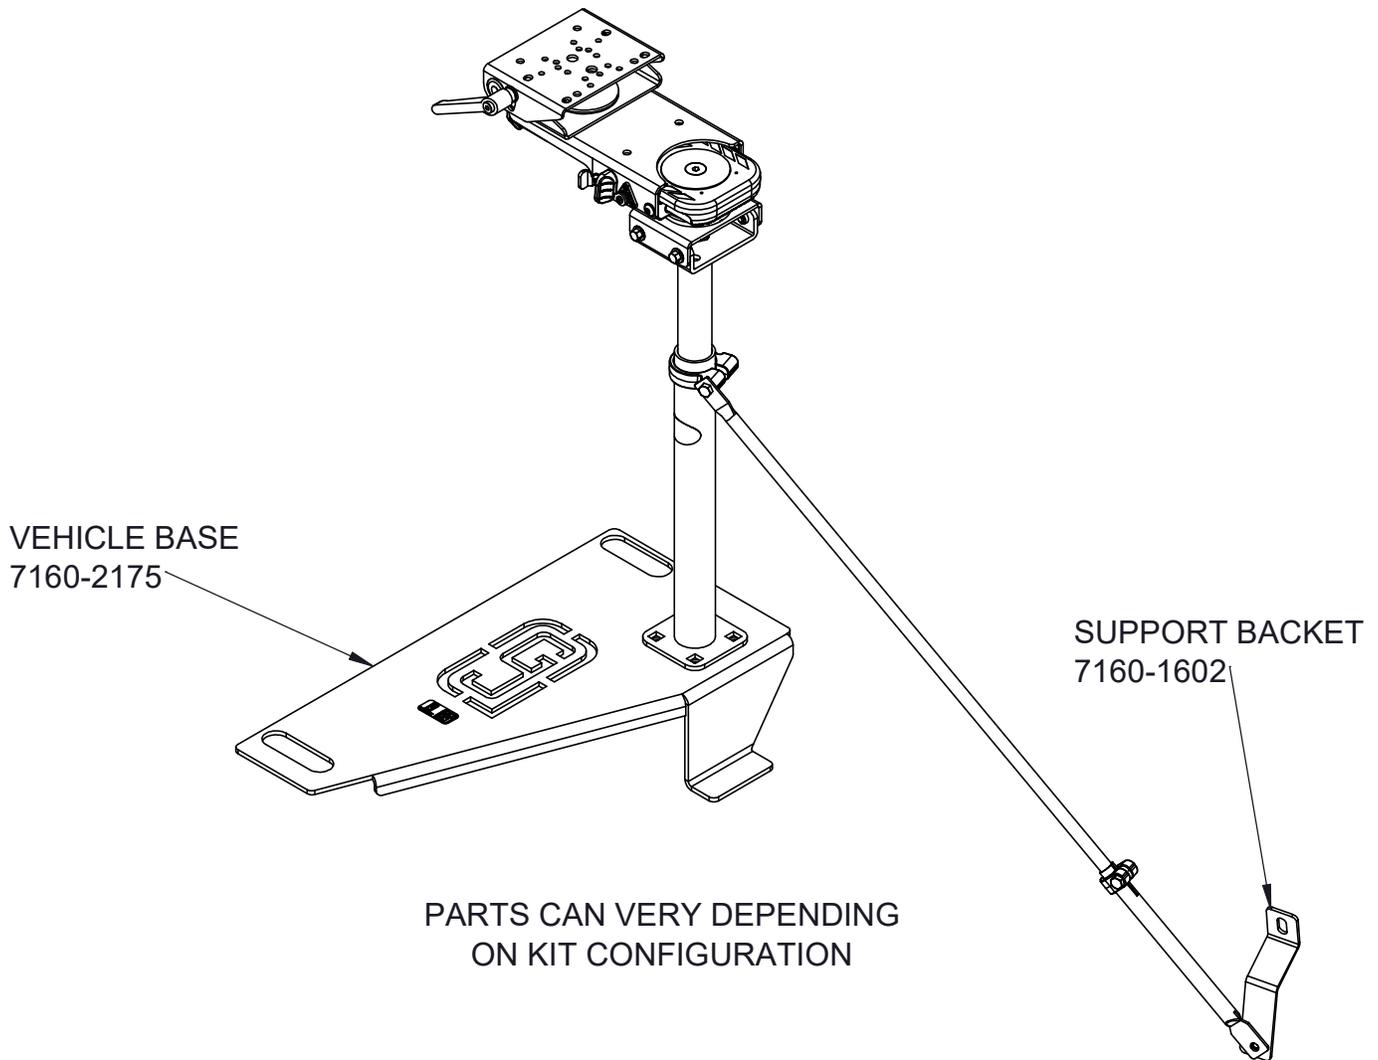

**Product Mounting Disclaimer**

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2025 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868



## VEHICLE BASE INSTALLATION:

1. On the passenger side of the vehicle, remove the two front seat bolts and loosen the rear seat bolts.



2. Place the VEHICLE BASE between the floor and passenger seat rails



3. Reinstall the passenger seat bolts and torque to OEM specification.

## OPTIONAL SUPPORT BRACKET INSTALLATION:

4. Remove OEM trim from the driver side footwell (left) to gain access to the SUPPORT BRACE mounting location (right).




VIEWED FROM DRIVER SIDE




VIEWED FROM PASSENGER SIDE

5. Install Support Bracket (as shown) using the OEM fastener.



6. Assemble and fasten SUPPORT BRACE to the SUPPORT BRACKET using the provided hardware.

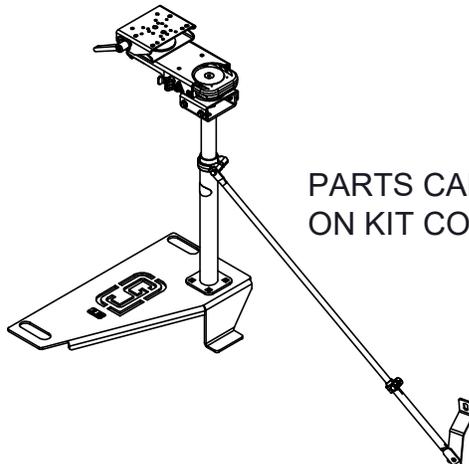

PARTS CAN VARY DEPENDING ON KIT CONFIGURATION