




PRODUCT GUIDE

CARGO WINDOW GUARD – RIVIAN R1T 2024+

PRODUCT NUMBER

7160-2253

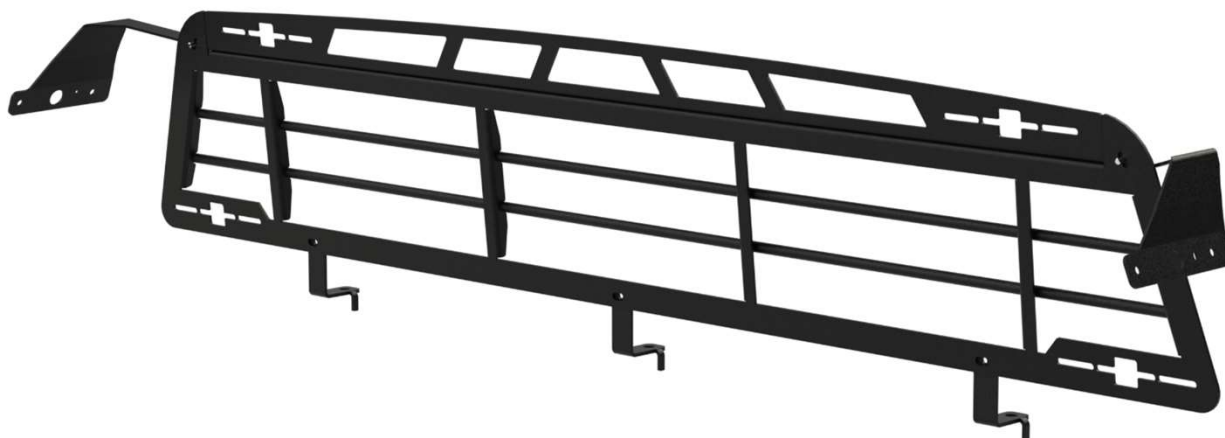

For more language options and/or questions, please contact a Gamber-Johnson representative at **+1 800.756.9198**

Since 1954, we have been dedicated to providing **RUGGED**, **RELIABLE**, and **RESPONSIVE** solutions that empower professionals in the field.

Thank you for choosing Gamber-Johnson.

Welcome to your new **Gamber-Johnson Cargo Window Guard**, engineered for **mission-critical reliability** in the toughest environments. At Gamber-Johnson, we understand that your technology is more than a tool; it's a lifeline. That's why our rugged mounting solutions and docking stations are designed to integrate seamlessly with your equipment, ensuring **secure connections** and **reliable performance** wherever your job takes you.

This guide will walk you through the safe and effective installation of your **Cargo Window Guard**.

Inside, you'll find:


- Inventory list of what's included
- Step-by-step installation instructions
- Images for easy reference
- Essential safety information to ensure proper setup and operation

Our commitment to **quality**, **durability**, and **rugged reliability** is built into every product we make.

Important: Before you begin, please carefully review all safety instructions provided in this guide. For vehicle applications, we recommend professional installation by qualified technicians with experience in automotive electrical systems and aftermarket vehicle equipment installation.


For additional product information, installation tips, or support, please contact your Gamber-Johnson representative at **+1 800.756.9198** or visit **www.gamberjohnson.com**.

PAGE	SECTION
1	Cover Page
2	Introduction
3	Table Of Contents
4	Components Included
5	Safety Information
6-9	Installation
10	Warranty

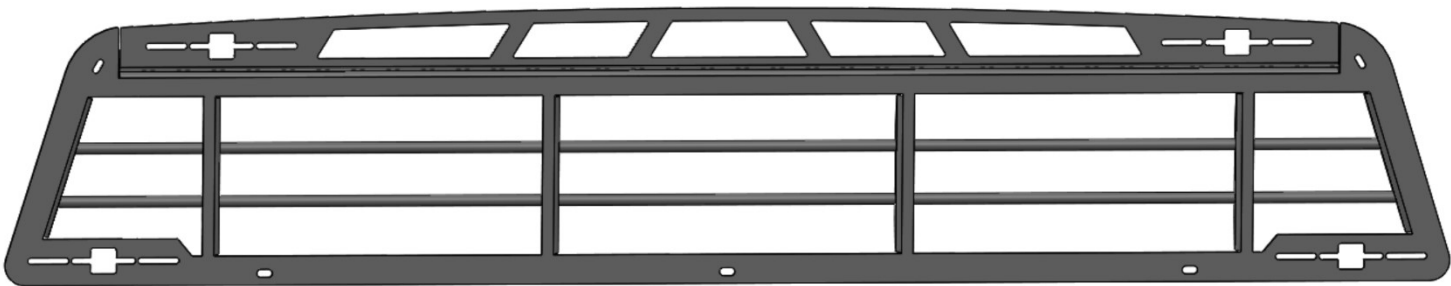


(Shipped assembled)


QTY	P/N	DESCRIPTION
1	30285	Cargo Window Guard
1	30286	Upper Guard

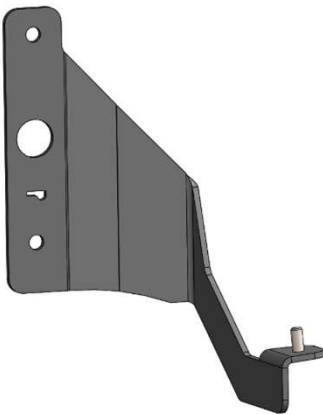

QTY	P/N	DESCRIPTION
1	30289	Passenger Side Bracket

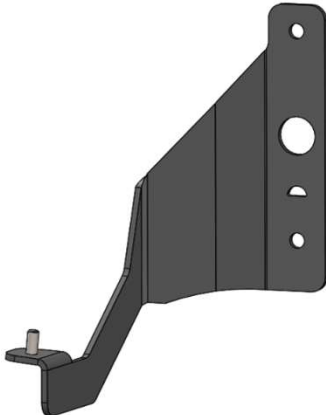

QTY	P/N	DESCRIPTION
1	30288	Driver Side Bracket

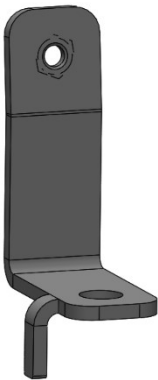

QTY	P/N	DESCRIPTION
3	30287	Lower Bracket



QTY	P/N	DESCRIPTION
1	7120-1332	Cargo Window Guard Hardware Bag

WARNING

You must read and follow all of these installation instructions. Failure to follow the installation instructions may result in serious bodily injury or death

DO NOT install or use this assembly in the area in which the airbag on the vehicle may be deployed. The installer and user of this assembly are responsible for installing and using this assembly outside the area in which an airbag may be deployed. (See Product Mounting Disclaimer Below)

If the installation of the equipment requires that the equipment (or any additional equipment that is added to the installation) be placed in front of an airbag, the airbag should be deactivated. In order to secure permission for deactivating the airbag you must contact the National Highway Traffic Safety Administration at 1-800-424-9393 to gain permission to do so. If you have any questions or need assistance, call Gamber-Johnson at **+1 800-756-9198**.

High speed vehicle turns may cause parts of the assembly to swivel, interfering with the driver or other equipment.

Keep these installation instructions with the product and readily available in the vehicle for future reference of other users of the product.

Additional copies of the installation instruction can be obtained from Gamber-Johnson. If you need assistance or have any questions, go to www.gamberjohnson.com or call Gamber-Johnson at **+1 800-756-9198**.

DO NOT remove any warning labels from the product under any circumstances.



Figure 1



Figure 2



Figure 3

1. Remove both rear sill plates by gently prying near the highlighted clips. Driver side shown. (Figure 1)
2. Fold the lower portion of the rear seat forward. (Figure 2)
3. Remove the headrests from the rear seats. (Figure 3)



Figure 4



Figure 5

1. Remove the trim cover on both the driver and passenger side by gently prying near the highlighted clips. (Figure 4)
2. Unplug the 2 electrical connectors shown. (Figure 5)



Figure 6

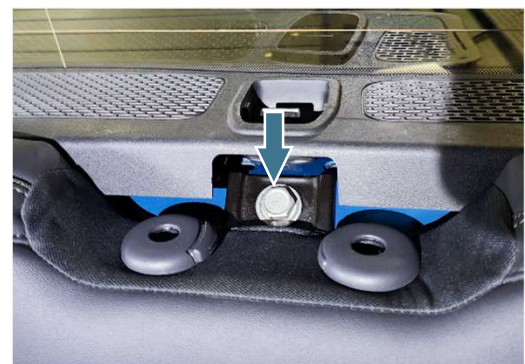


Figure 7

1. Remove the 2 nuts and 1 bolt securing the lower part of the rear seat back. (Figure 6)
2. Remove the 2 bolts securing the upper part of the rear seat back. Driver side shown. Use caution while removing bolts. Do not exceed 45 Nm force. Refer to FSM if force will exceed 45 Nm. (Figure 7)
3. Remove the rear seat back from the vehicle.

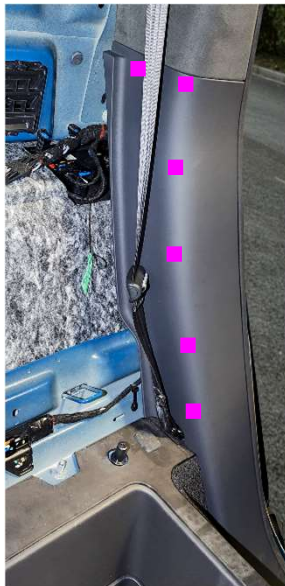


Figure 8

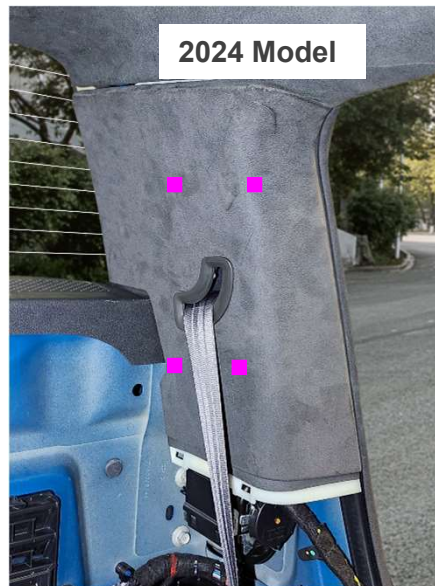


Figure 9

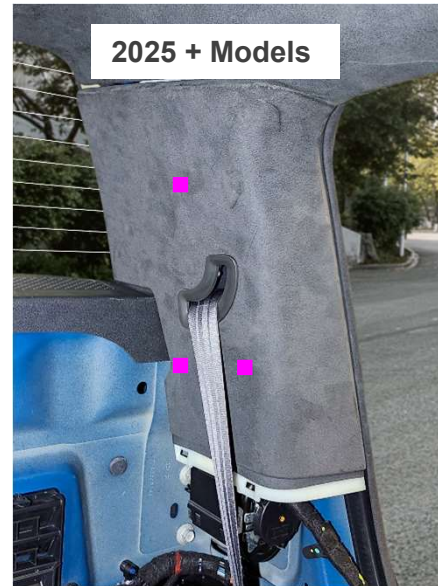


Figure 10

1. Remove both rear lower C-pillar trim panels by gently prying near the highlighted clips. Driver side shown. (Figure 8)
2. Remove both rear upper C-pillar trim panels by gently prying near the highlighted clips. Driver side shown. (Figures 9 and 10)
3. The upper trim panels may remain attached to the seatbelts.

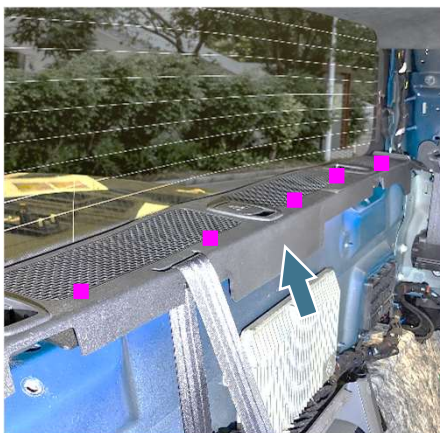


Figure 11



Figure 12

1. Remove the Package Tray Panel by prying gently near the highlighted clips. (Figure 11)
2. Remove the 3 bolts securing the child seat hooks. Retain the bolts to use later. The hooks may be discarded. (Figure 12)



Figure 13



Figure 14

1. Install the 3 lower brackets in the locations the child seat brackets were removed from using the bolts retained. Ensure the locating tab is in the hole on the body of the vehicle while tightening. (Figure 13)
2. Remove the covers from the child seat bracket access locations on the Package Tray Panel. They may be discarded.
3. Reinstall the Package Tray Panel ensuring the 3 lower brackets protrude from the panel.

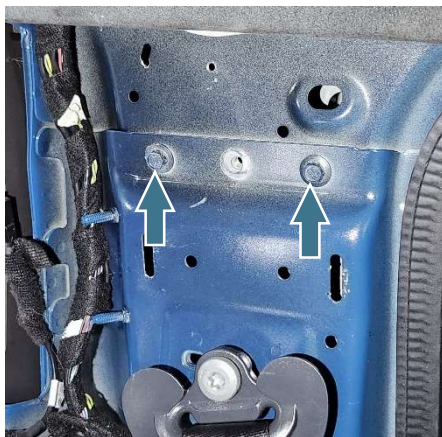


Figure 15



Figure 16

1. Remove the 2 bolts shown on the upper C-pillars. (Figure 15)
2. Install the driver and passenger side upper bracket using the previously removed bolts. Driver side shown. (Figure 16)
3. Reassemble the remaining trim panels in the reverse order of disassembly.
4. Reinstall the rear seat in the reverse order of disassembly except for the headrests.

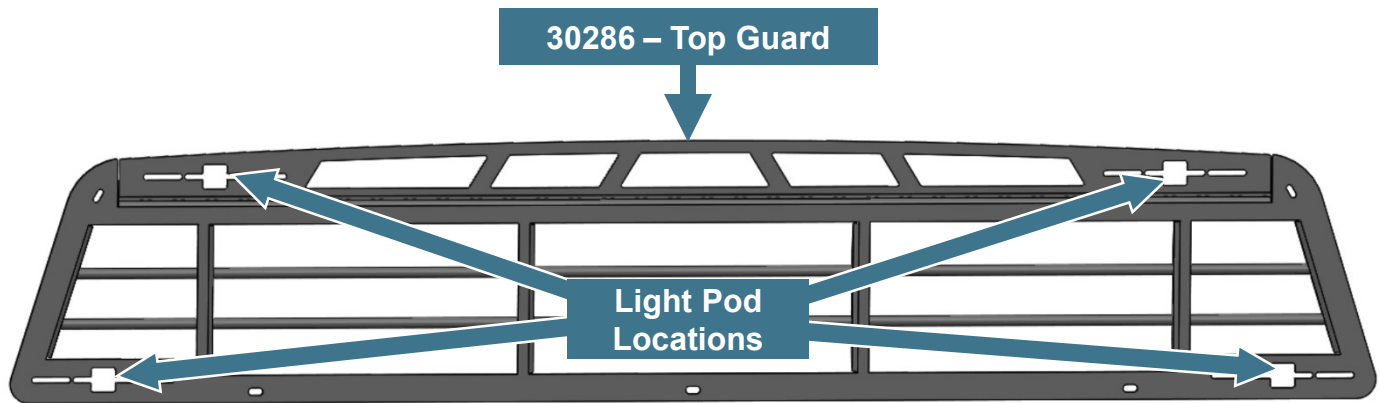


Figure 17

1. (Optional) Attach lights to the back side of the cargo guard and/or the top guard. If using a full light bar above the cargo guard, fully remove part 30286. (Figure 17)



Figure 18

1. Install the cargo guard over the 2 studs on the driver and passenger side upper brackets. Loosely install the #10 flat washers and #10-32 nylok cap nuts from hardware bag 7120-1332 onto the studs. Loosely install the 3 button head 1/4"-20 X 0.375" screws from hardware bag 7120-1332 into the lower brackets. Tighten all hardware. (Figure 18)
2. Installation is complete.



SCAN HERE TO VIEW WARRANTY INFORMATION

www.gamberjohnson.com/product-services/warranty-information

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2026 Gamber-Johnson, LLC

QUESTIONS OR NEED MORE INFORMATION?

NO PROBLEM, WE'RE HERE TO HELP!

Call us at: **+1 800.756.9198**

Email us at: sales@gamberjohnson.com

Visit www.gamberjohnson.com to see our complete line of solutions and hang with us on social media at [@gamberjohnson](https://www.instagram.com/gamberjohnson)