



INSTALLATION INSTRUCTIONS

Product**7160-1278****Revision**

Rev.B

Form

INST-859


YALE/HYSTER 40-70 CAB MOUNT**Printing Spec:PS-001**

The 7160-1278 Yale/Hyster vehicle cab mount is designed to mount to the right front overhead guard leg on Yale GP040-070VX or Hyster H40-70FT series lift trucks with an enclosed cab. The mount attaches to the same locations as the windshield mounting brackets.

Attaching the mount:

1. Attach the adapter bracket to the guard leg bracket with the 5/16" hardware found in the hardware bag. The mount has multiple height mounting locations on the guard leg bracket. Pick the height level that best suites the equipment you have chosen to mount in the vehicle. See Figure 1.

Figure 1.

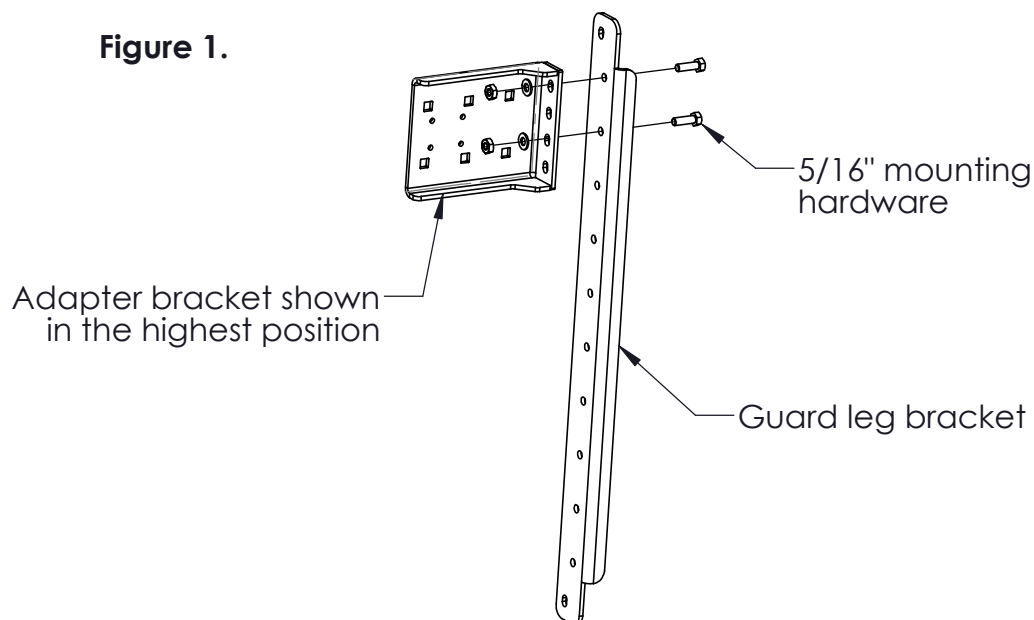

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2026 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

2. Remove the (2) windshield bracket mounting bolts that attach the windshield mounting brackets to the right front overhead guard leg.
3. Place the 7160-1278 over the windshield mounting brackets and re-install the bolts to hold both the mount and the windshield brackets.
4. An optional material handling motion attachment (ie. 7160-0420 or 7160-0366) can now be added to the mount to hold the device being mounted. See Figure 3.

Figure 2.

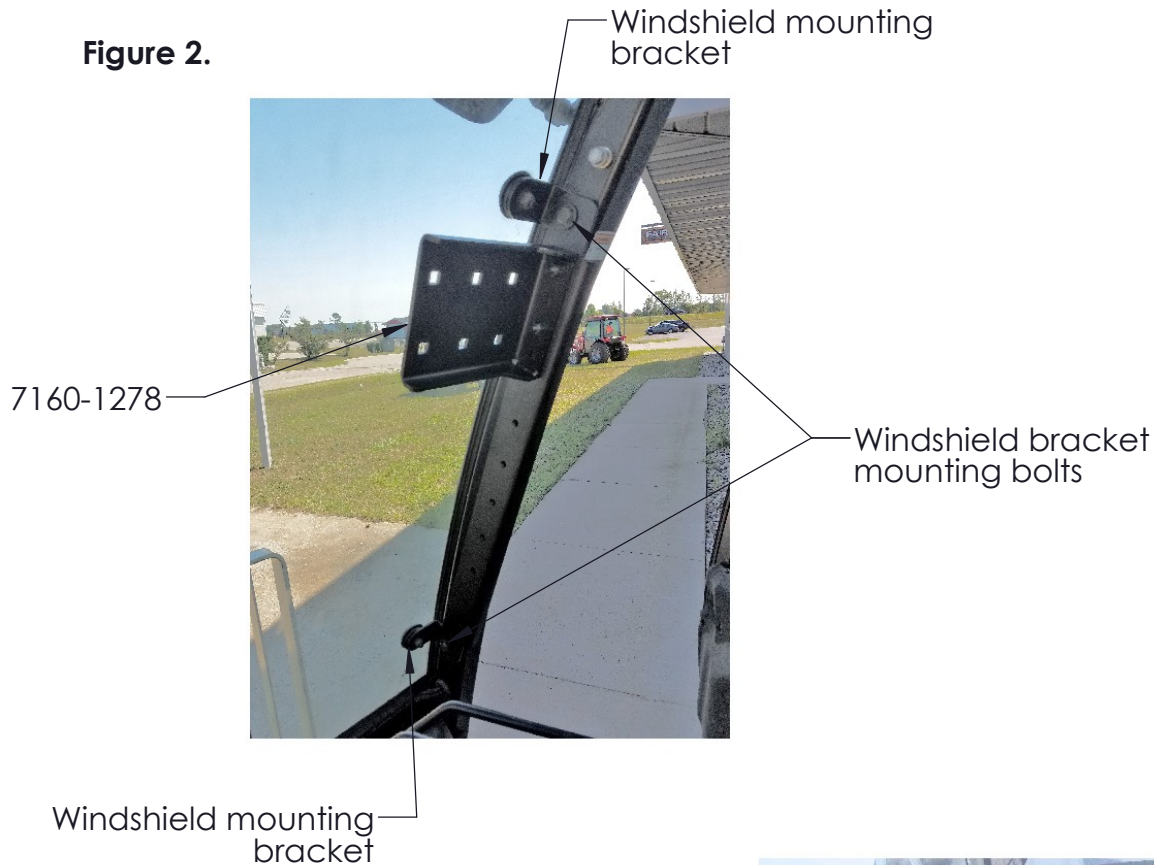


Figure 3.

