



INSTALLATION INSTRUCTIONS

Product
7160-1299

Revision
Rev. A

Form
INST-893

NOTEPAD™ TOUCH - UNIVERSAL TABLET CRADLE


Printing Spec: PS-001

This instruction sheet is for the NotePad Touch - Universal Tablet Cradle only. For instructions on features, set-up, and operation of the computer, please refer to the manual provided by tablet manufacturer.

This cradle is designed to be used with a variety of Gamber-Johnson mounting systems. Installation instructions for other Gamber-Johnson products are provided with each individual product.

This instruction sheet is for the following products:

Item No. 7160-1299-00 Small
Item No. 7160-1299-10 Large

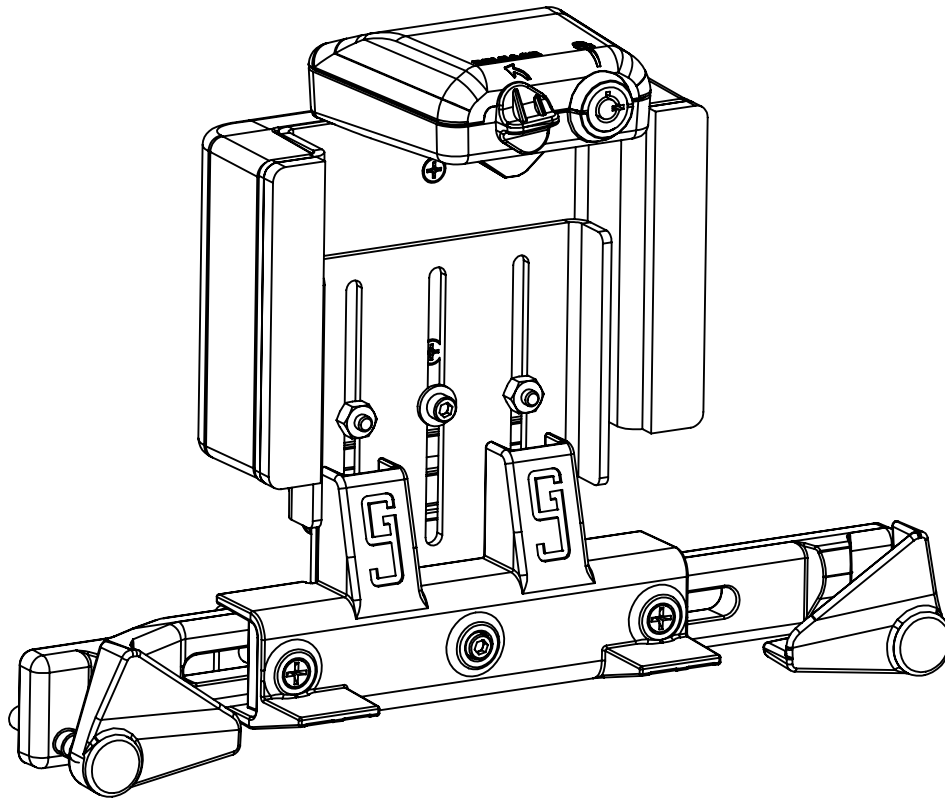



Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2019 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

FEATURE IDENTIFICATION

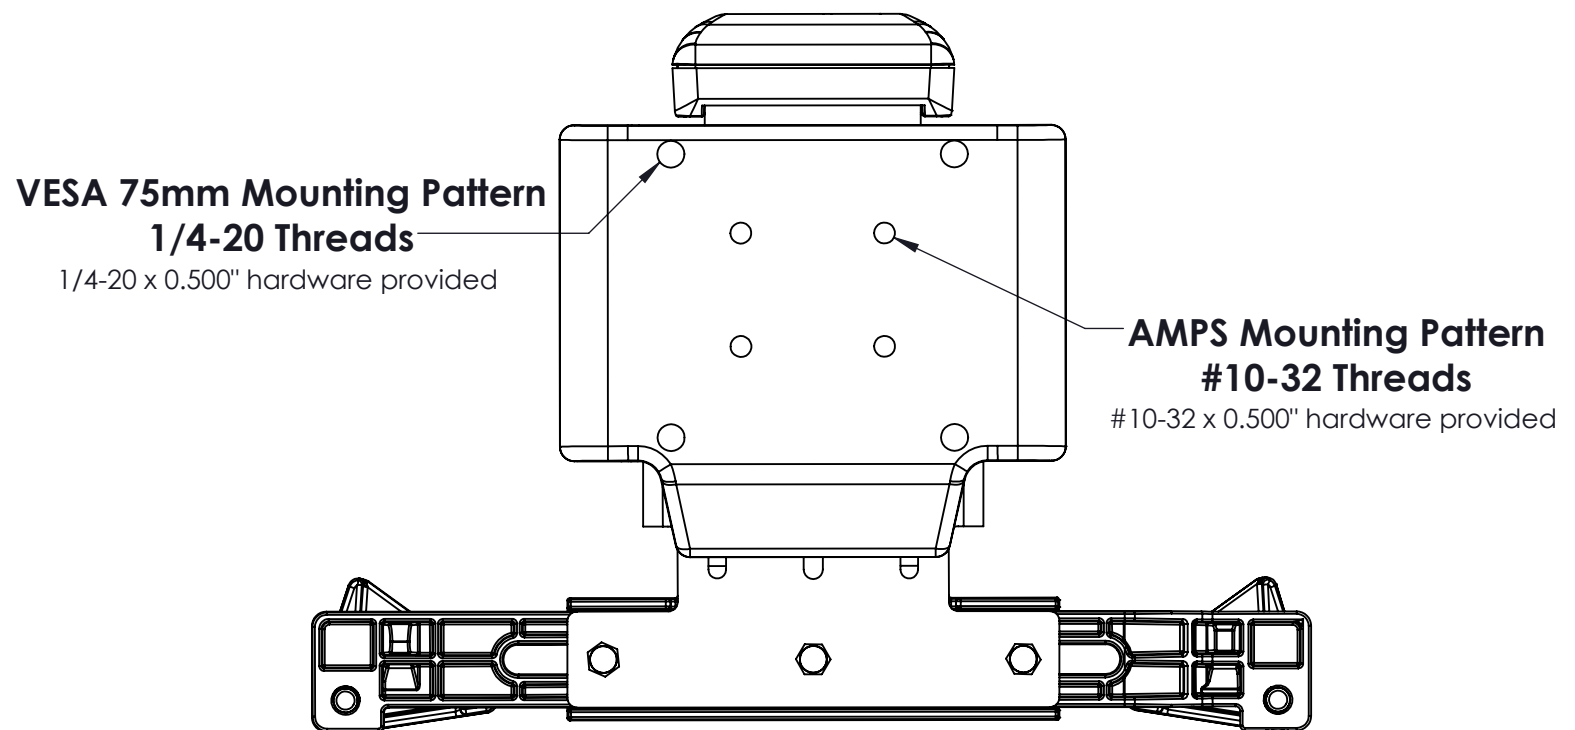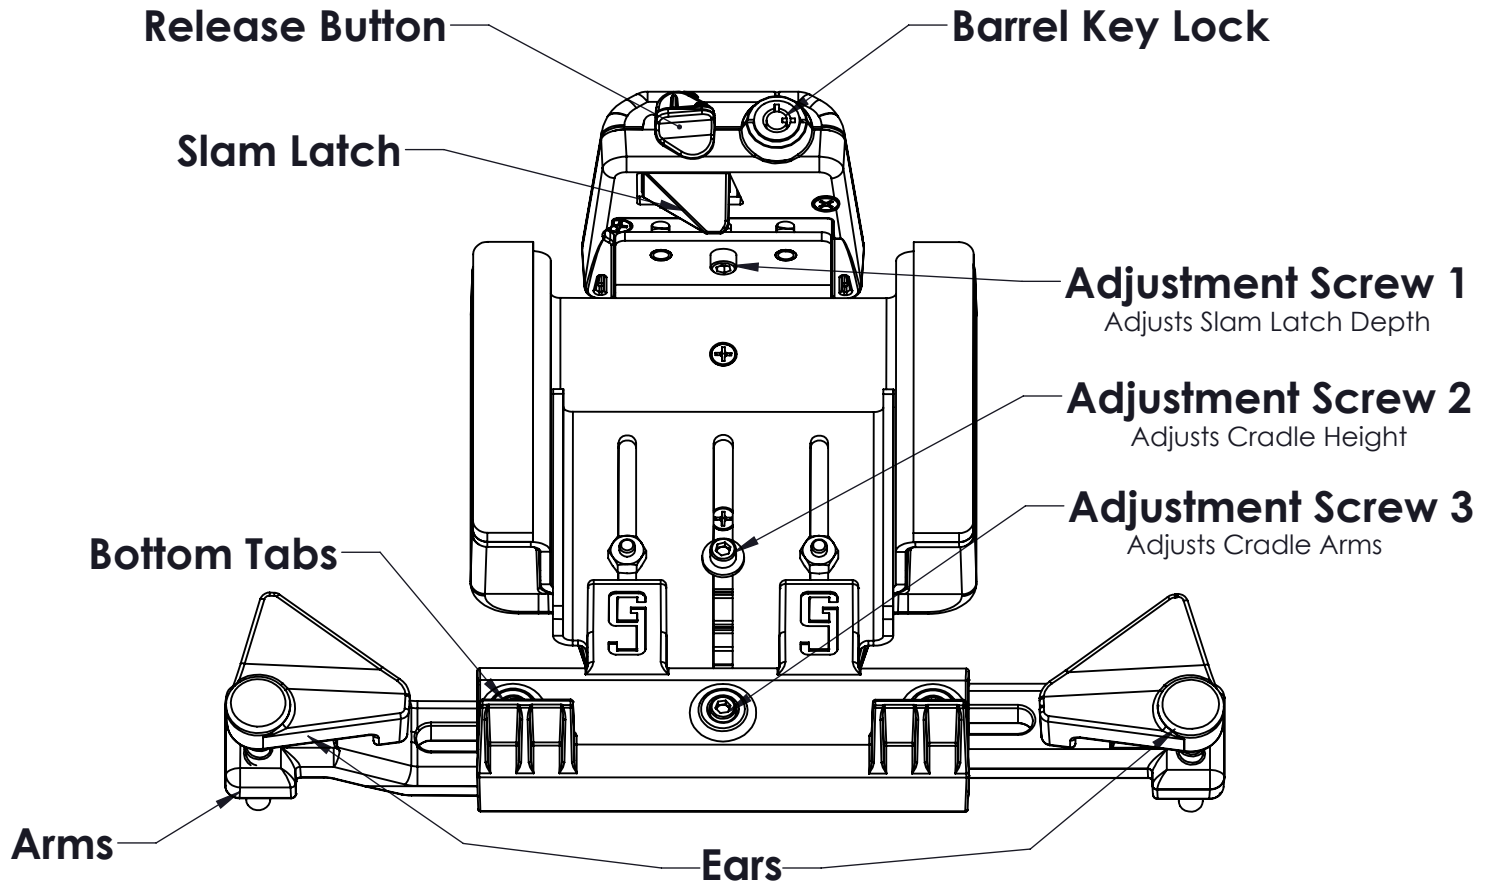


Adjustment Instructions


All adjustments are done with a 9/64 allen wrench (provided)

Example Using 7160-1299-00 With a 10" Tablet

1. Loosen 3 adjustment screws and fully extend cradle
- DO NOT fully remove screws

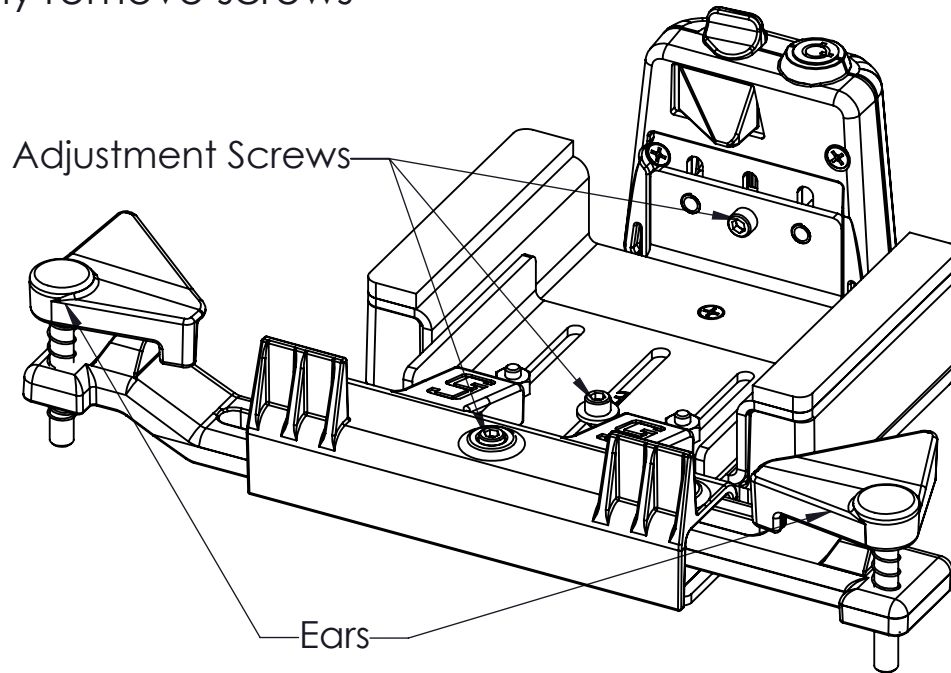


2. Rotate ears counter clockwise until the tablet can fit under them
- DO NOT fully remove ears
3. Place tablet in cradle and slide slam latch onto the front of the tablet
4. Hold slam latch in place and remove the tablet, tighten screw 1
- Fit check tablet


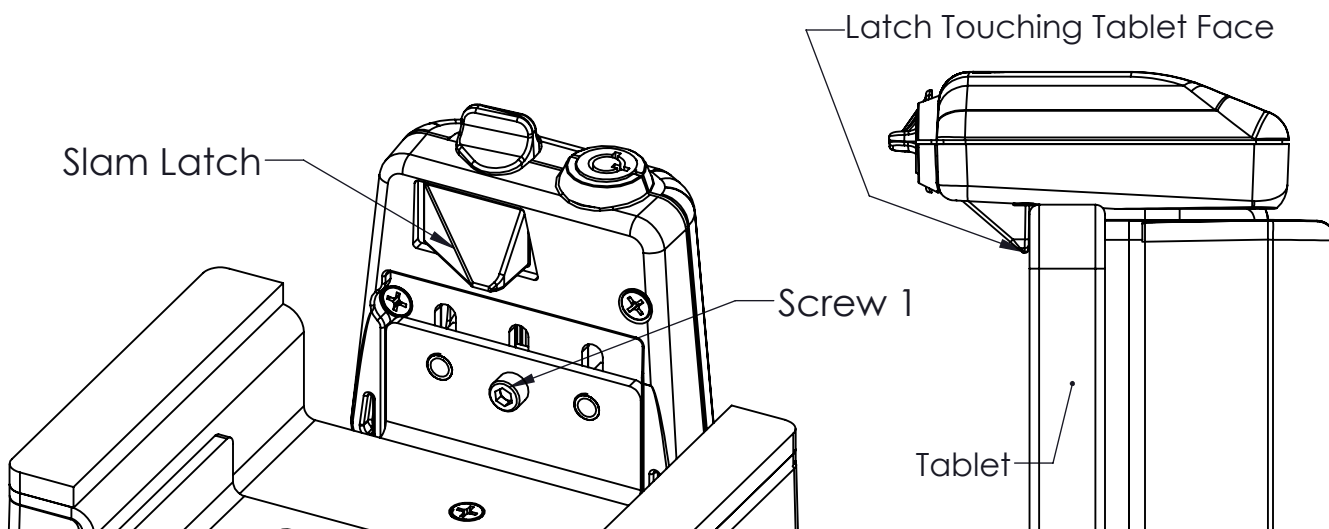


Adjustment Instructions

5. Place tablet in cradle and slide bottom tabs up until they contact the tablet
- Remove the tablet and tighten screw 2
 - Perform a fit check

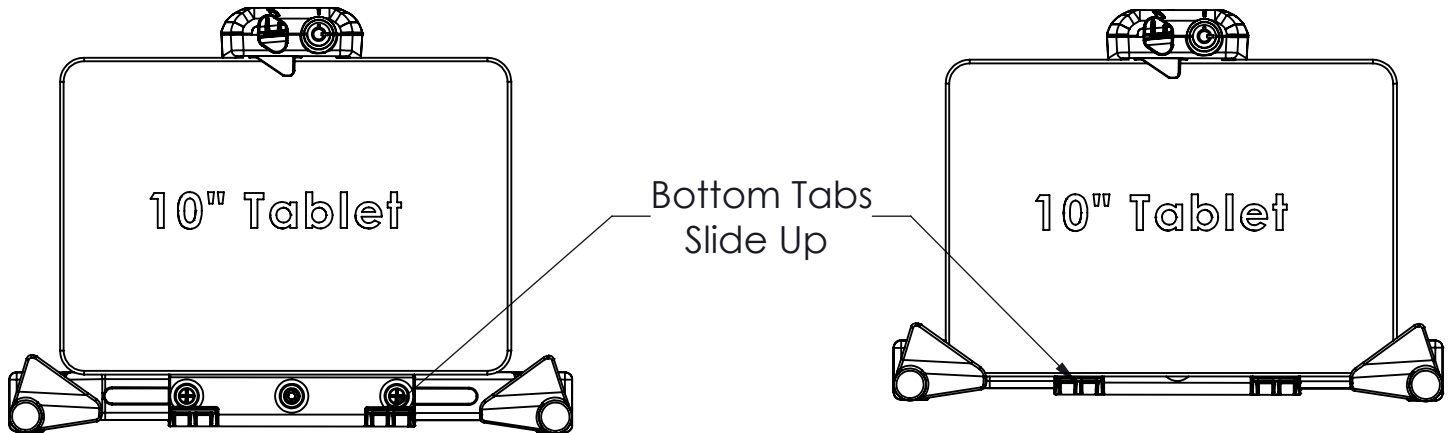


6. Place tablet in cradle and slide arms in until the ears contact the side of the tablet
- Remove the tablet and tighten screw 3
 - Perform a fit check

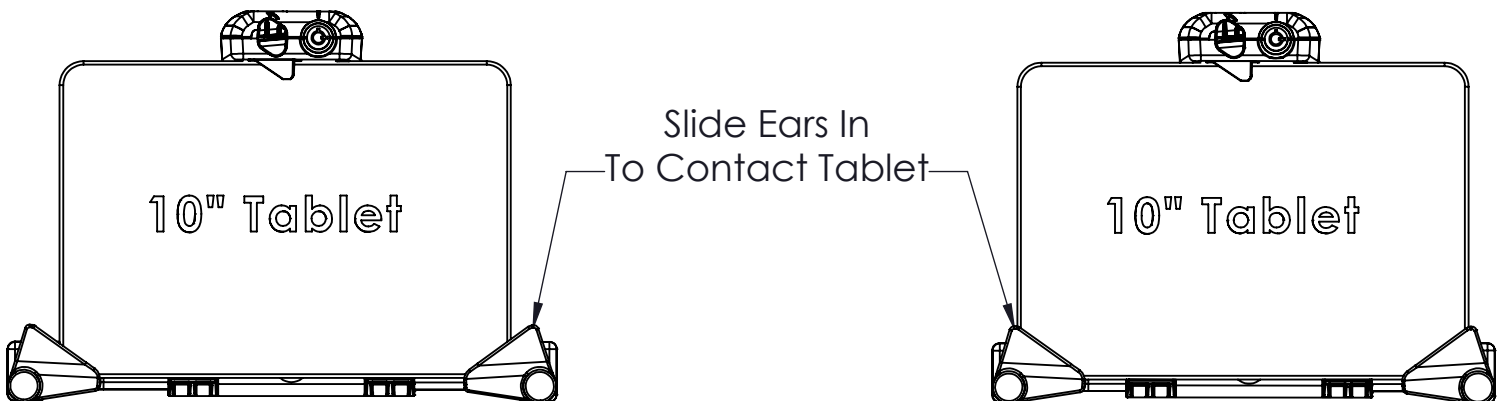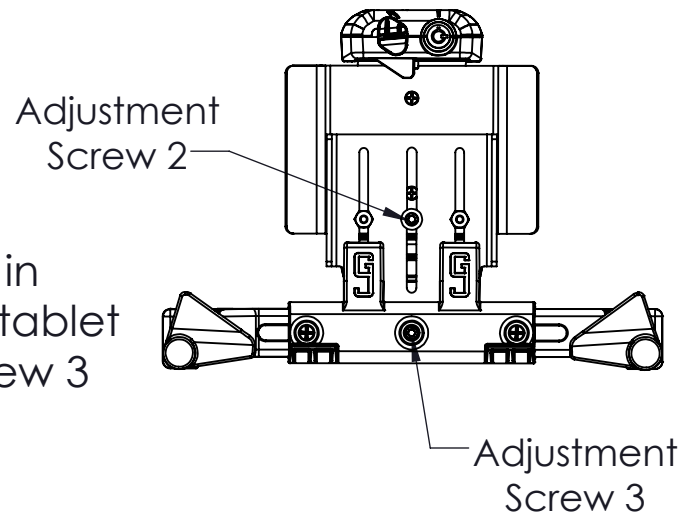


7. Double check the ears are at the correct depth
- Ears should be touching the front of the tablet but NOT pinching

Adjustment Instructions

8. (Optional) Thread 1/4-20 nuts onto ear bolt to lock rotation

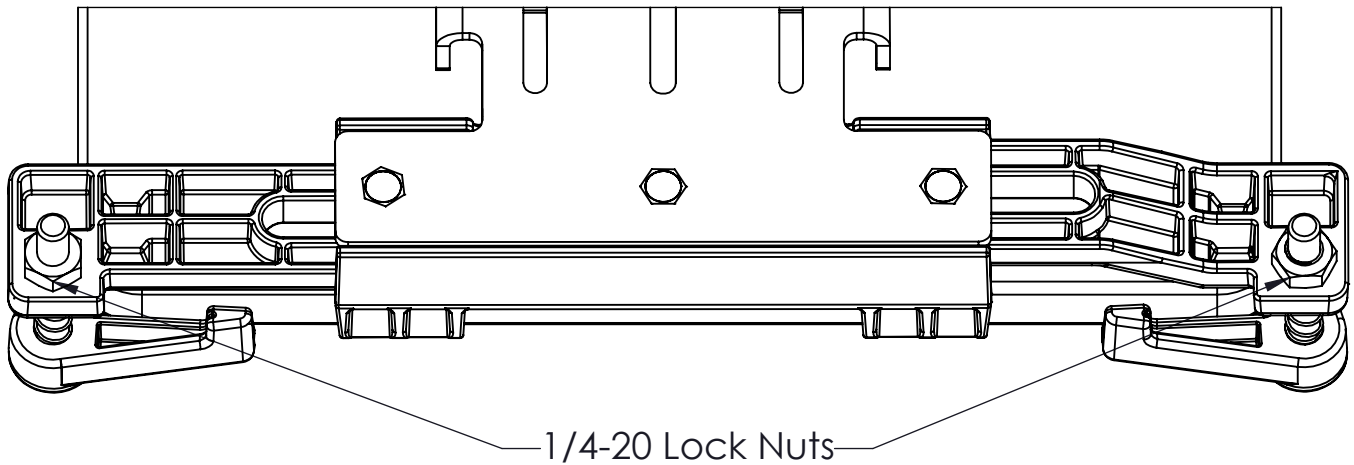

9. (Optional) Rotate the lock counter clockwise to lock the cradle

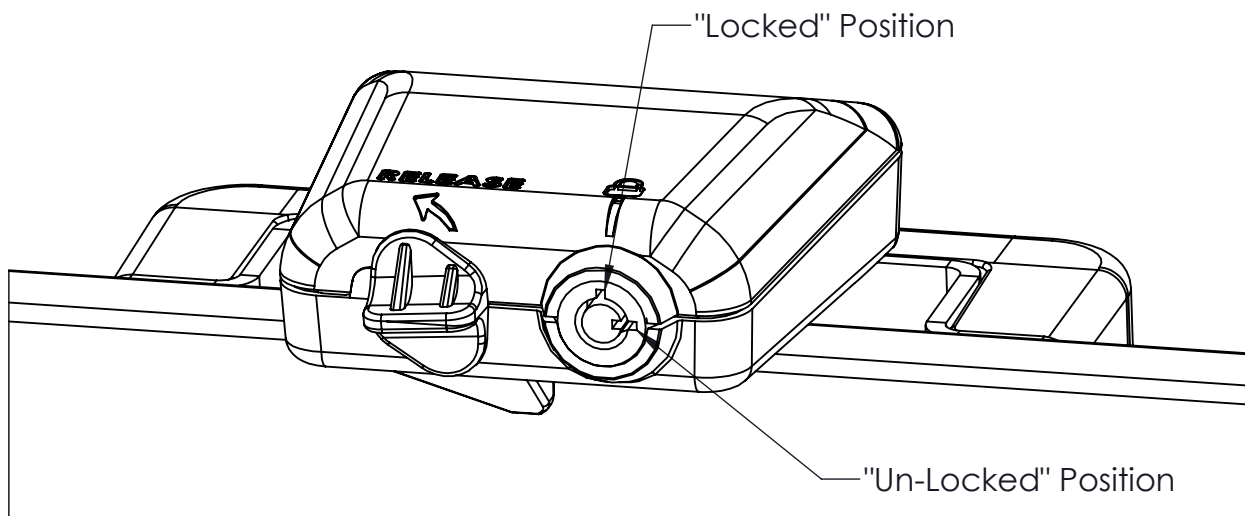

DOCKING AND UNDOCKING THE COMPUTER

OPERATION - DOCKING

1. Place the tablet into the bottom of the cradle.

2. Rotate the tablet into the cradle, overcoming the resistance until the Release Button returns to the "Latched" position. The slam latch will come over the front of the tablet. There will also be an audible confirmation as the latch system springs downward.

3. Optional - With the dock in the "Latched" position, turn the lock to the "LOCKED" position (CCW).

Insert Bottom First



Rotate Top



OPERATION - UNDOCKING

1. Turn the lock to the "UNLOCKED" position (CW).

2. With your hand on the top of the tablet, push up on the blue Release Button until the computer is free to move forward. While the dock is "Un-Latched", rotate the tablet forward to clear the Slam Latch. This can be done right or left handed.

3. Pull the tablet up to remove it from the cradle.

