PRODUCT GUIDE

RIVIAN R1S AND R1T PASSENGER WINDOW GUARDS

PRODUCT NUMBER(S)

7160-2241

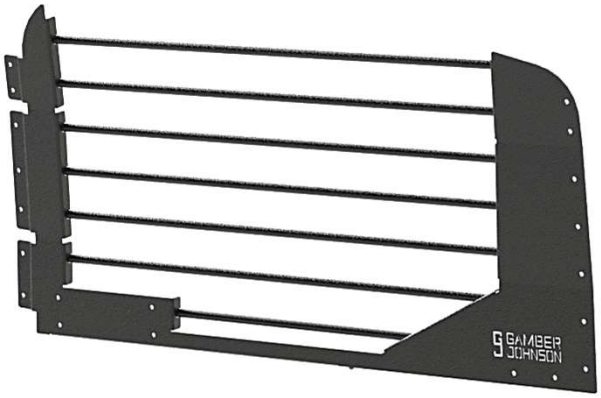

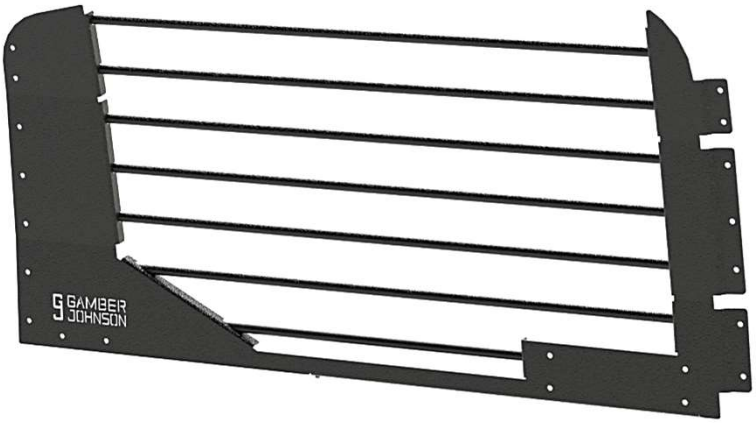

For more language options and/or questions, please contact a Gamber-Johnson representative at **+1 800.756.9198**

Since 1954, we have been dedicated to providing **RUGGED**, **RELIABLE**, and **RESPONSIVE** solutions that empower professionals in the field.

Thank you for choosing Gamber-Johnson.

Welcome to your new **Gamber-Johnson Passenger Window Guard**—engineered for **mission-critical reliability** in the toughest environments. At Gamber-Johnson, we understand that your technology is more than a tool; it's a lifeline. That's why our rugged mounting solutions and docking stations are designed to integrate seamlessly with your equipment, ensuring **secure connections** and **reliable performance** wherever your job takes you.

This guide will walk you through the safe and effective installation of your **Window Guard.**

Inside, you'll find:

- Inventory list of what's included
- Step-by-step installation instructions
- Images for easy reference
- Essential safety information to ensure proper setup and operation

Our commitment to **quality**, **durability**, and **rugged reliability** is built into every product we make.

Important: Before you begin, please carefully review all safety instructions provided in this guide. For vehicle applications, we recommend professional installation by qualified technicians with experience in automotive electrical systems and aftermarket vehicle equipment installation.

For additional product information, installation tips, or support, please contact your Gamber-Johnson representative at **+1 800.756.9198** or visit **www.gamberjohnson.com**.

PAGE	SECTION
1	Cover Page
2	Introduction
3	Table Of Contents
4	Components Included
5	Safety Information
6	Installation
7	Warranty

COMPONENTS INCLUDED

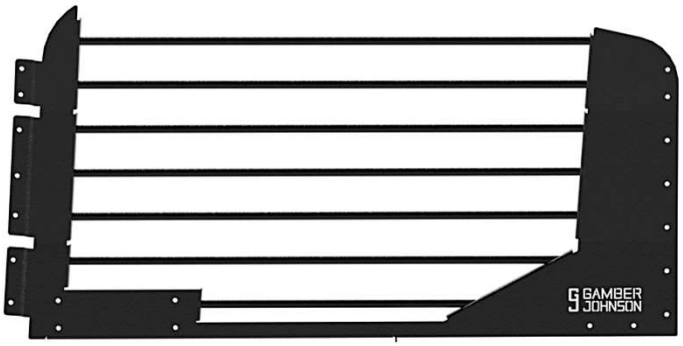

QTY	P/N	DESCRIPTION
1	22752	Window Guard – Passenger Side

QTY	P/N	DESCRIPTION
1	22751	Window Guard - Drive Side

Qty:32

QTY	P/N	DESCRIPTION
1	7120-1331	Hardware Bag - #10-16 X .75” Self Drilling screws, Qty 32

⚠WARNING

You must read and follow all of these installation instructions. Failure to follow the installation instructions may result in serious bodily injury or death

DO NOT install or use this assembly in the area in which the airbag on the vehicle may be deployed. The installer and user of this assembly are responsible for installing and using this assembly outside the area in which an airbag may be deployed. (See Product Mounting Disclaimer Below)

If the installation of the equipment requires that the equipment (or any additional equipment that is added to the installation) be placed in front of an airbag, the airbag should be deactivated. In order to secure permission for deactivating the airbag you must contact the National Highway Traffic Safety Administration at 1-800-424-9393 to gain permission to do so. If you have any questions or need assistance, call Gamber-Johnson at **+1 800-456-6868**.

High speed vehicle turns may cause parts of the assembly to swivel, interfering with the driver or other equipment.

Keep these installation instructions with the product and readily available in the vehicle for future reference of other users of the product.

Additional copies of the installation instruction can be obtained from Gamber-Johnson. If you need assistance or have any questions, go to www.gamberjohnson.com or call Gamber-Johnson at **+1 800-456-6868**.

DO NOT remove any warning labels from the product under any circumstances.

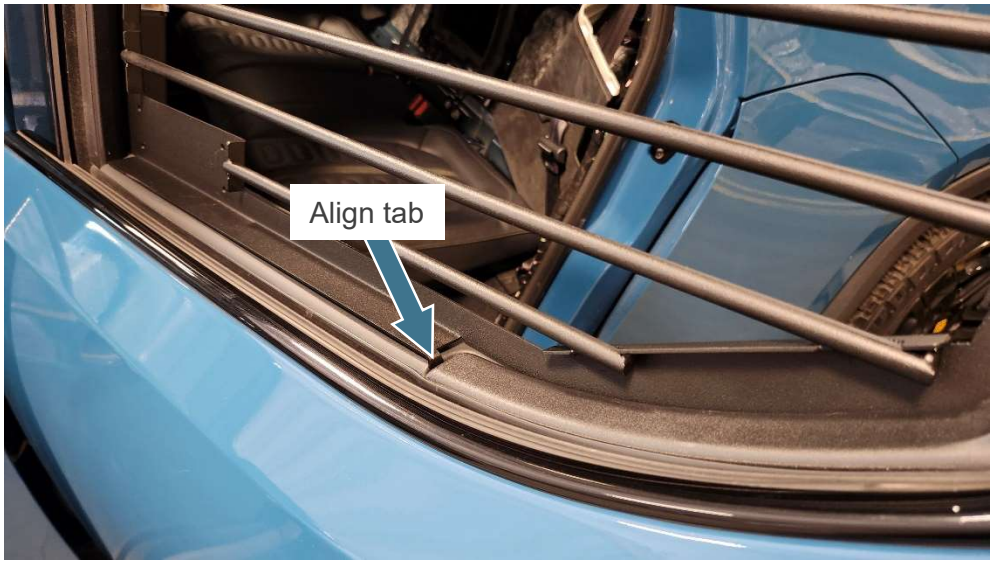

Figure 1

(Driver side)

1. Working on the inside of the door and with the window rolled down, place the driver side window guard into the window opening aligning the tab on the window guard to the seam of the window trim. (Figure 1)

Figure 2

(Driver side)

2. While holding the window guard tightly against the window frame, secure the window guard to the window frame by installing 16 self drilling screws from hardware bag 7160-1331. Use caution as to not strip or break screws due to over tightening, install screws partially with a powered drill/driver then hand tighten until snug. (Figure 2)
3. Repeat steps 1 and 2 on the passenger side.

SCAN HERE TO VIEW WARRANTY INFORMTION

www.gamberjohnson.com/product-services/warranty-information

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2025 Gamber-Johnson, LLC

QUESTIONS OR NEED MORE INFORMATION? NO PROBLEM, WE'RE HERE TO HELP!

Call us at: **+1 800.756.9198**
Email us at: **sales@gamberjohnson.com**

Visit **www.gamberjohnson.com** to see our complete line of solutions
and hang with us on social media at **@gamberjohnson**