
# INSTALLATION INSTRUCTIONS

| Product | Revision | Form |
|---|---|---|
| 7160-2195-XX | A | INST-1294 |
| CARGO WINDOW GUARDS - DODGE DURANGO 2021+ | | **Printing Spec:** PS-001 |

| BOM Table | | | | |
|---|---|---|---|---|
| ITEM | 7160-2195-02 | 7160-2195-03 | PartNo | DESCRIPTION |
| 1 | 1 | 1 | 22491 | BRACKET - PS HATCH BOTTOM |
| 2 | 1 | 1 | 22493 | BRACKET - DS HATCH BOTTOM |
| 3 | 1 | 1 | 22494 | BRACKET - PS HATCH |
| 4 | 1 | 1 | 22508 | BRACKET - DS HATCH |
| 5 | 1 | 1 | 22512 | BRACKET - PS SIDE WINDOW BOT |
| 6 | 1 | 1 | 22513 | BRACKET - PS SIDE WINDOW TOP |
| 7 | 1 | 1 | 22514 | BRACKET - DS SIDE WINDOW BOT |
| 8 | 1 | 1 | 22515 | BRACKET - DS SIDE WINDOW TOP |
| 9 | 1 | 1 | 22516 | HATCH FILLER |
| 10 | 1 | 1 | 7120-1293 | HARDWARE BAG |
| 17 | 1 | - | 30135 | DIAMOND GUARD - PS |
| 18 | 1 | - | 30134 | DIAMOND GUARD - HATCH |
| 19 | 1 | - | 30136 | DIAMOND GUARD - DS |
| 20 | - | 1 | 30107 | HEX GUARD - HATCH |
| 21 | - | 1 | 30111 | HEX GUARD - DS |
| 22 | - | 1 | 30112 | HEX GUARD - PS |

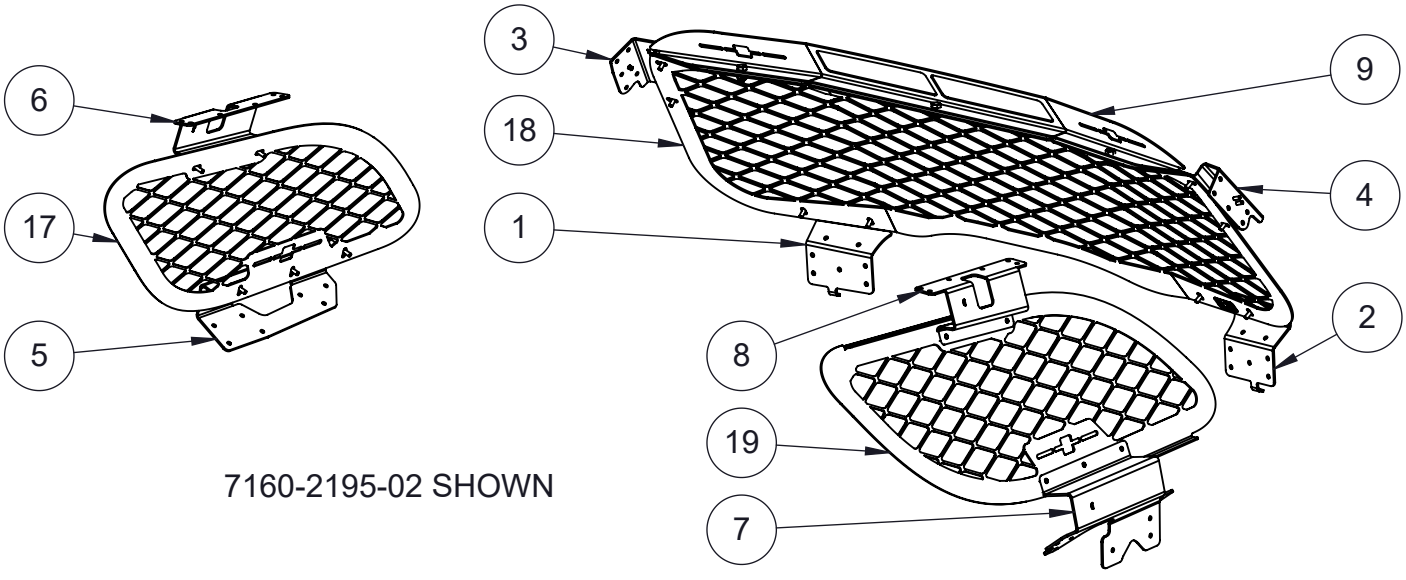


7160-2195-02 SHOWN

Product Mounting Disclaimer
Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brake lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.


© Copyright 2025 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

HATCH GUARD INSTALLATION:


1. Remove all interior vehicle trim from the hatch to gain access to the bracket areas shown in the following steps.

2. Remove the wire harness clips as outlined below and insert the flange of each PS and DS BOTTOM HATCH BRACKETS (items 5 and 7) into the rectangular hole to correctly position each bracket. Fasten to the vehicle on both the driver side and passenger side using the self drilling screws. Each bracket is labeled "P" and "D" accordingly.

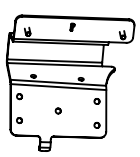


PS


**Insert bracket flange into wire harness holes**

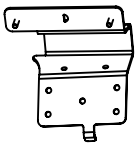

DS

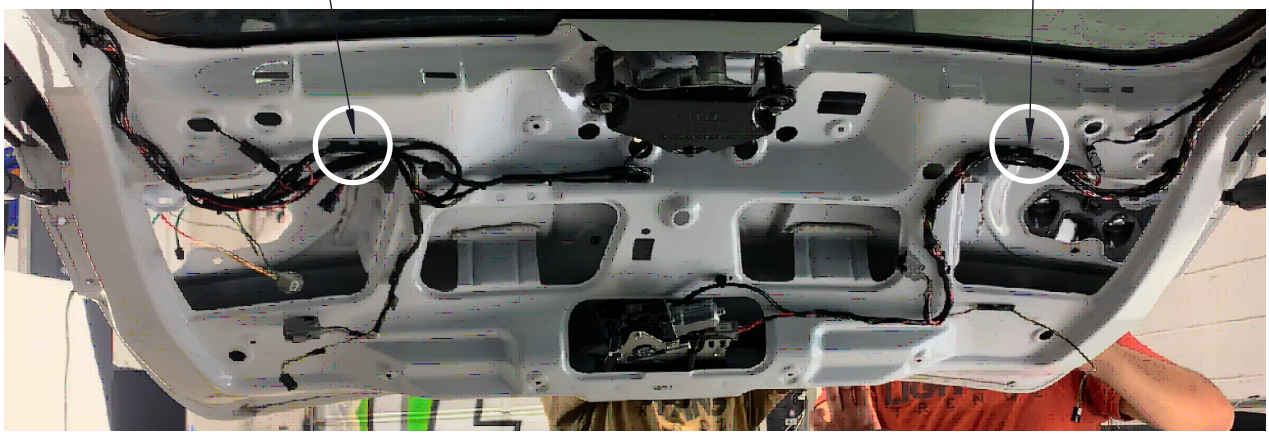


3. Remove the plastic clips holding the wire harness to the hatch on both the driver and passenger side. There are two standoffs on each PS and DS SIDE HATCH BRACKETS (items 6 and 8) that will set the alignment using the OEM rectangular hole. Fasten the brackets to the hatch using the self drilling screws.

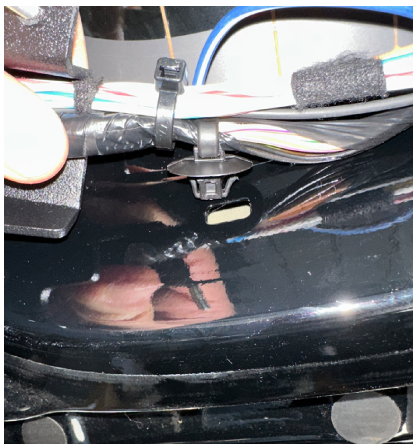


PS Clip to remove




DS clip location - PS location matches on other side

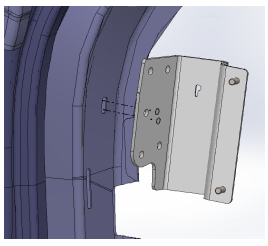

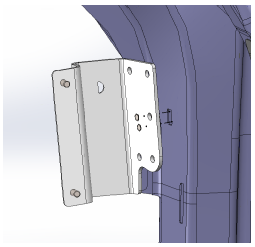

HATCH GUARD INSTALLATION:

4. Mount the hatch gaurd to the installed brackets using the #10 nylok nuts and #10 washers.

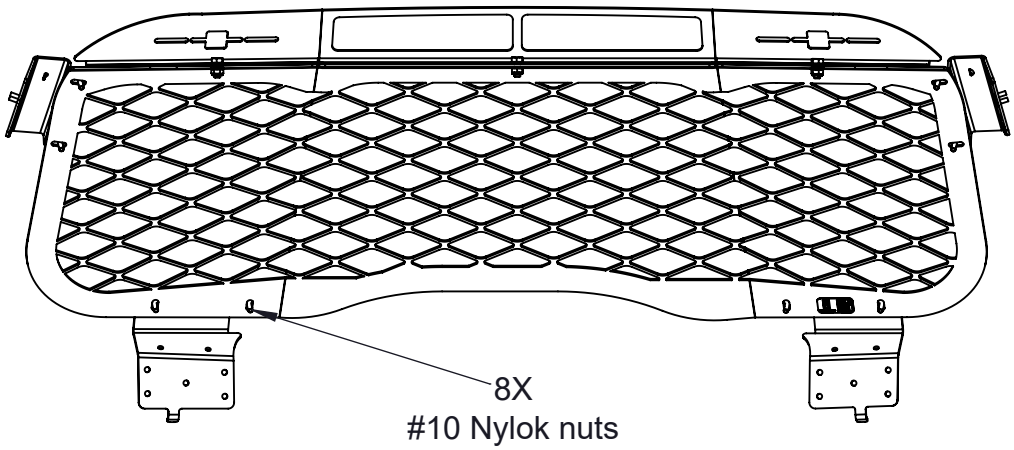



5. Hold the OEM trim against the brackets, mark the edges needing to be cut and cut into the trim 3/4" from the edge. Re-install the hatch trim.

PASSENGER SIDE GUARD INSTALLATION:

6. With the upper and lower side trim removed, align and center the PS LOWER BRACKET to the vehicle contour and fasten using the self drilling screws.

Front of vehicle

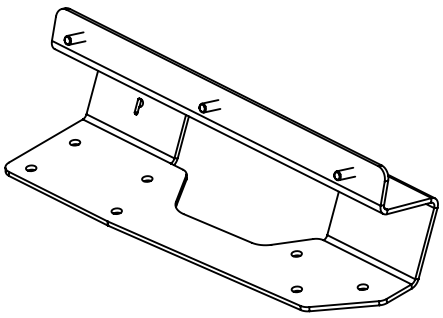




Rear of vehicle

PS


7. Align the slot in the PS UPPER BRACKET to the rectangular slot in the vehicle and fasten using the self drilling screws.

Front of vehicle

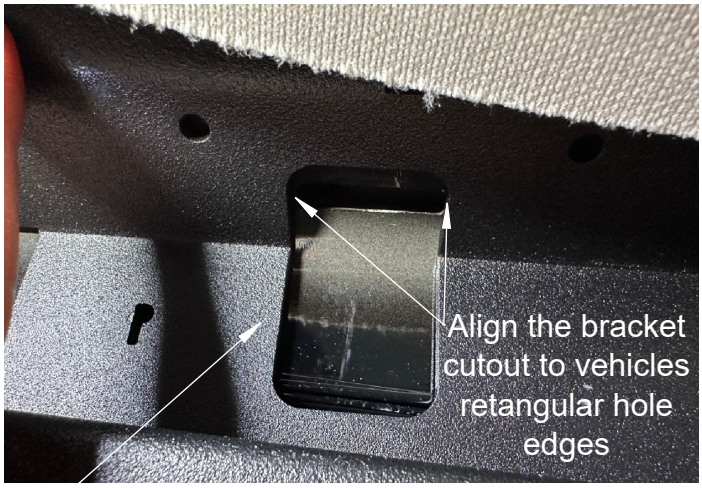



Rear of vehicle

PS

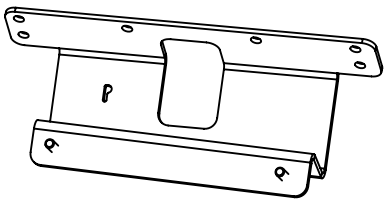

PASSENGER SIDE GUARD INSTALLATION:

8. Cut the lower OEM trim panel in the locations shown below:

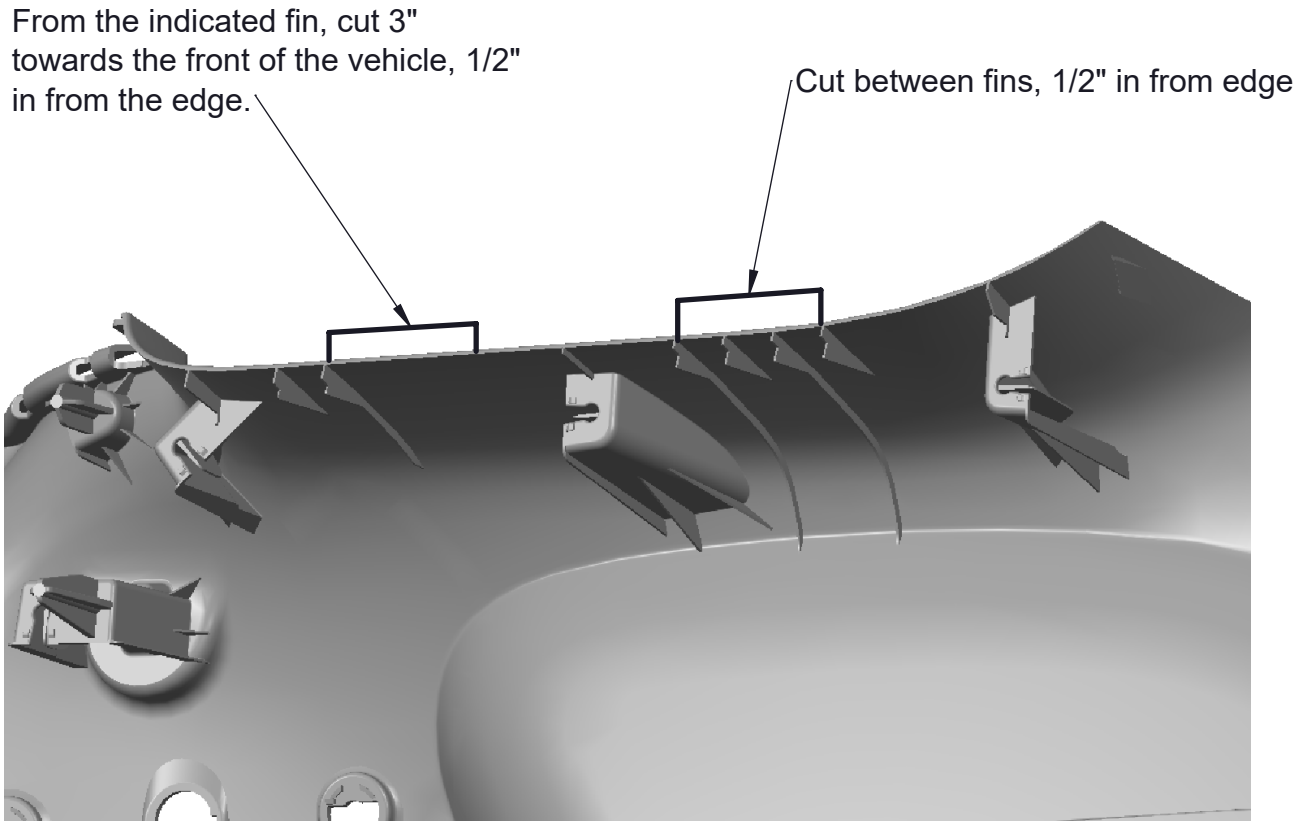


9. Place the upper trim panel against the top bracket. Mark the edges to trim and cut the OEM trim panel 3/4" deep to clear the bracket. Reinstall all trim and fasten the side window guard using the #10 nylock nuts and #10 washers.



DRIVER SIDE GUARD INSTALLATION:


10. With the OEM trim removed, align the lower bracket to the vehicle contours and fasten using the self drilling screws.

Front of vehicle

Rear of vehicle




DS

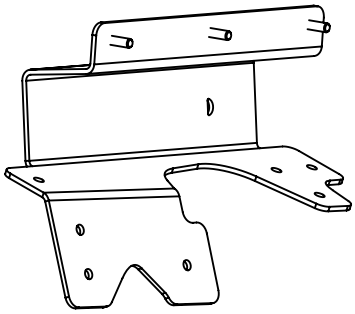

11. With the same tecnique as the passenger side, align the cutout in the top bracket to the rectangular slot in the vehicle and fasten using the self drilling screws.

Rear of vehicle

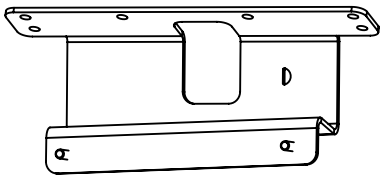


Front of vehicle

DS

DRIVER SIDE GUARD INSTALLATION:

12. Cut the lower trim panel 1/2" deep in the locations shown below:

Cut 1/2" deep between the marked fins.

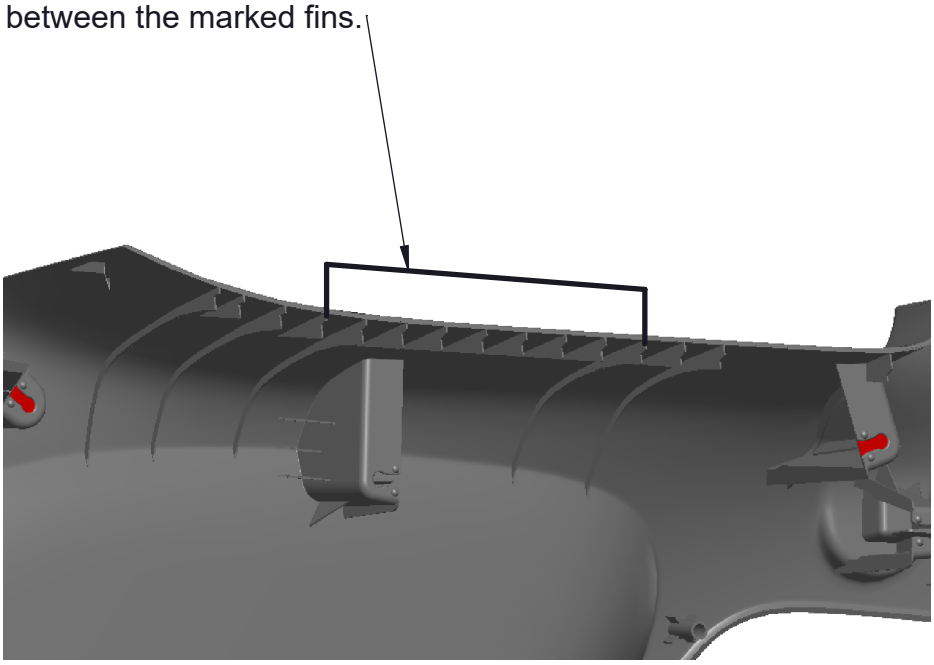

13. Place the upper trim panel against the top bracket. Mark the edges to trim and cut the OEM trim panel 3/4" deep to clear the bracket. Reinstall all trim and fasten the side window guard using the #10 nylock nuts and #10 washers.

**Installation is complete**