




# INSTALLATION INSTRUCTIONS

<b><u>Product</u></b> Zirkona Mounting System	<b><u>Revision</u></b> REV. E	<b><u>Form</u></b> INST-494 Printing Spec:PS-001
--	----------------------------------	--

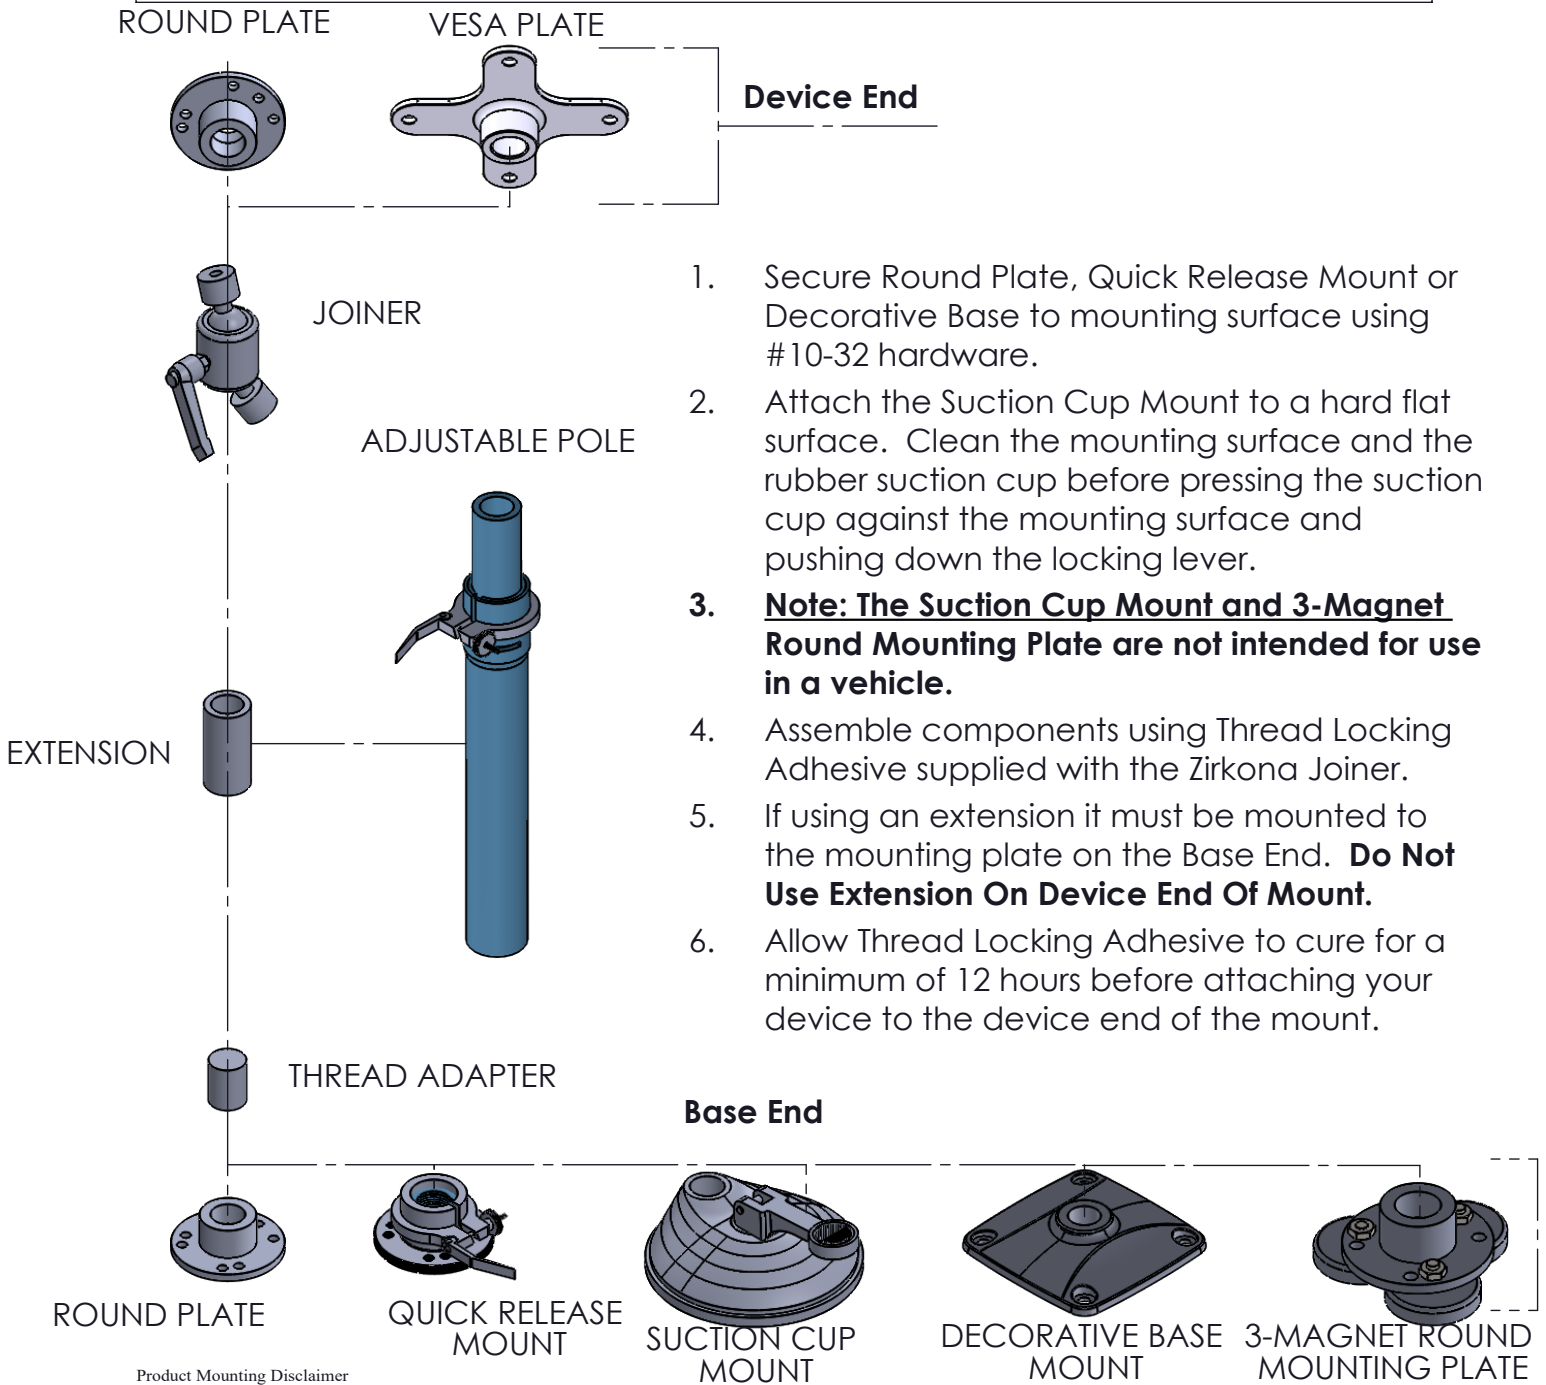

1. Secure Round Plate, Quick Release Mount or Decorative Base to mounting surface using #10-32 hardware.
2. Attach the Suction Cup Mount to a hard flat surface. Clean the mounting surface and the rubber suction cup before pressing the suction cup against the mounting surface and pushing down the locking lever.
3. **Note: The Suction Cup Mount and 3-Magnet Round Mounting Plate are not intended for use in a vehicle.**
4. Assemble components using Thread Locking Adhesive supplied with the Zirkona Joiner.
5. If using an extension it must be mounted to the mounting plate on the Base End. **Do Not Use Extension On Device End Of Mount.**
6. Allow Thread Locking Adhesive to cure for a minimum of 12 hours before attaching your device to the device end of the mount.

**Product Mounting Disclaimer**  
 Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufacturers specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.  
 © Copyright 2017 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868