



INSTALLATION INSTRUCTIONS


Product
7110-1229

Revision
Rev.A

Form
INST-880


Chair Rail Mount - Zirkona 208000

Printing Spec:PS-001

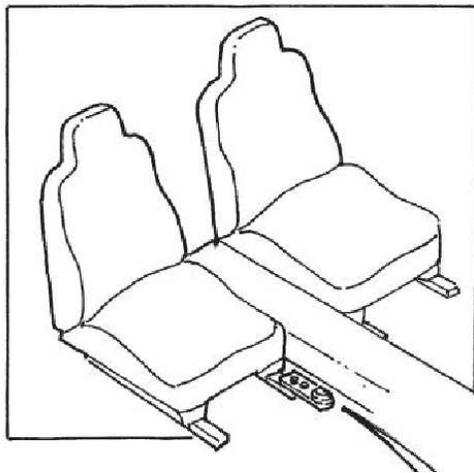

Installation of 7110-1229 Chair Rail Mount to the vehicle chair rail provides an M20 threaded mounting point for Zirkona products.

Note -
The Chair Rail Mount will not work with all vehicle chair rail designs.
Also, power seat mechanisms and airbag devices may block mounting surfaces.

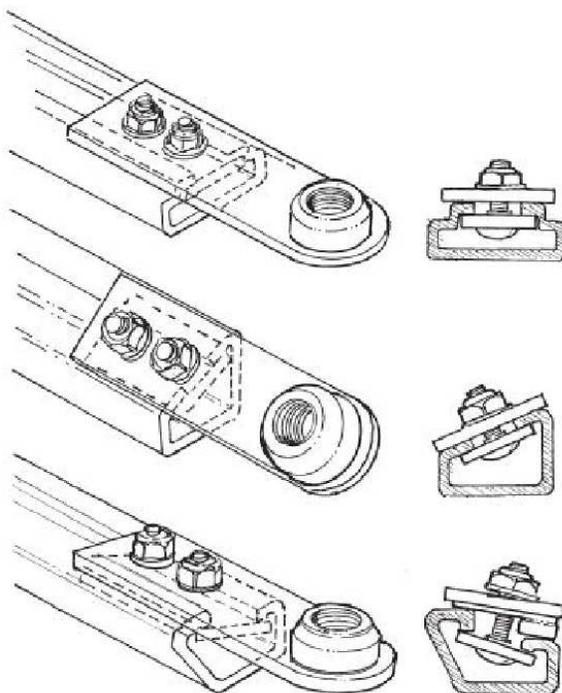

The Base Plate is placed on the top side of the chair rail and the anchor plate is placed inside. Carriage or hex head bolts are used to secure the mount.

Anchor plates of various widths are supplied to fit inside different style chair rails.



An offset plate is supplied to level the mounting surface on designs with uneven surfaces.

Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2018 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

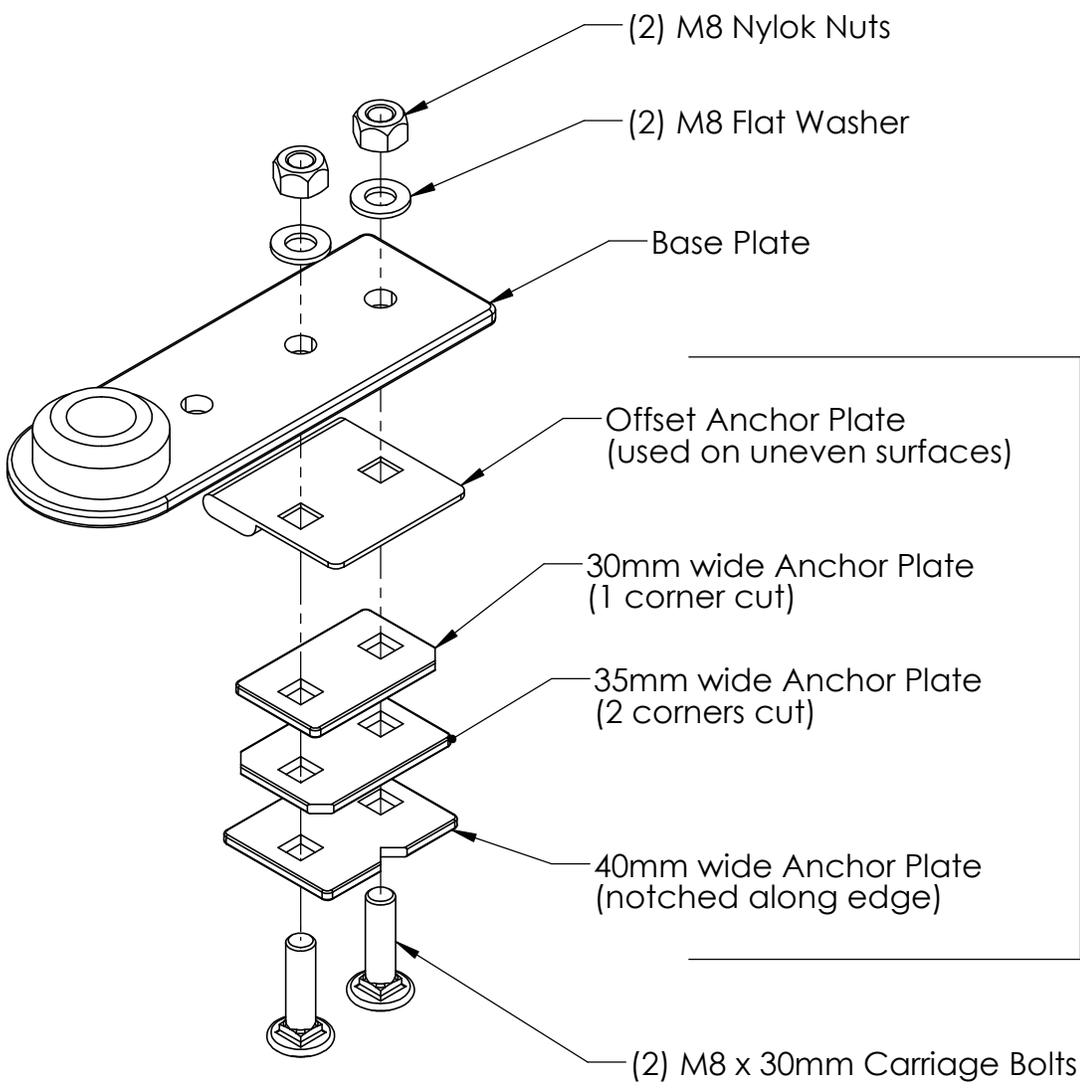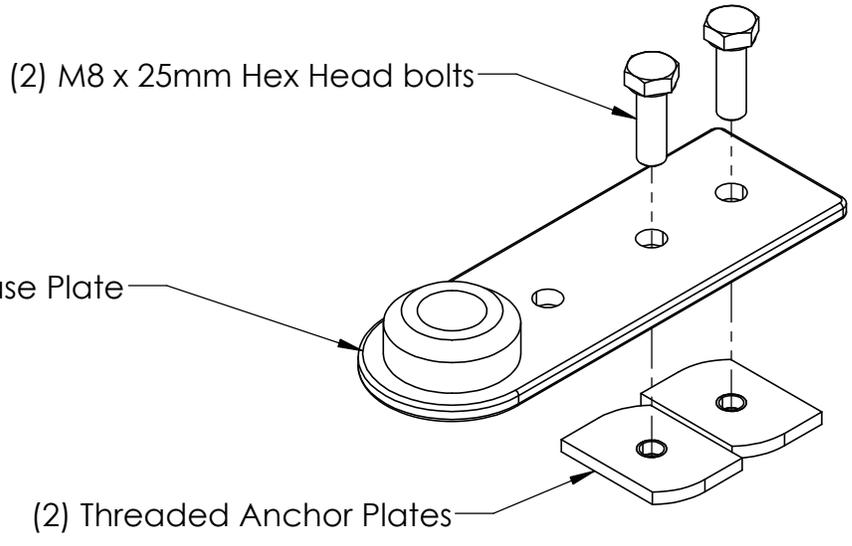

Use appropriate size for application