



INSTALLATION INSTRUCTIONS

Product
7160-1157

Revision
Rev.A

Form
INST-844

TABLET KEYBOARD MOUNT - FIXED POSITION


Printing Spec:PS-001

This instruction sheet is for the Gamber-Johnson fixed position tablet keyboard mount only. It is designed to be used with Gamber-Johnson tablet docking stations and cradles. For instructions on how to mount other Gamber-Johnson equipment, you will need to see their specific instruction sheets.

Attaching the keyboard mount

1. The tablet keyboard mount attaches between the docking station or cradle and the motion attachment using the hardware provided with the dock or cradle.

2. The keyboard attaches using the #8-32unc x 3/8" long machine screws provided in hardware bag 7120-0714.

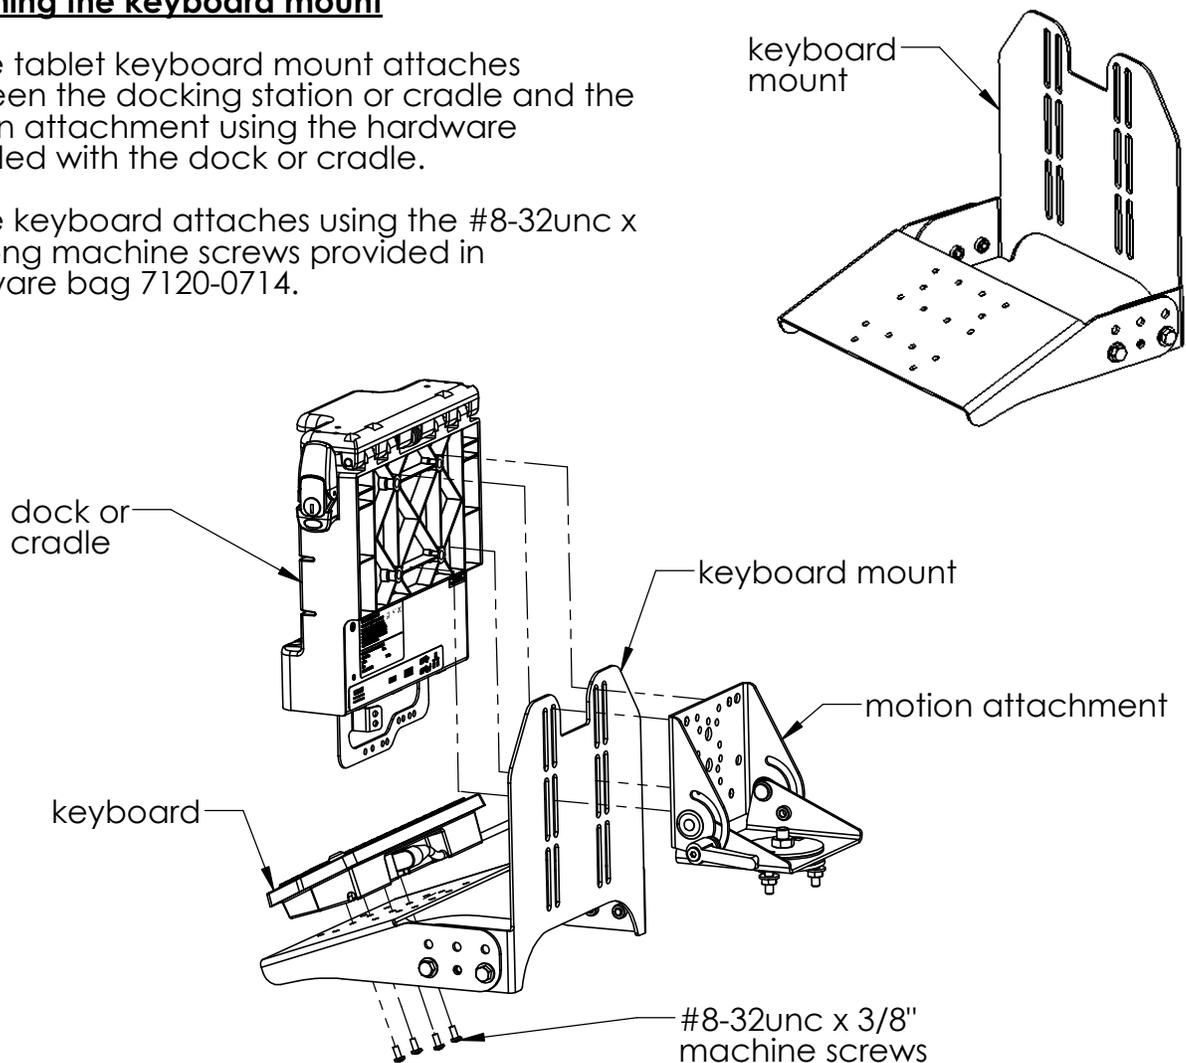


Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2018 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

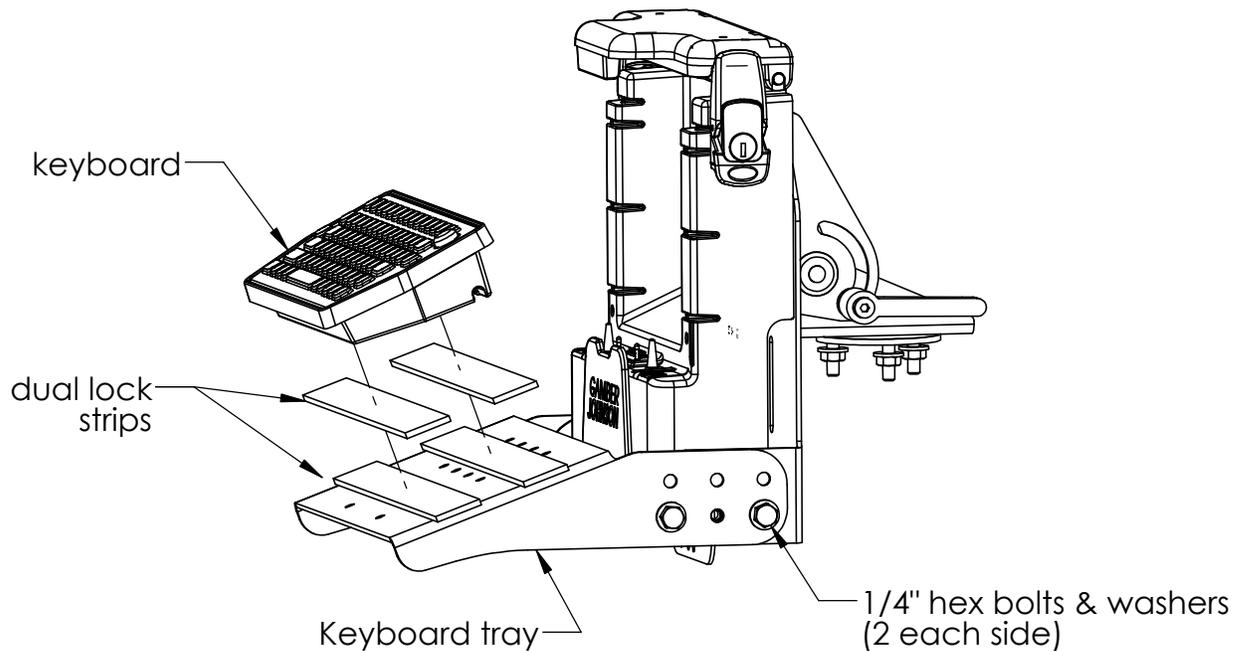

Adjusting the keyboard tray position

1. The keyboard tray is shipped in the position shown above. The tray can be repositioned to the lower position or it can be repositioned forward or backward 1" by removing the 1/4" mounting hardware on each side of the tray and relocating the tray to the desired position. Make sure to reuse both 1/4" hex bolts on each side of the tray to secure it in place when done.

Attaching the keyboard to the tray with dual lock

The keyboard can be attached to the tray using (4) 8" to 10" long pieces of Dual lock faster supplied in hardware bag 7120-0714.

Cut the Dual lock strip into (4) 8" to 10" pieces. Lock the 4 pieces of dual lock fastener together to make 2 attached strips with the release liners toward the outside.

Remove the release liner from one side of each attached strip and attach to the bottom of the keyboard.

With the 2 assembled strips attached to the bottom side of the keyboard, remove the 2 remaining release liners. Position the keyboard above the keyboard tray in the desired position and press the keyboard down firmly to adhere the strips to the keyboard tray.

To remove the keyboard from the tray, hold both sides of the keyboard and pull away from the tray. The dual lock strips will separate from each other.

To reattach the keyboard to the tray, realign the dual lock strips and press downward on the keyboard to snap the dual lock strips back together again.