



INSTALLATION INSTRUCTIONS

Product
7160-1357

Revision
Rev.A

Form
INST-890

HONEYWELL VMU VERTICAL KEYBOARD MOUNT

Printing Spec:PS-001



This instruction sheet is for the Honeywell VMU Vertical Keyboard Mount only. For specifics on the Honeywell VMU please contact Honeywell.

Attaching the Mount

1. The vertical keyboard mount attaches between the Honeywell VMU and the motion attachment using the (6) #10-32 x .75" long machine screws, flat washers, and lock washers provided in hardware bag 7120-0902.

2. The keyboard attaches using the 8-32 x 3/8" machine screws provided in hardware bag 7120-0714.

3. The bottom mounting location on each side of the keyboard tray is a slot which provides adjustment for the tray.

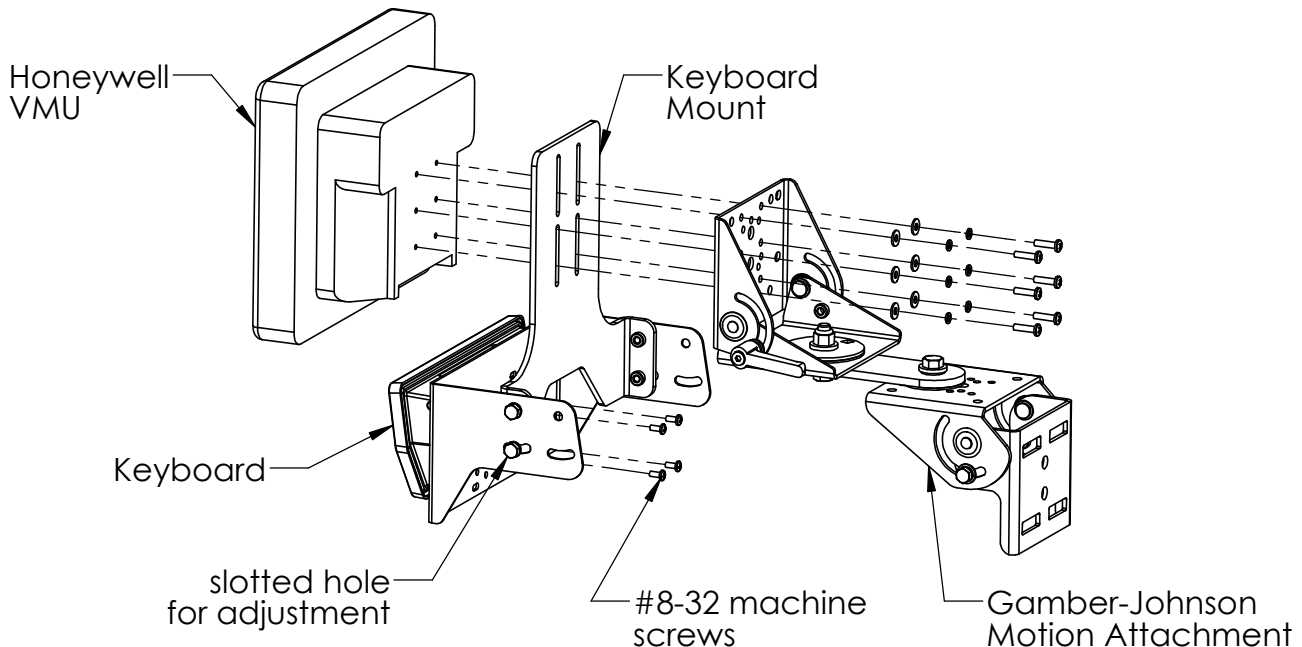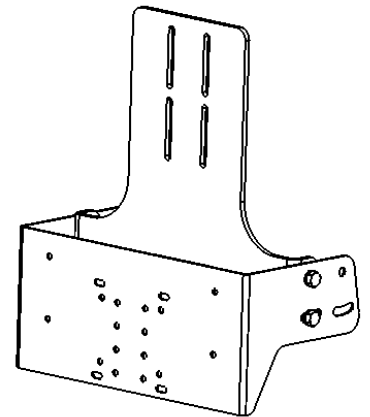


Product Mounting Disclaimer

Gamber-Johnson is not liable under any theory of contract or tort law for any loss, damage, personal injury, special, incidental or consequential damages for personal injury or other damage of any nature arising directly or indirectly as a result of the improper installation or use of its products in vehicle or any other application. In order to safely install and use Gamber-Johnson products full consideration of vehicle occupants, vehicle systems (i.e., the location of fuel lines, brakes lines, electrical, drive train or other systems), air-bags and other safety equipment is required. Gamber-Johnson specifically disclaims any responsibility for the improper use or installation of its products not consistent with the original vehicle manufactures specifications and recommendations, Gamber-Johnson product instruction sheets, or workmanship standards as endorsed through the Gamber-Johnson Certified Installer Program.

© Copyright 2018 Gamber-Johnson, LLC

If you need assistance or have questions, call Gamber-Johnson at 1-800-456-6868

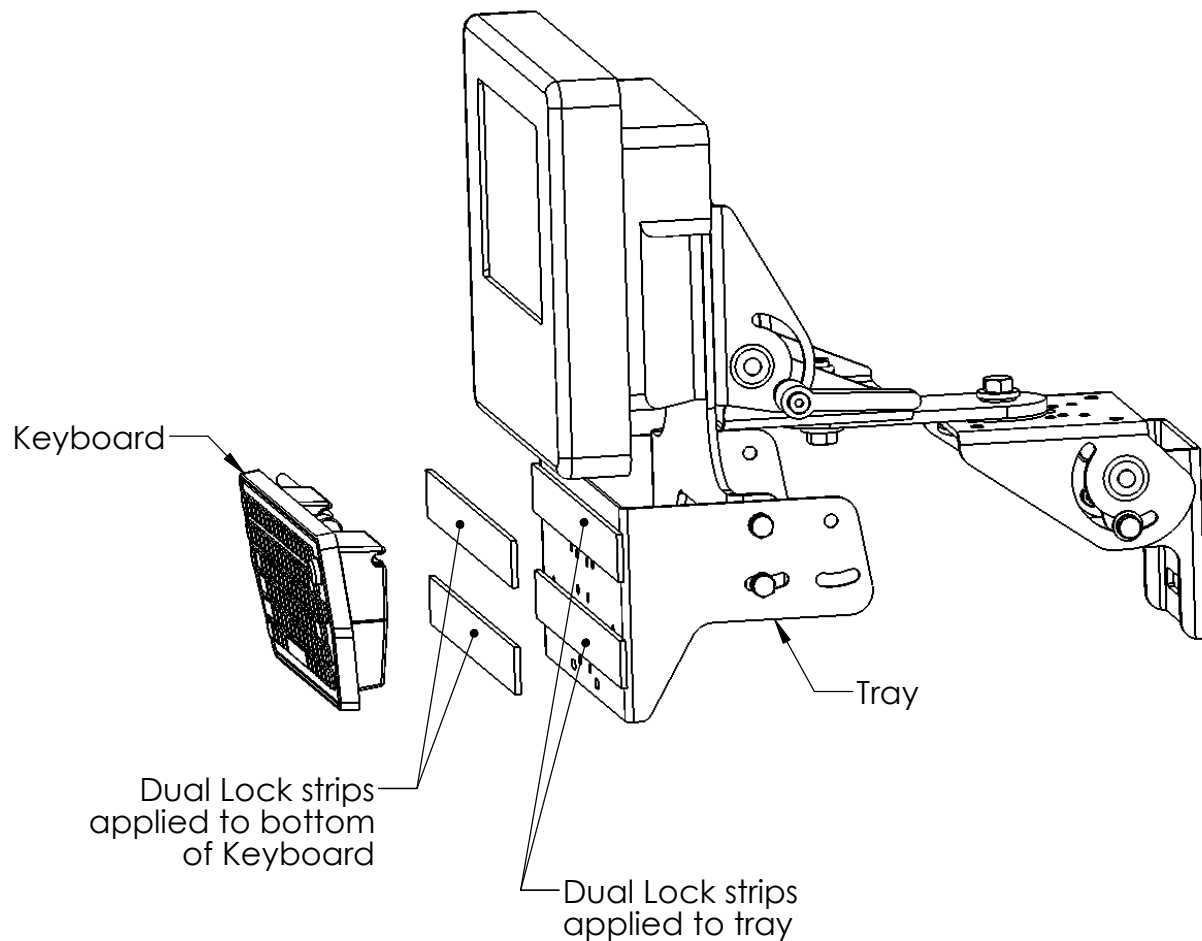

Attaching Keyboard to Tray with Dual Lock Fastener

The Keyboard can be attached to the tray using (4) 8" long pieces of Dual Lock fastener supplied in hardware bag 7120-0714.

Lock 2 pieces of the Dual Lock fastener together with the release liners toward the outside.

Remove the release liner from one side and attach the Dual Lock strips to the tray surface.

Remove the remaining release liner from the Dual Lock strips and place the Keyboard on the tray surface. The bottom surface of the Keyboard will adhere to the Dual Lock strips.

To remove the Keyboard from the tray, hold the sides of the Keyboard and pull away from the tray. The Dual Lock strips will separate.

To attach the Keyboard to the tray, press the Keyboard onto the tray, aligning the Dual Lock strips. The Dual Lock strips will mesh holding the Keyboard in place.